


# SV160E2

Networked Integrated Servo Indexer/Driver/Motor

with Integral 2-Port Ethernet Switch and Device Level Ring functionality for EtherNet/IP Media Redundancy Protocol for PROFINET

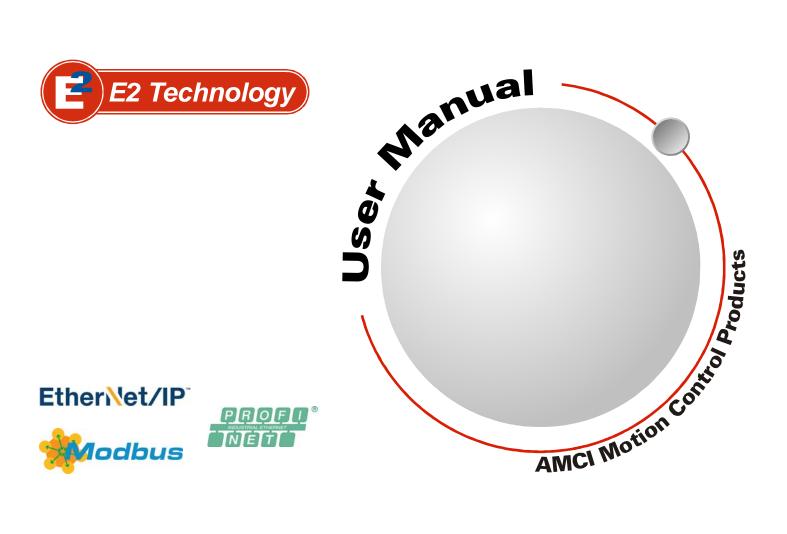

Manual #: 940-0S252

# **GENERAL INFORMATION**

# Important User Information

The products and application data described in this manual are useful in a wide variety of different applications. Therefore, the user and others responsible for applying these products described herein are responsible for determining the acceptability for each application. While efforts have been made to provide accurate information within this manual, AMCI assumes no responsibility for the application or the completeness of the information contained herein.

UNDER NO CIRCUMSTANCES WILL ADVANCED MICRO CONTROLS, INC. BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES OR LOSSES, INCLUDING INDIRECT OR CONSEQUENTIAL DAM-AGES OR LOSSES, ARISING FROM THE USE OF ANY INFORMATION CONTAINED WITHIN THIS MANUAL, OR THE USE OF ANY PRODUCTS OR SERVICES REFERENCED HEREIN.

No patent liability is assumed by AMCI, with respect to use of information, circuits, equipment, or software described in this manual.

The information contained within this manual is subject to change without notice.

This manual is copyright 2020 by Advanced Micro Controls Inc. You may reproduce this manual, in whole or in part, for your personal use, provided that this copyright notice is included. You may distribute copies of this complete manual in electronic format provided that they are unaltered from the version posted by Advanced Micro Controls Inc. on our official website: *www.amci.com*. You may incorporate portions of this documents in other literature for your own personal use provided that you include the notice "Portions of this document copyright 2020 by Advanced Micro Controls Inc." You may not alter the contents of this document or charge a fee for reproducing or distributing it.

# Standard Warranty

ADVANCED MICRO CONTROLS, INC. warrants that all equipment manufactured by it will be free from defects, under normal use, in materials and workmanship for a period of [18] months. Within this warranty period, AMCI shall, at its option, repair or replace, free of charge, any equipment covered by this warranty which is returned, shipping charges prepaid, within eighteen months from date of invoice, and which upon examination proves to be defective in material or workmanship and not caused by accident, misuse, neglect, alteration, improper installation or improper testing.

The provisions of the "STANDARD WARRANTY" are the sole obligations of AMCI and excludes all other warranties expressed or implied. In no event shall AMCI be liable for incidental or consequential damages or for delay in performance of this warranty.

# **Returns Policy**

All equipment being returned to AMCI for repair or replacement, regardless of warranty status, must have a Return Merchandise Authorization number issued by AMCI. Call (860) 585-1254 with the model number and serial number (if applicable) along with a description of the problem during regular business hours, Monday through Friday, 8AM - 5PM Eastern. An "RMA" number will be issued. Equipment must be shipped to AMCI with transportation charges prepaid. Title and risk of loss or damage remains with the customer until shipment is received by AMCI.

# 24 Hour Technical Support Number

24 Hour technical support is available on this product. If you have internet access, start at www.amci.com. Product documentation and FAQ's are available on the site that answer most common questions.

If you require additional technical support, call (860) 585-1254. Your call will be answered by the factory during regular business hours, Monday through Friday, 8AM - 5PM Eastern. During non-business hours an automated system will ask you to enter the telephone number you can be reached at. Please remember to include your area code. The system will page an engineer on call. Please have your product model number and a description of the problem ready before you call.

# Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

# TABLE OF CONTENTS

# **General Information**

| Important User Information       | 2 |
|----------------------------------|---|
| Standard Warranty                | 2 |
| Returns Policy                   | 2 |
| 24 Hour Technical Support Number | 2 |
| WEEE Statement                   | 2 |

# About this Manual

| Audience                         | 7 |
|----------------------------------|---|
| Applicable Units                 | 7 |
| Navigating this Manual           | 7 |
| Manual Conventions               | 8 |
| Trademarks and Other Legal Stuff | 8 |
| Revision Record                  | 8 |
| Revision History 8               |   |
| Manual Layout                    | 9 |
|                                  |   |

# Reference: SV160E2 Specifications

| E2 Product Family                 | 11 |
|-----------------------------------|----|
| The SV160E2 Family                | 11 |
| General Functionality 11          |    |
| Safe Torque Off Functionality 12  |    |
| Network Data Format 12            |    |
| Specifications                    | 13 |
| Indexer Functionality             | 14 |
| Driver Functionality              | 14 |
| Servo Control                     | 15 |
| Absolute Encoder                  | 16 |
| Stall Detection                   | 16 |
| Available Discrete Inputs         | 16 |
| Home Input 16                     |    |
| CW Limit Switch or                |    |
| CCW Limit Switch 16               |    |
| Start Indexed Move Input 17       |    |
| Emergency Stop Input 17           |    |
| Stop Jog or                       |    |
| Registration Move Input 17        |    |
| Capture Encoder Position Input 17 |    |
| General Purpose Input 17          |    |
| Enabling the Driver               | 17 |
| STO Option                        | 18 |
| Basic Functionality               |    |
| Additional Functionality 18       |    |
| •                                 |    |

| Reference:   | SV160E2 Specifi<br>(continued) | cations |
|--------------|--------------------------------|---------|
| Status LED's |                                | 19      |
| Drive Statu  | is LED                         | 19      |

| Module Status (MS) LED 19          |    |
|------------------------------------|----|
| Network Status (NS) LED 20         |    |
| SV160E2 Connectors                 | 20 |
| Ethernet Connectors 20             |    |
| Digital Inputs Connector 21        |    |
| Power Connector 21                 |    |
| Torque and Power Curves            | 22 |
| Power Supply Sizing                | 22 |
| Regeneration (Back EMF) Effects    | 23 |
| Compatible Connectors and Cordsets | 24 |
| Ethernet Connector 24              |    |
| Input Connector 24                 |    |
| Power Connector 24                 |    |
| Ethernet Cordset 24                |    |
| Input Cordset 24                   |    |
| Power Cordset 24                   |    |

# **Reference: Motion Control**

| Definitions                    |    | 25 |
|--------------------------------|----|----|
| Units of Measure               | 25 |    |
| Profile Position               | 25 |    |
| Encoder Position               | 25 |    |
| Continuous Torque              | 25 |    |
| Peak Torque                    | 25 |    |
| Home Position                  | 26 |    |
| Count Direction                | 26 |    |
| Target Position                | 26 |    |
| Relative Coordinates           |    |    |
| Absolute Coordinates           |    |    |
| Immediate Stop Deceleration    | 26 |    |
| A Simple Move                  |    | 27 |
| Controlled and Immediate Stops |    | 28 |
| Host Control                   |    |    |
| Hardware Control               | 28 |    |
| Basic Move Types               |    | 29 |
| Relative Move                  |    |    |
| Controlled Stops 29            |    |    |
| Immediate Stops 29             |    |    |
| Absolute Move                  | 30 |    |
| Controlled Stops 30            |    |    |
| Immediate Stops 30             |    |    |
|                                |    |    |

#### Reference: Motion Control (continued)

| CW/CCW Jog Move               | 31 |    |
|-------------------------------|----|----|
| Controlled Stops 31           |    |    |
| Immediate Stops 31            |    |    |
| CW/CCW Registration Move      | 32 |    |
| Controlled Stops 33           |    |    |
| Immediate Stops 33            |    |    |
| Indexed Moves                 |    | 34 |
| Axis Follower Moves           |    | 35 |
| Controlling Moves In Progress |    | 36 |
| Jog Moves                     | 36 |    |
| Registration Moves            | 36 |    |
| Absolute and Relative Moves   | 36 |    |
| Disabling the Motor           |    | 36 |
| 0                             |    |    |

# Reference: Move Profile Calculations

| Constant Acceleration Equations |    | 37 |
|---------------------------------|----|----|
| Variable Definitions            | 37 |    |
| Total Time Equations            | 39 |    |

# Reference: Homing an SV160E2

# Reference: Configuration Mode Data Format

| Modes of Operation             | 45 |
|--------------------------------|----|
| Configuration Mode 45          |    |
| Command Mode 45                |    |
| Power Up Behavior              | 45 |
| Data Format                    | 45 |
| Command Mode Data Formats      | 46 |
| Output Data Format             | 47 |
| Configuration Word 0 Format 47 |    |
|                                |    |

# Reference: Configuration Mode Data Format (cont'd)

| Read Data Blocks 4             | 19 |
|--------------------------------|----|
| Extended Drive Status 49       |    |
| Remaining Read Data Blocks 49  |    |
| Write Data Blocks 5            | 50 |
| Block 1: Data Config Block 50  |    |
| Block 2: I/O Config Block 50   |    |
| Block 3: Motor Config Block 51 |    |
| Block 5: Velocity Control      |    |
| Loop Config Block 52           |    |
| Block 6: Position Control      |    |
| Loop Config Block 53           |    |
| Block 15: Save Config To       |    |
| Flash Block 53                 |    |
| Input Data Format 5            | 54 |
| Config Mode Input Word 0 54    |    |
| Config Mode Input Word 1 55    |    |
| Invalid Configurations 5       | 55 |

## Reference: Command Mode Data Format

| Command Bits Must Transition     |    | 57 |
|----------------------------------|----|----|
| Data Format                      |    | 57 |
| Output Data Format               |    | 57 |
| Command Word 0                   |    |    |
| Command Word 1                   |    | 59 |
| Command Blocks                   |    | 60 |
| Absolute Move                    | 60 |    |
| Relative Move                    | 61 |    |
| Hold Move                        | 61 |    |
| Resume Move                      | 62 |    |
| Immediate Stop                   | 62 |    |
| Find Home CW                     | 63 |    |
| Find Home CCW                    | 63 |    |
| Jog CW                           | 64 |    |
| Registration Move CW             | 64 |    |
| Axis Follower Moves              | 65 |    |
| Jog CCW                          | 66 |    |
| Registration Move CCW            |    |    |
| Preset Position                  |    |    |
| Reset Errors                     | 67 |    |
| Enable Driver or                 |    |    |
| Preset On Enable                 | 68 |    |
| Disable Driver                   | 68 |    |
| Input Data Format                |    | 69 |
| Status Word 0 Format             |    |    |
| Status Word 1 Format             | 70 |    |
| Notes on Clearing a Driver Fault |    | 72 |

4

# Reference: Braking Resistor Calculations

| Overvoltage Threshold Parameter  | 73 |
|----------------------------------|----|
| Required Information             | 73 |
| Determine System Inertia         | 74 |
| Determine the Deceleration Rate  | 74 |
| Determine Peak Braking Power     | 74 |
| Determine Minimum Braking        |    |
| Resistor Value                   | 75 |
| Determine Maximum Braking        |    |
| Resistor Value                   | 75 |
| Determine Average Power Rating   | 75 |
| Determining the Braking Resistor | 76 |

# Reference: Configuring Network Interfaces

| Firewall Settings                     | 77 |
|---------------------------------------|----|
| Disable All Unused Network Interfaces | 77 |
| Configure Your Network Interface      | 77 |
| Test Your Network Interface           | 78 |

# Task 1: Installing the SV160E2

| Location                         | 79 |
|----------------------------------|----|
| Safe Handling Guidelines         |    |
| Prevent Electrostatic Damage 79  |    |
| Prevent Debris From              |    |
| Entering the Unit                |    |
| Remove Power Before Servicing 79 |    |
| Operating Temperature Guidelines | 79 |
| Mounting                         |    |
| SV160E2 Outline Drawing          |    |
| SV160E2 Mounting 80              |    |
| Connecting the Load 80           |    |
| Power Connector                  | 81 |
| Compatible Connectors            |    |
| and Cordsets                     |    |
| Power Wiring                     | 82 |
| Input Connector                  |    |
| Compatible Connectors            |    |
| and Cordsets                     |    |
| CNFL-5M Color Code and           |    |
| Shield Wire 83                   |    |
| Cable Shields                    |    |
| DC Input Wiring                  | 84 |
| Sinking Sensors Require a        |    |
| Pull Up Resistor 84              |    |
| STO Input Wiring                 | 85 |
| Extending the STO Cabling        |    |
|                                  |    |

# Task 1: Installing the SV160E2 (continued)

| Network Connectors      | 86 |
|-------------------------|----|
| Compatible Connectors   |    |
| and Cordsets 86         |    |
| TIA/EIA-568 Color Codes |    |
| EtherNet/IP Connections | 87 |
| Non-DLR Applications 87 |    |
| DLR Applications 87     |    |
| PROFINET Connections    | 87 |
| Non-MRP Applications 87 |    |
| MRP Applications 87     |    |
| Modbus TCP Connections  | 87 |

## Task 2: Set the IP Address and Protocol

| Determine the Best Method for |    |
|-------------------------------|----|
| Setting the IP Address 89     |    |
| Use Factory Default Settings  | 89 |
| Use the Embedded Web Server   | 90 |
| Use the AMCI NET              |    |
| Configurator Utility          | 93 |

# Task 3: Implicit Communications with an EDS

| Obtain the EDS file             | . 97  |
|---------------------------------|-------|
| Install the EDS file            | . 97  |
| Start the EDS Hardware          |       |
| Installation Tool 97            |       |
| Install the EDS File            |       |
| Host System Configuration       | . 100 |
| Add the SV160E2 to Your Project | . 100 |
| SV160E2 Properties Setup        | . 101 |
| General Tab 10                  | 1     |
| Connection Tab 10               | 1     |
| Configuration Tab 10            | 1     |
| Buffering the I/O Data          | . 102 |
|                                 |       |

# Task 4: EtherNet/IP Explicit Messaging

| 103 |
|-----|
| 103 |
|     |
| 104 |
| 107 |
|     |

# Task 5: Modbus TCP Configuration

| Enable Modbus TCP Protocol      | 109 |
|---------------------------------|-----|
| Modbus Addressing               | 109 |
| Modbus Table Mapping            | 109 |
| Host Addressing                 | 109 |
| AMCI Modbus TCP Memory Layout   | 110 |
| Supported Number of Connections | 110 |
| Supported Modbus Functions      | 111 |
| Supported Modbus Exceptions     | 111 |
|                                 |     |

# Task 6: PROFINET Network Configuration

| Basic Steps                     | 113 |
|---------------------------------|-----|
| Download the GSDML files        | 113 |
| GSDML File Installation         | 113 |
| Configure the PROFINET Network  | 113 |
| Add the SV160E2 to the          |     |
| PROFINET Network                | 114 |
| Configure the SV160E2           | 116 |
| Set the I/O Configuration       | 117 |
| Set the SV160E2 Device Name     | 118 |
| Verify and Download the         |     |
| New Configuration               | 118 |
| MRP Installations               | 119 |
| Configure the SV160E2 as an MRC | 119 |
|                                 |     |

# **ABOUT THIS MANUAL**

Read this chapter to learn how to navigate through this manual and familiarize yourself with the conventions used in it. The last section of this chapter highlights the manual's remaining chapters and their target audience.

#### Audience

This manual explains the installation and operation of AMCI's SV160E2 Integrated Servo Motors. It is written for the engineer responsible for incorporating these products into a design as well as the engineer or technician responsible for their actual installation.

#### Applicable Units

This manual applies to all of the units in the SV160E2 family. Each unit contains a two port Ethernet switch, which simplifies network wiring. When the EtherNet/IP protocol is used, the unit can act as a node in a Device Level Ring (DLR). When PROFINET is enabled, the unit supports the Media Redundancy Protocol (MRP) and can be incorporated in PROFINET installations that use a redundant ring topology.

#### Navigating this Manual

This manual is designed to be used in both printed and on-line forms. Its on-line form is a PDF document, which requires Adobe Acrobat Reader version 7.0+ to open it. You are allowed to select and copy sections for use in other documents and add notes and annotations. If you decide to print out this manual, all sections contain an even number of pages which allows you to easily print out a single chapter on a duplex (two-sided) printer.

# **Manual Conventions**

Three icons are used to highlight important information in the manual:



**NOTES** highlight important concepts, decisions you must make, or the implications of those decisions.



**CAUTIONS** tell you when equipment may be damaged if the procedure is not followed properly.



**WARNINGS** tell you when people may be hurt or equipment may be damaged if the procedure is not followed properly.

The following table shows the text formatting conventions:

| Format   | Description   |
|--|---|
| Normal Font  | Font used throughout this manual.   |
| Emphasis Font  | Font used for parameter names and the first time a new term is introduced.  |
| <i>Cross Reference</i> When viewing the PDF version of the manual, clicking on a blue cross rence jumps you to referenced section of the manual. |   |
| HTML Reference   | When viewing the PDF version of the manual, clicking on a red cross reference<br>opens your default web browser to the referenced section of the AMCI website<br>if you have Internet access. |

Manual Conventions

# Trademarks and Other Legal Stuff

The AMCI logo is a trademark of Advanced Micro Controls Inc. "CIP" is a trademark of Open DeviceNet Vendor Association, Inc. "EtherNet/IP" is a trademark of ControlNet International, Ltd. under license by Open DeviceNet Vendor Association, Inc. "PROFINET" is a registered trademark of PROFIBUS & PROFINET International (PI). "Adobe" and "Acrobat" are registered trademarks of Adobe Systems Incorporated.

All other trademarks contained herein are the property of their respective holders.

# **Revision Record**

This manual, 940-0S252 is the third release of this manual. It was released on April 13<sup>th</sup>, 2020. It improves information throughout the manual on the Safe Torque Off (STO) option and adds clarifications to several areas.

# **Revision History**

940-0S251: September 10th, 2019 - Improved Virtual Axis Move information. Updates torque curve drawing

940-0S250: August 23rd, 2019 - Initial Release

# Manual Layout

You will most likely read this manual for one of two reasons:

- If you are curious about the Integrated Servo Motor products from AMCI, this manual contains the information you need to determine if these products are the right products for your application. The first chapter, *SV160E2 Specifications* contains all of the information you will need to fully specify the right product for your application.
- ➤ If you need to install and use an Integrated Servo Motor product from AMCI, then the rest of the manual is written for you. To simplify installation and configuration, the rest of the manual is broken down into *references* and *tasks*. Using an Integrated Servo Motor product requires you to complete multiple tasks, and the manual is broken down into sections that explain how to complete each one.

| Section Title                          | Page<br>Num. | Section Description   |  |
|--|--------------|---|--|
| SV160E2 Specifications                 | 11           | Complete specifications for the SV160E2 products.   |  |
| Motion Control                         | 25           | Reference information on how the SV160E2 can be used to control motion in your application.   |  |
| Move Profile Calculations              | 37           | Reference information on calculating detailed move profiles.  |  |
| Homing an SV160E2                      | 41           | Reference information on how to set the home position of the SV160E2.   |  |
| Configuration Mode Data<br>Format      | 45           | Reference information on the format of the network data to and from the SV160E2 that is used to configure it.   |  |
| Command Mode Data<br>Format            | 57           | Reference information on the format of the network data to and from the SV160E2 that is used to command it.   |  |
| Braking Resistor<br>Calculations       | 73           | Calculations required to size the braking resistor for proper power dissipation during deceleration.  |  |
| Configuring Network<br>Interfaces      | 77           | Basic instructions for the task of configuring network interfaces on your computer or laptop.   |  |
| Installing the SV160E2                 | 79           | Task instructions covering how to install an SV160E2 on a machine. Includes information on mounting, grounding, and wiring specific to the units.     |  |
| Set the IP Address and<br>Protocol     | 89           | Task instructions that covers the options for setting the IP address and protocol on an SV160E2.  |  |
| Implicit Communications<br>with an EDS | 97           | Task instructions that cover how to add an SV160E2 to an EtherNet/IP host that supports the use of EDS files.   |  |
| EtherNet/IP Explicit<br>Messaging      | 103          | Task instructions for adding message instructions to you host con-<br>troller program that write data to the SV160E2 through message<br>instructions. |  |
| Modbus TCP<br>Configuration            | 109          | Task instructions for communicating with an SV160E2 using the Modbus TCP protocol.  |  |
| PROFINET Network<br>Configuration      | 113          | Task instructions that covers how to add an SV160E2 to a PROFINET network.  |  |

Manual Sections

Notes

# SV160E2 SPECIFICATIONS

This manual is designed to get you up and running quickly with an SV160E2 product from AMCI. As such, it assumes you have some basic knowledge of servo systems.

# E2 Product Family

The SV160E2 is an addition to the family of E2 products from AMCI. E2 products incorporate *E2 Technology*, a common Ethernet network interface that allows them to operate over the EtherNet/IP, Modbus TCP, and PROFINET industrial networks. The E2 product family encompasses stepper and servo integrated motion control products, resolver based encoder products, and specialty I/O products for sensor interface and motion control.

# The SV160E2 Family

The SV160E2 units combine a servo indexer, driver, and 160W BLDC motor that can be attached to any popular industrial network. Each SV160E2 attaches to your Ethernet network and communicates using the EtherNet/IP, Modbus TCP, or PROFINET protocols.

E2 Technology products are simple and intuitive, allowing easy transition between multiple common industrial Ethernet protocols without the need to physically switch parts. An advanced web server integrated into all AMCI E2 Technology devices facilitates simple device configuration and troubleshooting via a web-browser. Furthermore, an impressive array of advanced features for each supported protocol has been incorporated into the devices to meet many unique application requirements.

Each unit has two Ethernet ports which are internally connected through an onboard, two port, 10/100 Mbps ethernet switch. These ports allow you to wire your network in a "daisy-chain" fashion, which may lower network wiring costs and complexities.

The two ports also allows units to function as members of a redundant Device Level Ring (DLR) network when using the EtherNet/IP protocol or as clients in a Media Redundancy Protocol (MRP) network when using PROFINET.

In DLR environments, the SV160E2 units act as Beacon-



Figure R1.1 SV160E2

Based Ring Nodes. All units can process beacon packets at the default rate of every 400 microseconds. Beaconbased nodes can respond faster to network changes than nodes that only process Announce packets.

#### **General Functionality**

Each SV160E2 has four integrated parts:

- An indexer that accepts commands over an Ethernet connection using the EtherNet/IP, PROFINET, or Modbus TCP protocol
- ➤ A 6.0 A continuous, 13.0 A peak BLDC driver that accepts 48 to 80 Vdc as its input power source
- ► A high torque 160 watt BLDC motor
- > An absolute multi-turn encoder.

The availability of the EtherNet/IP, PROFINET, and Modbus TCP protocols makes the SV160E2 unit easy to integrate into a wide variety of control systems.

# The SV160E2 Family (continued)

### General Functionality (continued)

This combination of host and driver gives you several advantages:

- Sophisticated I/O processing can be performed in the host (PLC or other controller) before sending commands to the SV160E2 unit
- All motion logic is programmed in the host, eliminating the need to learn a separate motion control language
- > The integral two port Ethernet switch simplifies network cabling
- > The DLR interface eliminates single point failures in EtherNet/IP environments
- > The MRP interface eliminates single point failures in PROFINET environments.

An SV160E2 is powered by a nominal 48 to 80 Vdc power source, and can accept surge voltages of up to 100 Vdc without damage. The continuous motor torque is fully programmable from 0.1 Nm to 0.50 Nm with the Continuous Torque Limit parameter. The peak motor torque, which is used during times of acceleration and deceleration, is fully programmable up to 1.3Nm with the Peak Torque Limit parameter. These programmable torque settings makes the SV160E2 suitable to a wide range of applications.

The SV160E2 units have four 12 to 24 Vdc inputs that are used by the indexer. Configuration data from the host sets the function of these inputs. Each input can be individually configured as a:

- ► CW or CCW Limit Switch
- ► Home Limit Switch
- > Capture Position Input (Will capture the encoder position.)
- Stop Manual or Registration Move Input
- ► Start Indexed Move
- Emergency Stop Input
- General Purpose Input

#### Safe Torque Off Functionality

The SV160E2 can be ordered with STO (Safe Torque Off) functionality under the part number SV160E2-STO. Safe Torque Off allows you to remove power from the motor without removing power from the drive. This reduces implementation costs and restart times.

The STO functionality requires two dedicated inputs. The SV160E2-STO uses inputs 3 and 4. When an SV160E2-STO is ordered, additional circuitry is added to these inputs for the STO functionality. This additional circuitry makes the inputs unsuitable for other functions such as end of travel limit switches or home inputs.

STO is a hardware only solution and is not dependant on software running within the SV160E2-STO. Both of the STO inputs must be powered by a 12 to 24 Vdc source to enable the drive. When power is removed from either of these inputs, power to the motor is directly removed from the power stage through the additional circuitry. The machine will come to an uncontrolled coasting stop if the motor is in motion when the STO feature triggers. Power remains removed from the motor until the inputs are reactivated, the fault status bits are cleared, and the driver is re-enabled.

#### **Network Data Format**

In order to support any host that communicates with the EtherNet/IP, PROFINET, or Modbus TCP protocols, the format of the 32 bit integer values read from and written to the SV160E2 is programmable. The parameter, called *Data Endian*, controls the order of the two 16-bit words in the 32 bit value. Least significant word first is called *little endian*, most significant word first is called *big endian*. Rockwell Automation controllers use *lit-tle endian* format, while the default PROFINET and Modbus format is *big endian*.

# **Specifications**

#### Network Interface

10/100baseT. Two switched ports. Supports EtherNet/IP, PROFINET, and Modbus TCP. EtherNet/IP-DLR and PROFINET-MRP extensions also supported.

#### **Physical Dimensions**

See page 80

#### Weight

3.4 lbs. (1.5 kg.)

Weight is without mating connectors

#### Maximum Shaft Loads

Radial: 45 lbs. (200N) at end of shaft Axial: 13.5 lbs. (60N)

#### Maximum Operating Temperature

203°F /95°C (Note that this is the operating temperature of the electronics, not maximum ambient temperature. An over-temperature fault occurs at this point and current is removed from the motor.)

#### **Over Temperature Fault**

Over-temperature faults are reported in the Network Input Data.

#### Inputs

Electrical Characteristics: Single ended sinking.

Accept 10.6 to 27 Vdc without the need for an external current limiting resistor. Optoisolated, 1500 Vac/dc isolation.

#### Motor Inertia

 $48 \ge 10^{-6} \text{ kg} \cdot \text{m}^2$ 

#### **Torque Constant**

0.124 Nm/A. Torque generated by the motor can be estimated by multiplying the Torque Constant by the motor current reported in the Network Input Data.

#### **Continuous Torque**

Programmable from 0.10 to 0.50 Nm in 0.01 Nm steps.

#### Peak Torque

Programmable to 1.30 Nm in 0.01 Nm steps.

#### Motor Counts per Turn

16,384

#### Internal Encoder

Absolute 31 bit multi-turn encoder 16,384 counts per turn.

#### **Environmental Specifications**

Input Power ...... 48 to 80 Vdc, surge to 100 Vdc without damage to unit.

Ambient Operating Temperature

..... -40° to 122°F (-40° to 50°C)

#### Storage Temperature

..... -40° to 185°F (-40° to 85°C)

Humidity ...... 0 to 95%, non-condensing

IP Rating ..... IP64

#### Status LED's

See *Status LED's* section starting on page 19.

#### Connectors and Cables

All mating connectors are available separately under the following AMCI part numbers.

| Connector | AMCI Part # | Wire        | Strip Length | Connection Type |
|-----------|-------------|-------------|--------------|-----------------|
| Ethernet  | MS-28       | 18 AWG max. | 0.197 inches | Screw Terminals |
| I/O       | MS-37       | 20 AWG max. | 0.197 inches | Screw Terminals |
| Power     | MS-41       | 16 AWG max. | 0.197 inches | Screw Terminals |

| Cable       | AMCI Part # | Length  |
|-------------|-------------|---------|
| Ethernet    | CNER-5M     | 5 meter |
| Digital I/O | CNFL-5M     | 5 meter |
| Power       | CNGL-5M     | 5 meter |

# Indexer Functionality

The table below lists the functionality offered by the indexer built into the AMCI SV160E2 units.

| Feature                       | Description  |
|-------------------------------|--|
| Multiple Network<br>Protocols | The SV160E2 units can be configured to communicate with EtherNet/IP, PROFINET, or Modbus TCP protocols. This allows easy setup and communication with a wide range of host controllers.                            |
| EtherNet/IP-DLR               | The SV160E2 units act as Beacon-Based Nodes in Device Level Ring environ-<br>ments. This functionality results in the fastest response to changes in the redun-<br>dant network.                                   |
| PROFINET-MRP                  | SV160E2 units have Media Redundancy Protocol support, which adds redundancy to the PROFINET protocol.  |
| Programmable<br>Inputs        | Each of the inputs can be programmed as a Home Limit, Over Travel Limit, Cap-<br>ture Input, Manual Jog Stop, Start Indexed Move, E-Stop, or a General Purpose<br>Input.   |
| Programmable<br>Parameters    | PID variables, running speed, acceleration, and deceleration, are fully program-<br>mable.   |
| Homing                        | Allows you to set the machine to a known position. An SV160E2 homes to a discrete input.   |
| Jog Move                      | Allows you to drive the motor in either direction as long as the command is active.  |
| Axis Follower Move            | Allows you to treat the SV160E2 as a motion axis by constantly updating position and velocity data to the unit. Linear and Circular axes are both supported.   |
| Relative Move                 | Allows you to drive the motor a specific number of counts in either direction from the current location.   |
| Absolute Move                 | Allows you to drive the motor from one known location to another known location.   |
| Registration Move             | Allows you to jog the motor in either direction based on a command from your host controller. When a controlled stop is issued, the move will continue for a programmable number of steps before coming to a stop. |
| Indexed Move                  | Allows you to program a move that is held in memory. The move is run when one of the programmable inputs makes a transition.   |
| Hold Move                     | Allows you to suspend a move, and optionally restart it, without losing your position value.   |
| Resume Move                   | Allows you to restart a previously held move operation.  |
| Immediate Stop                | Allows you to immediately stop all motion if an error condition is detected by your host controller.   |

Table R1.1 Indexer Functionality

# **Driver Functionality**

This table summarizes the features of the servo motor driver portion of the SV160E2 units.

| Feature                               | Benefits   |
|---------------------------------------|--|
| Continuous and Peak<br>Torque Control | Continuous and peak torque control give an SV160E2 the ability to drive the motor at its rated steady state power limit as well as increase its torque output during times of acceleration and deceleration. |
| Over Temperature<br>Detection         | An SV160E2 sets a warning bit in the network data when the internal temperature of the unit approaches its safe operating threshold.   |
| Over Temperature<br>Protection        | Protects your SV160E2 from damage by removing power from the motor if the internal temperature of the driver exceeds the safe operating threshold of $203^{\circ}$ F/95°C.                                   |

Table R1.2 Driver Functionality

# Servo Control

The SV160E2 uses three control loops to control the position and velocity of the motor. The inner most loop is the current loop. The optimum PID values for the current loop are solely dependant on motor characteristics. These values are set at the factory during the final test of the SV160E2 and are stored in the device's flash memory. In order to simplify programming, these current loop values are not available to the end user since they are optimized at the factory.

The next inner loop is the velocity loop. This is implemented as a PI loop that includes a programmable low pass filter on the velocity feedback. This filter is used to reduce high frequency stability issues that may exist in some applications.

The outer most loop is the position loop. This is a full PID loop that generates the velocity setpoint for the velocity PI loop.

The position setpoint,  $SP_{POS}$  in the figure below, is generated and updated by the SV160E2 through the motion profile generator. The velocity feed forward value,  $FF_{VEL}$  in the figure below, is also generated by the motion profile generator.

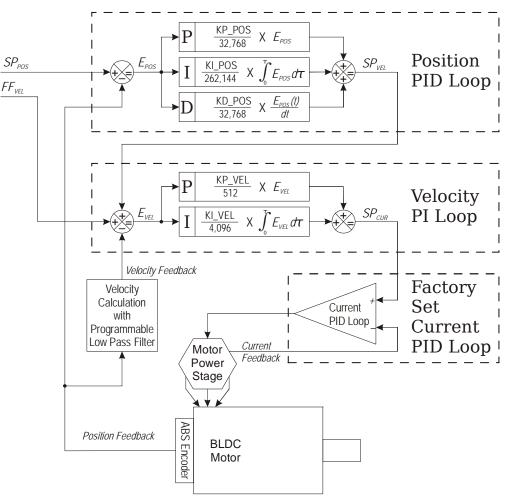


Figure R1.2 Cascade PID Loop Control

The P, I, and D variables of the position loop, as well as the P and I variables of the velocity loop, can be directly programmed as part of the configuration data. This gives the end user the ability to fine tune parameters in applications that require the highest performance levels. This can also complicate system startup. To simplify the startup procedure as much as possible, starting values for these variables are published later in this manual for load inertia values from one to twenty times the motor inertia value.

# Absolute Encoder

The absolute encoder has a fixed resolution of 16,384 counts per turn. The absolute encoder is a multi-turn device that encodes a total of  $2^{17}$  turns, yielding a full thirty-one bits of position resolution. The Profile and Encoder positions are reported back with a range of  $\pm 2^{30}$  counts, and range from -1,073,741,824 to 1,073,741,823

Like many intelligent absolute encoders on the market today, the absolute encoder in the SV160E2 uses a battery backed circuit to count zero crossings while power is removed from the rest of the device. The battery life is 10 years in the absence of power. The circuit will accurately track position as long as the shaft acceleration is limited to 160,000 degrees/sec<sup>2</sup>,(444.4 rev/sec<sup>2</sup>), or less.

# Stall Detection

A motor stall is detected when the Encoder Position differs from the calculated Profile Position by a programmed amount. This amount is programmed with the Maximum Position Error Limit parameter. Stalls can occur because the programmed Continuous Torque Limit or Peak Torque Limit values are set too low, the move's programmed acceleration or deceleration values are set too high, or the loads' torque requirements have increased due to a mechanical change in the system.

When a stall is detected:

- 1) The Stall\_Detected bit is set in the data reported to the host controller.
- 2) The Profile Position is set equal to the Encoder Position.
- 3) The SV160E2 preforms an immediate stop. The rate of deceleration during an immediate stop is programmable with the Immediate Stop Deceleration parameter. The immediate stop deceleration can be programmed from 1,500,000 steps/sec<sup>2</sup> to 15,999,000 steps/sec<sup>2</sup>. The SV160E2 will stop all motion immediately if the Immediate Stop Deceleration parameter is set to zero.
- 4) Once the immediate stop completes, the SV160E2 checks the difference between the Encoder Position and calculated Profile Position. If the error is less than the programmed Maximum Position Error Limit parameter the motor will stay enabled. If the error exceeds the Maximum Position Error Limit parameter, the motor is disabled and a Position\_Invalid bit is set to "1" to signal the host controller of the error.

# Available Discrete Inputs

The standard SV160E2 has four discrete DC inputs, Inputs 1 - 4. The SV160E2-STO has two discrete DC inputs, Inputs 1 and 2, in addition to its two STO inputs. These discrete DC inputs accept a nominal 12 to 24 Vdc signal and their functionality is fully programmable. The active state of each input is also programmable. Programming their active states allow them to act as Normally Open (NO) or Normally Closed (NC) contacts. All of these inputs are open collector sinking and share their common connection. The remainder of this section describes the available functionality.

#### **Home Input**

Many applications require that the machine be brought to a known position before normal operation can begin. This is commonly called "homing" the machine or bringing the machine to its "home" position. An SV160E2 allows you to define this starting position in two ways. The first is with a Position Preset command. The second is with a sensor mounted on the machine. When you define one of the inputs as the Home Input, you can issue commands to the SV160E2 that will cause the unit to seek this sensor. How the SV160E2 actually finds the home sensor is described in the reference chapter *Homing an SV160E2* starting on page 41.

#### CW Limit Switch or CCW Limit Switch

Each input can be defined as a CW or CCW Limit Switch. When used this way, the inputs are used to define the limits of mechanical travel. For example, if you are moving in a clockwise direction and the CW Limit Switch activates, all motion will immediately stop. At this point, you will only be able to jog in the counter-clockwise direction.

# Available Discrete Inputs (continued)

#### **Start Indexed Move Input**

Indexed Moves are programmed through the Network Data like every other move. The only difference is that Indexed Moves are not run until a Start Indexed Move Input makes a inactive-to-active state transition. This allows an SV160E2 to run critically timed moves that cannot be reliably started from the network due to data transfer lags.

#### **Emergency Stop Input**

When an input is defined as an Emergency Stop, or E-Stop, Input and it is activated, motion will come to an Immediate Stop. The move cannot be restarted. The *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load. If a stall is not detected during the stop, the motor will return to the Profile Position value. If a stall is detected during the stop, the SV160E2 will disable the motor and issue a Position\_Invalid fault. See *Stall Detection* on page 16 for a description of the stall detection process.

Any move, including a Jog or Registration Move, cannot begin while this input is active.

#### **Stop Jog or Registration Move Input**

When an input is configured as a Stop Jog or Registration Move Input, triggering this input during a Jog Move or Registration Move will bring the move to a controlled stop. The controlled stop is triggered on an inactive-to-active state change on the input. Only Jog Moves and Registration Moves can be stopped this way, all other moves ignore this input.

#### **Capture Encoder Position Input**

As described in the *Start Indexed Move Input* and *Stop Jog or Registration Move Input* sections above, an SV160E2 can be configured to capture the encoder position value on a transition of a discrete DC input.

#### **General Purpose Input**

If your application does not require one or more of the inputs, you can configure the unused inputs as General Purpose Inputs. The inputs are not used by the SV160E2, but their on/off state is reported in the network data and is available to your host controller.

#### **Enabling the Driver**

The SV160E2 performs multiple checks before enabling power to the motor.

- > The unit must be in Command Mode.
- A Configuration error must not exist.
- > The unit must pass its internal checks. (The Module\_OK status bit must equal "1".
- > The power stage must not be in an over temperature or over current condition.
- The DC Bus Voltage must be between 19 Vdc and 95 Vdc. When using the Over Voltage Threshold parameter, the input voltage must be less than 90% of this value. (If the Threshold is set to 79.2 Vdc, the input voltage cannot exceed 79.2\*0.9 = 72 Vdc.)
- > If configured, an Emergency Stop input must not be active.
- > The encoder must pass its operational checks and be providing a valid position
- ➤ The difference between the Profile Position and the Encoder Position must be less than ±4,096 counts or the Preset\_On\_Enable bit must be set. (When set, the Encoder Position is set to the Profile Position when the motor is enabled.
- On STO units, the STO\_Active and STO\_Failure bits must both be "0". (See below for a description of the STO Option.)

# STO Option

As stated previously, the STO option adds additional circuitry that allows power to be removed from the power stage of the motor directly. This is a hardware only solution. If either of the two redundant inputs is inactive, power is removed. This state cannot be overridden by software control.

Inputs 3 and 4 are used as the redundant STO inputs. When an SV160E2 is ordered with the STO functionality, additional components are added to the PC board that directly connects these two inputs to the power stage of the motor.

An SV160E2-STO reports two additional status bits to the host controller; STO\_Active, and STO\_Failure.

#### **Basic Functionality**

- ➤ STO\_Active: Normally '0', this bit is set to '1' when power is removed from the motor because one or both of Inputs 3 and 4 are inactive. This bit resets itself to '0' when *both* inputs are active.
- STO\_Failure: Normally '0', this bit is set to '1' when either or both of Inputs 3 and 4 are inactive, but the power stage is reporting that it is still active. If this occurs, the SV160E2 will attempt to disable the power stage through its programming and will refuse to accept move commands. This bit cannot be cleared by commands from the host controller. It can only be cleared by cycling power to the unit.

|        |               | Normal<br>Operation | In STO | STO<br>Cleared | Drive<br>Re-Enabled | Normal<br>Operation  |
|--------|---------------|---------------------|--------|----------------|---------------------|--|
| Inputs | STOA          |                     |        |                |                     |  |
| inputs | STOB          |                     |        |                |                     |  |
|        | STO_Active    |                     |        |                |                     |  |
| Status | STO_Failure   |                     |        |                |                     |  |
| Sta    | Driver_Fault  |                     |        |                |                     |  |
|        | Drive_Enabled |                     |        |                |                     |  |
| Cmd    | Enable_Drive  |                     |        |                |                     |  |
|        |               | I                   |        |                |                     | Drive Enabled on<br>$0 \rightarrow 1$ transition of<br>the Enable_Drive bit. |



#### **Additional Functionality**

The STO option adds an additional configuration parameter called the Discrepancy Timer Limit. The factory defaults leave this parameter at 0, which disables the additional functionality. When set to a non-zero value, the SV160E2-STO performs additional checks to monitor the STO signals for proper operation. The range of values for the Discrepancy Timer Limit is 0, and 50 to 3,000. The values of 50 to 3,000 represent time in milliseconds.

In normal STO operation, the two redundant inputs change state simultaneously. The inputs being in different states is an indication of a wiring issue or hardware fault. The Discrepancy Timer Limit parameter sets:

- the maximum time that the two inputs can be in different states before the SV160-STO triggers an STO\_Failure non-clearable fault
- the minimum time that an input must stay stable between state changes, both active-to-inactive and inactive-to-active

When recovering from an STO event, if the inputs are active for less than the Discrepancy Timer Limit, the SV160STO triggers the STO\_Failure non-clearable fault.

# Status LED's

Each SV160E2 has three status LED's. As shown in figure R1.4, these LED's are located on the rear cover.

#### **Drive Status LED**

The Drive Status LED is a bi-color red/green LED. This LED shows the state of the unit as a whole.

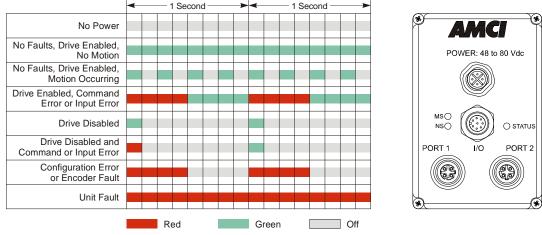


Figure R1.4 Drive Status LED States and LED Locations

#### Module Status (MS) LED

The Module Status LED is a bi-color red/green LED. The state of the LED depends on the state of the network adapter module.

| LED State                | EtherNet/IP Definition   | Modbus TCP Definition   | PROFINET Definition  |  |
|--------------------------|--|---|--|--|
| Off                      | No Power   | No Power  | No power   |  |
|                          | Initializing: Power up Self-7  | Test  |  |  |
| Alternating<br>Red/Green | Communications failure. The<br>the ethernet co-processor wi<br>to clear this fault.  | tere is a communications error<br>thin the unit. You must cycle | between the main processor and power to the SV160E2 to attempt |  |
| Flashing                 | Initializing: Waiting for vali network.  | d physical connection to the                                    |  |  |
| Green                    | Successful write to flash memory. Power must be cycled to the unit before additional commands can be written to it.  |   |  |  |
| Steady Green             |  |   | Device Name or IP Address are set.                             |  |
|                          |  |   | Initializing: Device Name or IP Address are not set.           |  |
| Flashing Red             | If the Network Status LED is also flashing, the IP Address or Network Protocol has be changed. Cycle power to the unit to continue. If the Network Status LED is in any othe state, a write to flash memory has failed. Cycle power to the unit to clear this fault. |   |  |  |

Table R1.3 Module Status LED States

# Status LED's (continued)

#### **Network Status (NS) LED**

The Network Status LED is a bi-color red/green LED. The state of the LED depends on the protocol the SV160E2 is configured to.


| LED State                | EtherNet/IP Definition  | Modbus TCP Definition  | PROFINET Definition  |
|--------------------------|---|--|--|
| Off                      | No Power  | No power or no TCP connections   | No power, duplicate IP<br>address on the network,<br>mismatch in Device Name,<br>or no connection to IO Con-<br>troller. |
| Alternating<br>Red/Green | Power up Self-Test  | Power up Self-Test   | Power up Self-Test   |
| Flashing<br>Green        | Ethernet connection.<br>No Implicit CIP con-<br>nections, but Explicit<br>CIP connections may<br>exist. | Indicates number of connec-<br>tions with 2 second delay<br>between group. The<br>SV160E2 supports up to<br>five concurrent connections. | On-line, Stop state. A con-<br>nection with the IO Control-<br>ler is established and it is in<br>its STOP state.        |
| Steady Green             | Valid Ethernet network<br>and CIP connections   | Should not occur. LED<br>should always flash when<br>network is connected.   | On-line, Run state. A con-<br>nection with the IO Control-<br>ler is established and it is in<br>its RUN state.          |
| Flashing Red             | If the MS LED is<br>steady green: Network<br>Connection Timeout   | Not Implemented  | Not Implemented  |
|                          | If the MS LED is blinking green: IP Address or Network Protocol changed: Cycle power                    |  |  |
| Steady Red               | Duplicate IP address on network. Not Implemented.   |  |  |

Table R1.4 Network Status LED States

# SV160E2 Connectors

#### **Ethernet Connectors**

Figure R1.5 shows the placement of the connectors on an SV160E2 unit. Figure R1.6 shows the pinout of the Ethernet connectors when viewed from the back of the SV160E2. Each Ethernet port on the SV160E2 is an "auto-sense" port that will automatically switch between 10baseT and 100baseT depending on the network equipment it is attached to. Each port also has "auto switch" capability. This means that a standard cable can be used when connecting the SV160E2 to any device, including a personal computer.

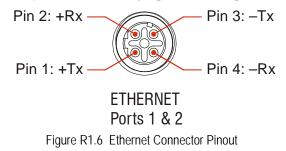

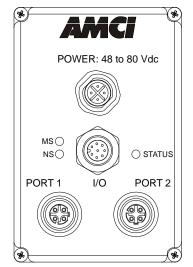



Figure R1.5 SV160E2 Connector Locations

The connector is a standard four pin D-coded female M12 connector that is rated to IP67 when the mate is properly installed. Note that the orientation of the key differs between the two ports.

# SV160E2 Connectors (continued)

#### **Digital Inputs Connector**

All digital inputs are located on the Digital Inputs Connector. This connector is a standard eight pin A-coded M12 connector that is rated to IP67 when the mate is properly installed. Figure R1.7 shows the pinout of the connector when viewed from the back of the SV160E2.

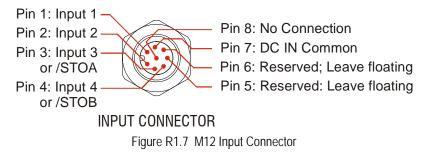

All four digital inputs are single ended, sinking inputs that share a common DC reference. (Pin 7, DC IN Common) All of the inputs accept a nominal 12 Vdc to 24 Vdc signal without the need of a current limiting resistor. Additional information on how the digital inputs can be used can be found in the *Available Discrete Inputs* section of the chapter, starting on page 16.

When ordering an SV160E2-STO, the two STO inputs are also single ended. They also use the DC IN Common pin as their reference. The additional circuitry that is added with the STO option leaves the two inputs wire AND'ed to the power stage of the motor. A 12 to 24 Vdc source must be connected to both of the STO inputs for normal operation. The power stage to the motor is directly disabled if either of the inputs are pulled low or are left open circuit, which is the basic function of the Safe Torque Off feature.

#### **Power Connector**

Figure R1.8 shows the pinout of the power connector when viewed from the back of the SV160E2. This connector is a standard four pin S-coded M12 connector.

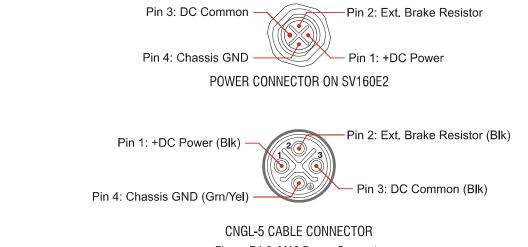



Figure R1.8 M12 Power Connector

+DC Power and DC Common are used to power the SV160E2. The Ext. Brake Resistor pin is for an external braking resistor that is used to dissipate regeneration energy during deceleration. The Chassis GND pin should be used to ground the chassis of the motor if it is not grounded through its mounting.



The SV160E2 can be run at voltages as high as 80 Vdc, and uses an S-coded connector because of this high voltage. Most S-coded cordsets have three black wires and a single green/yellow wire. When using such a cable with an SV160E2, it is strongly recommended to label the wires by pin number before installing the cordset.

# **Torque and Power Curves**

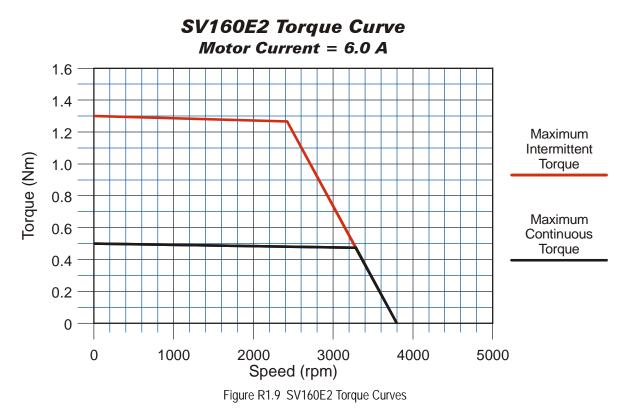

# **Power Supply Sizing**

The power supply should be sized base on the peak current that the motor can draw during a move. This value is programmable through the Peak Torque Limit and has a maximum value of 13.0 amps. The SV160E2 has a torque constant of 0.124 Nm/A. Dividing the programmed Peak Torque Limit by torque constant will result in the peak current drawn by the motor.

Even with a properly sized supply, it is important to choose a supply with the proper over-current protection. You should choose a supply whose protection circuitry results in a constant current control. In over-current situations, the power supply becomes a constant current supply, lowering the output voltage to keep the current within limits. This protection scheme allows you to maintain control of the motor. The other over-current protection is commonly referred to as "hiccup mode". These power supplies briefly reset if the current limit is exceeded. This results in loss of output voltage and motor control.

# **Regeneration (Back EMF) Effects**

All motors generate electrical energy when the mechanical speed of the rotor is greater than the speed of the rotating magnetic fields set by the drive. This is known as regeneration, or back EMF. Designers of systems with a large mass moment of inertia or high deceleration rates must take regeneration effects into account when selecting power supply components.

The first line of defense against regenerative events is an appropriately sized power supply. The additional capacitance typically found in a larger supplies can be used to absorb the regenerative energy. If your application has high deceleration rates, then a supply that can deliver 175% of peak motor power should be used.

The second line of defense is a braking resistor, also known as a regeneration resistor. Braking resistors, and their control circuitry, are built into AMCI AC powered drives. They are not included in the SV products because of the limited ability to dissipate the heat generated by the resistor. An external braking resistor and control circuitry can be added to the system. The power switches in the SV160E2 units can conduct a maximum of 10 amps, so the sum of the motor current and braking resistor circuit currents must be below this value.

The *Braking Resistor Calculations* section, which starts on page 73, lists the steps needed to choose a properly sized braking resistor for your application.

**!** CAUTION Regeneration events can raise the Vdc supply voltage to an unexpected value. Components not rated for this voltage may be damaged.

- > Only use power supplies that will not be damaged by regeneration events.
- ► Use a braking resistor if necessary.

# **Compatible Connectors and Cordsets**

Many different connectors and cordsets are available on the market, all of which will work with the SV160E2 provided that the manufacturer follows the connector and Ethernet standards. AMCI has reviewed the following connectors and ethernet cordsets for compatibility with the SV160E2.

#### **Ethernet Connector**

| AMCI # | Binder #       | Description   |
|--------|----------------|---|
| MS-28  | 99-3729-810-04 | Mating connector for Ethernet Connector.<br>Male, 4 pin D-coded. Screw terminal connections. 6 to 8 mm dia. cable.<br>Straight, IP67 rated when properly installed. |

Table R1.5 Ethernet Connectors

#### Input Connector

| AMCI # | Binder #      | Description  |
|--------|---------------|--|
| MS-37  | 99-0486-12-08 | Mating connector for Input Connector.<br>Female, 8 pin A-coded. Screw terminal connections. 6 to 8 mm dia. cable.<br>Straight, IP67 rated when properly installed. |

Table R1.6 Compatible Connectors

# **Power Connector**

| AMCI # | Binder #      | Description   |
|--------|---------------|---|
| MS-41  | 99-0690-58-04 | Mating connector for Power Connector. Female, 4 pin S-coded.<br>Screw terminal connections. 16AWG conductor, 8 to 10 mm dia. cable.<br>Right-angle, IP67 rated when properly installed. |

Table R1.7 Compatible Connectors

# Ethernet Cordset

| AMCI Part # | Description   |
|-------------|---|
| CNER-5M     | 4-position, 24 AWG, shielded. EIA/TIA 568B color coded.<br>Connectors: Straight M12, D-coded, Male to RJ45. Shield attached to both connectors. Cable length: 5 m |

Table R1.8 Ethernet Cordset

# Input Cordset

| AMCI Part # | Description  |
|-------------|--|
| CNFL-5M     | 8-position, 24 AWG.<br>Connector: Straight M12, A-coded, Female to 2 inch flying leads, 0.28" stripped.<br>Cable length: 5 m |

Table R1.9 Power Cordsets

# **Power Cordset**

| AMCI Part #                 | Description  |  |
|-----------------------------|--|--|
| CNGL-5M                     | 4-position, 1.5 mm <sup>2</sup> (16 AWG) Connector: Straight M12, S-coded, Female to flying leads, 0.28" stripped. Cable diameter: 0.35" Cable length: 5 m |  |
| Table D1 10 Davies Carde de |  |  |

Table R1.10 Power Cordsets

# **REFERENCE 2**

# **MOTION CONTROL**

When a move command is sent to an SV160E2, the unit calculates the entire profile before starting the move or issuing an error message. This chapter explains how the profiles are calculated and the different available moves.

#### Definitions

#### **Units of Measure**

Distance: Every distance is measured in steps. The SV160E2 uses a value of 16,384 steps per turn.

**Speed:** All speeds are measured in steps/second. A speed of 16,384 steps/second will result in the shaft rotating at 1 revolution/second.

**Acceleration:** The typical unit of measure for acceleration and deceleration is steps/second/second, or steps/ second<sup>2</sup>. However, when programming an SV160E2, all acceleration and deceleration values must be programmed in the unit of measure of steps/second/millisecond.

- To convert from steps/second<sup>2</sup> to steps/second/millisecond, divide the value by 1000. This must be done when converting from a value used in the equations to a value programmed into an SV160E2.
- To convert from steps/second/millisecond to steps/second<sup>2</sup>, multiply the value by 1000. This must be done when converting from the value programmed into an SV160E2 to the value used in the equations.

**Acceleration Type:** The SV160E2 uses constant acceleration and deceleration during moves. This limits the time spent accelerating and decelerating during moves.

#### **Profile Position**

Profile Position is defined in counts, and represents the ideal position of the motor shaft at a particular point in time. The range of position values is -1,073,741,824 to +1,073,741,823.

#### **Encoder Position**

Encoder Position is defined in counts, and is the actual, physical position of the motor shaft. The allowable error between the Profile Position and Encoder Position values is programmable as the Maximum Position Error Limit parameter. The range of encoder position values is -1,073,741,824 to +1,073,741,823.

#### **Continuous Torque**

The maximum torque delivered by the motor when it must run at a constant speed. This value is programmable with the Continuous Torque Limit parameter, which is programmed as part of the configuration data. The parameter ranges from the 0.10 Nm to 0.50 Nm.

#### **Peak Torque**

The maximum torque delivered by the motor during times of acceleration or deceleration. This value is programmable with the Peak Torque Limit parameter, which is part of the configuration data. The parameter ranges from the value of the Continuous Torque Limit parameter to a maximum of 1.30 Nm. During the limited times of acceleration or deceleration, the power delivered by the motor, (which is directly proportional to the torque), can exceed its continuous power rating without damage to the motor. This additional power allows the motor to accelerate or decelerate the inertial load faster.

# **Definitions (continued)**

#### **Home Position**

The Home Position is any position on your machine that you can sense and stop at. There are two ways to defining the Home Position. The first is using the Preset Position command to set the Profile Position and Encoder Position registers to a known value. The second method is using one of the *Find Home* commands. If you use the unit's *Find Home* commands, the motor position and encoder position registers will automatically be set to zero once the home position is reached. Defining a Home Position is completely optional. Some applications, such as those that use the SV160E2 for speed control, don't require position data at all.

#### **Count Direction**

Clockwise moves will always increase the profile position and encoder position values reported back to the host. Some of the moves, such as the Jog Move, have a positive and negative command. A positive command, such as the +Jog Move command, will result in a clockwise rotation of the shaft.

#### **Target Position**

The Target Position is the position that you want the move to end at. There are two ways to define the Target Position, with relative coordinates or absolute coordinates.

#### **Relative Coordinates**

Relative coordinates define the Target Position as an offset from the present position of the motor. Most SV160E2 moves use relative coordinates.

➤ The range of values for the Target Position when it is treated as an offset is -1,073,741,824 to +1,073,741,823 counts. Positive offsets will result in clockwise moves, while negative offsets result in counter-clockwise moves. Note that the Profile and Encoder Positions can be forced to roll over with relative moves. For example, if the Profile Position equals 100,000, a relative move of +1,073,741,823 will result in a clockwise rotation for +1,073,741,823 counts. The position will roll over and stop at -1,073,641,825.

#### **Absolute Coordinates**

Absolute coordinates treat the Target Position as an actual position on the machine. (See *Home Position* on the previous page.)

The range of values for the Target Position when it is treated as an actual position on the machine is -1,073,741,824 to +1,073,741,823 counts. The move will be clockwise if the Target Position is greater than the Current Position and negative if the Target Position is less than the Current Position.


#### **Immediate Stop Deceleration**

In order to limit regenerative energy when decelerating a large inertial load, the SV160E2 allows you to program a deceleration rate for immediate stops. If left at its default value of zero, the SV160E2 stop all motion immediately. When programmed to a value between 1,500 and 15,999, the SV160E2 will decelerate at a rate of 1,500,000 to 15,999,000 steps/sec<sup>2</sup>. The time to decelerate depends on the speed at which the shaft is rotating when the immediate stop is initiated. The formulas for calculating stopping time can be found in the *Constant Acceleration Equations* section, starting on page 37. Immediate Stop Deceleration is applied under the following conditions:

- ➤ CW Limit activated
- CCW Limit activated
- ► E-Stop Input activated
- > Immediate Stop command accepted from the network interface
- Network Communications is lost
- > PLC switches out of run mode (cannot be sensed on all platforms)

# A Simple Move

As shown in the figure below, a move from A (Current Position) to B (Target Position) consists of several parts.

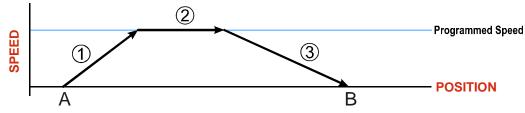




- 1) The move begins at point A, where the motor accelerates at the programmed *Acceleration Value* until the speed of the motor reaches the *Programmed Speed*. Both the Acceleration Value and the Programmed Speed are programmed when the move command is sent to the SV160E2.
- 2) The motor continues to run at the Programmed Speed until it reaches the point where it must decelerate before reaching point B at zero speed.
- 3) The motor decelerates at the *Deceleration Value*, which is also programmed by the move command, until the Target Position (B) is reached. The motor stops at this point. Note that the acceleration and deceleration values can be different in the move.

Figure R2.1 above shows a Trapezoidal Profile. A Trapezoidal Profile occurs when the Programmed Speed is reached during the move. This occurs when the number of steps needed to accelerate and decelerate are less than the total number of steps in the move.

Figure R2.2 below shows a Triangular Profile. A Triangular Profile occurs when the number of steps needed to accelerate to the Programmed Speed and decelerate from the Programmed Speed are greater than the total number of steps in the move. In this case, the profile will accelerate as far as it can before it has to decelerate to reach the Target Position at zero speed. The Programmed Speed is never reached.

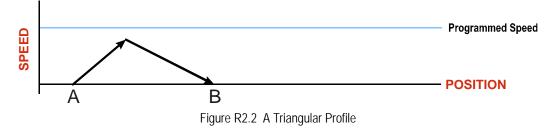

# **Controlled and Immediate Stops**

Once a move is started, there are several ways to stop the move before it comes to an end. These stops are broken down into two types:

- Controlled Stop: The axis immediately begins decelerating at the move's programmed deceleration value until it reaches zero speed. The motor position value is still considered valid after a Controlled Stop and the machine does not need to be homed again before Absolute Moves can be run.
- Immediate Stop: The Immediate Stop Deceleration parameter, described on page 26, is used to decelerate the load. If the Immediate Stop Deceleration parameter is set to zero, the move stops immediately, without deceleration. If the position error during the stop does not exceed the Maximum Position Error Limit value, the motor will stop at the Profile Position value. If the position error during the stop exceeds the Maximum Position Error Limit value, the SV160E2 will disable the motor and issue a Position\_Invalid fault.

#### **Host Control**

**Hold Move Command:** This command can be used with some moves to bring the axis to a Controlled Stop. The move can be resumed and finished, or it can be aborted. Not all moves are affected by this command. The section *Basic Move Types*, starting on page 29, describes each move type in detail, including if the move is affected by this command.

**Immediate Stop Command:** The *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load. If the Immediate Stop Deceleration parameter is set to zero, the move stops immediately, without deceleration. If a stall is not detected during the stop, the motor will return to the Profile Position value. If a stall is detected during the stop the SV160E2 will disable the motor and issue a Position\_Invalid fault. See *Stall Detection* on page 16 for a description of the stall detection process.

#### Hardware Control

**Stop Jog or Registration Move Input:** Triggering this input type during a Jog Move or Registration Move will bring the move to a controlled stop. The controlled stop is triggered on an inactive-to-active state change on the input. Only Jog Moves and Registration Moves can be stopped this way, all other moves ignore this input.


**CW Limit and CCW Limit Inputs:** In most cases, activating these inputs during a move will bring the axis to an Immediate Stop. The *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load. The exceptions are the *CW/CCW Find Home* commands, the *CW/CCW Jog Move* commands, and the *CW/CCW Registration Move* commands. The *Find Home* commands are explained in the reference section, *Homing an SV160E2*, which starts on page 41. The *CW/CCW Jog Move* commands are fully explained on page 31, and the *CW/CCW Registration Move* commands are fully explained on page 32.

**Emergency Stop Input:** It is possible to configure an input as an Emergency Stop Input. When an Emergency Stop Input is activated, the axis will come to an Immediate Stop. The move cannot be restarted. The *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load. If a stall is not detected during the stop, the motor will return to the Profile Position value. If a stall is detected during the stop, the SV160E2 will disable the motor and issue a Position\_Invalid fault. See *Stall Detection* on page 16 for a description of the stall detection process.

# **Basic Move Types**

#### **Relative Move**

Relative Moves move an offset number of steps (n) from the current Profile Position (A). A trapezoidal profile is shown to the right, but Relative Moves can also generate triangular profiles. The command's Target Position is the move's offset. The offset can be in the range of -1,073,741,824 to +1,073,741,823 counts. Positive offsets will result in clockwise moves, while negative offsets result in counter-clockwise moves.

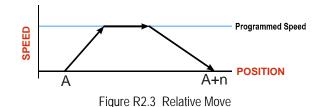

# NOTE ≽

Relative Moves allow you to move your machine without having to calculate absolute positions. If you are indexing a rotary table, you can preform a relative move of  $30^{\circ}$  multiple times without recalculating new target positions in your controller. If you perform the same action with Absolute Moves, you would have to calculate your  $30^{\circ}$  position followed by your  $60^{\circ}$  position, followed by your  $90^{\circ}$  position, etc.

Relative Moves can be brought to a Controlled Stop by using the Hold Move Command from your host controller. When the command is accepted, the axis will immediately decelerate at the programmed rate and stop. When stopped successfully, the SV160E2 will set a *In\_Hold\_State* bit in the input data table. The Relative Move can be restarted with the Resume Move command from the host controller or the move can be aborted by starting another move. The Resume Move command allows you to change the move's Programmed Speed, Acceleration Value, and Deceleration Value. The Target Position cannot be changed with the Resume Move Command.

#### **Controlled Stops**

- > The move completes without error.
- You issue a Hold Move command through the Network Output Data. Note that your holding position will most likely not be the final position you commanded. You can resume a held Relative Move by using the Resume Move command or the move can be aborted by starting another move. The use of the Hold Move and Resume Move commands is further explained in the *Controlling Moves In Progress* section starting on page 36.


#### **Immediate Stops**

- > You issue an Immediate Stop command through the Network Output Data.
- ➤ An inactive-to-active transition on an input configured as an E-Stop Input. A *Reset Errors* command must be issued before moves are allowed again.
- ➤ A CW or CWW Limit Switch is reached. A *Reset Errors* command must be issued before moves are allowed again.
- ➤ If set to a non-zero value, the *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load.

# Basic Move Types (continued)

#### **Absolute Move**

Absolute Moves move from the current Profile Position (A) to a given position (B). (The SV160E2 calculates the direction and number of steps needed to move to the given position and moves that number of steps.) A trapezoidal profile is shown to the right, but Absolute Moves can also generate triangular profiles. The command's Target Position can be in the range of -1,073,741,824 to +1,073,741,823 counts. The move will be clockwise if the Target Position is greater than the Current Position and counter-clockwise if the Target Position is less than the Current Position.

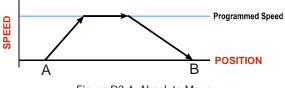



- 1) The *Home Position* of the machine must be set before running an Absolute Move. See the reference section, *Homing an SV160E2*, which starts on page 41, for information on homing the machine.
- 2) Absolute Moves allow you to move your machine without having to calculate relative positions. If you are controlling a rotary table, you can drive the table to any angle without having to calculate the distance to travel. For example an Absolute Move to 180° will move the table to the correct position regardless of where the move starts from.

#### **Controlled Stops**

NOTE 🗩

- > The move completes without error.
- You issue a Hold Move command through the Network Output Data. Note that your holding position will most likely not be the final position you commanded. You can resume a held Absolute Move by using the Resume Move command or the move can be aborted by starting another move. The use of the Hold Move and Resume Move commands is further explained in the *Controlling Moves In Progress* section starting on page 36.

#### Immediate Stops

- > You issue an Immediate Stop command through the Network Output Data.
- ➤ An inactive-to-active transition on an input configured as an E-Stop Input. A *Reset Errors* command must be issued before moves are allowed again.
- ➤ A CW or CWW Limit Switch is reached. A *Reset Errors* command must be issued before moves are allowed again.
- ➤ If set to a non-zero value, the *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load.

# Basic Move Types (continued)

### **CW/CCW Jog Move**


Jog Moves move in the programmed direction as long as the command is active. Two commands are available. The CW Jog Move will increase the Profile Position while the CCW Jog Move will decrease the Profile Position. These commands are often used to give the operator manual control over the axis.

Jog Moves are also used when you are interested in controlling the speed of the shaft instead of its position. One such application is driving a conveyor belt. To accommodate these applications, the running speed, acceleration, and deceleration of the Jog Move can be changed *while the move is in progress*.

The CW Limit and CCW Limit inputs behave differently for CW/CCW Jog Moves and CW/CCW Registration Moves than all other move types. Like all moves, activating a limit will bring the move to an Immediate Stop. Unlike other moves, a Jog or Registration move can be started when an end limit switch is active provided that the commanded direction is opposite that of the activated switch. For example, a CW Jog Move can be issued while the CCW limit switch is active. This allows you to move off of an activated end limit switch.

As shown below, a Jog Moves begins and accelerates at the programmed rate to the Programmed Speed and continues until a stop condition occurs.

It is possible to change the speed of a Jog Move without stopping the motion. The Programmed Speed, Acceleration, and Deceleration parameters can be changed during a Jog Move. When the Programmed Speed is changed, the motor will accelerate or decelerate to the new Programmed Speed using the new accelerate/ decelerate parameter values.

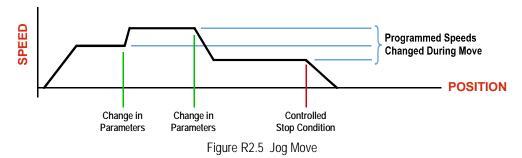

#### **Controlled Stops**

- ➤ The Jog Move Command bit is reset to "0".
- > An inactive-to-active transition on an input configured as a *Stop Jog or Registration Move* Input.
- > You issue a Hold Move command in the Network Output Data. This brings the move to an end.

#### **Immediate Stops**

- > You issue an Immediate Stop command through the Network Output Data.
- ➤ An inactive-to-active transition on an input configured as an E-Stop Input. A *Reset Errors* command must be issued before moves are allowed again.
- ➤ A CW or CWW Limit Switch is reached. A *Reset Errors* command must be issued before moves are allowed again.
- If set to a non-zero value, the *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load.



Note that it is possible to *start* a move while a CW or CCW Limit Switch is active as long as the direction of travel is *opposite* that of the activated Limit Switch. For example, it is possible to start a CW Jog Move while the CCW Limit Switch is active.

# Basic Move Types (continued)

#### **CW/CCW Registration Move**

Similar to a Jog Move, a Registration Move will travel in the programmed direction as long as the command is active. CW Registration Moves increase the Profile Position count while the CCW Registration Moves decrease the Profile Position count. When the command terminates under Controlled Stop conditions, the SV160E2 will output a programmed number of steps as part of bringing the move to a stop. Note that all position values programmed with a Registration Move are relative values, not absolute machine positions.

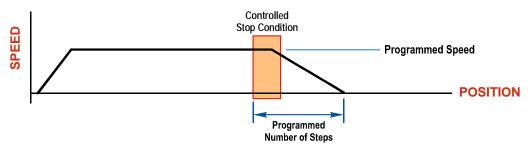


Figure R2.6 Registration Move



If the Programmed Number of Steps are less than the number of steps needed to bring the axis to a stop based on the Programmed Speed and Deceleration values sent with the command, the move will not begin and the SV160E2 will issue a Command Error.

An additional feature of the Registration Moves is the ability to program the driver to ignore the Controlled Stop conditions until a minimum number of steps have occurred. This value is programmed through the Minimum Registration Move Distance parameter, which is set when you command the Registration Move. The figure below shows how the Minimum Registration Move Distance parameter affects when the Stop Condition is applied to the move. As shown in the second diagram, Controlled Stop conditions are level triggered, not edge triggered. If a Controlled Stop Condition occurs before the Minimum Registration Move Distance is reached and stays active, the move will begin its controlled stop once the Minimum Registration Move Distance is reached.

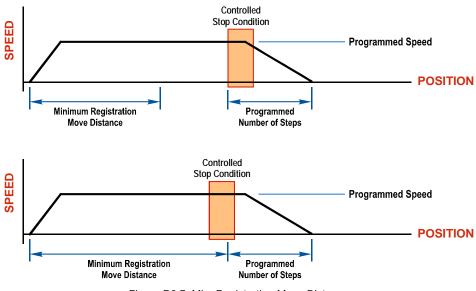


Figure R2.7 Min. Registration Move Distance

# **Basic Move Types (continued)** CW/CCW Registration Move (continued)

#### **Controlled Stops**

- > The Registration Move Command bit is reset to "0".
- > A positive transition on an input configured as a *Stop Jog or Registration Move* Input.



Starting a Registration Move with a *Stop Jog or Registration Move* Input in its active state will result in a move of (*Minimum Registration Distance + Programmed Number of Steps*).

You issue a Hold Move command through the Network Output Data. The SV160E2 responds by using the programmed Deceleration value to bring the move to a stop, without using the value of the Programmed Number of Steps parameter. A Registration Move does not go into the Hold State if the Hold Move command is used to stop the move and it cannot be restarted with the Resume Move command.

#### **Immediate Stops**

- > You issue an Immediate Stop command through the Network Output Data.
- ➤ An inactive-to-active transition on an input configured as an E-Stop Input. A *Reset Errors* command must be issued before moves are allowed again.
- ► A CW or CWW Limit Switch is reached. A *Reset Errors* command must be issued before moves are allowed again.
- ➤ If set to a non-zero value, the *Immediate Stop Deceleration* parameter, described on page 26, is used to decelerate the load.



Note that it is possible to *start* a move while a CW or CCW Limit Switch is active as long as the direction of travel is *opposite* that of the activated Limit Switch. For example, it is possible to start a CW Registration Move while the CCW Limit Switch is active.

# **Indexed Moves**

All of the moves that have been explained in the chapter up to this point can be started by a transition on one of the inputs instead of a command from the network. If the *Indexed Move* bit is set when the command is issued, the SV160E2 will not run the move until the configured input makes an inactive-to-active transition. This allows you to run time critical moves that cannot be reliably started from the network because of messaging time delays.

- > The input must be configured as a *Start Indexed Move Input*.
- > The move begins with an inactive-to-active transition on the input. Note that an active-to-inactive transition on the input will not stop the move.
- The move command must stay in the Network Output Data while performing an Indexed Move. The move will not occur if you reset the command word before the input triggers the move.
- The move can be run multiple times. (The Command Bit for the move does not have to toggle between moves.) Command data can be changed. For Jog and Registration Moves, the changes take effect immediately. For all other moves, the changes are applied on the next move. The move is run on every inactive-to-active transition on the physical input if a move is not currently in progress. Once a move is triggered, the Start Indexed Move Input is ignored by the SV160E2 until the triggered move is finished.
- ➤ A Jog Move that is started as an Indexed Move will come to a controlled stop when the command bit in the Network Output Data is reset to zero.
- ➤ It is possible to perform an indexed Jog Move by configuring two inputs for their respective functions. The first input, configured as a *Start Indexed Move Input*, starts the jog and the second, configured as a *Stop Jog or Registration Move Input* causes the jog to end.
- ➤ It is possible to perform an indexed Registration Move by configuring two inputs for their respective functions. The first input, configured as a *Start Indexed Move Input*, starts the move and the second, configured as a *Stop Jog or Registration Move Input* causes the registration function to occur.
- You cannot issue a Hold Command with the Indexed Bit set and have the Hold Command trigger on the inactive-to-active transition of a physical input. Hold Commands are always acted upon as soon as they are accepted from the Network Output Data.
- You cannot issue an Immediate Stop Command with the Indexed Bit set and have the Immediate Stop Command trigger on the inactive-to-active transition of a physical input. Immediate Stop Commands are always acted upon as soon as they are accepted from the Network Output Data. If you need this functionality, consider programming the physical input as an E-Stop Input.
- ➤ You cannot issue a Clear Error Command with the Indexed Bit set and have the Clear Error Command trigger on the inactive-to-active transition of a physical input. Clear Error Commands are always acted upon as soon as they are accepted from the Network Output Data.

# **Axis Follower Moves**

On controllers that support motion axis programming, such as the Rockwell Automation ControlLogix platforms, the SV160E2 can be tied to the motion axis, with the host controller periodically sending position and velocity data to the unit as part of the axis update. The loop is closed by the SV160E2 by controlling the position and velocity of the motor. Both linear and circular axes are supported.

When compared with Linear Axis Follower Moves, Circular Axis Follower Moves have one additional parameter. This parameter is often called the "Position Unwind" value, and it defines the point at which the position rolls over and returns to zero. On the SV160E2 units, this parameter has a range of 1,024 to 1,073,741,824.



When using the SV160E2 as an axis follower, it is best to run the virtual axis as a high priority event driven periodic task.

**NOTE** Be aware of the potential for position overflow in systems that use linear axis follower. One example is a conveyor that always rotates in one direction. If the position value overflows, it will switch from the maximum positive value to the maximum negative value, or vice versa,

and unpredictable motion may occur.

A sample program that demonstrates virtual axis programming on the ControlLogix platform is available on the AMCI website at *https://www.amci.com/industrial-automation-support/sample-programs/*. If you are using a different host controller that supports motion axis programming, feel free to contact AMCI technical support for assistance in programming your controller.

# **Controlling Moves In Progress**

Each SV160E2 has the ability to place a running move on hold and later resume the move if an error did not occur while the move was in its Hold state. One potential application for this feature is bringing a move to a controlled stop when your controller senses an end-of-stock condition. The move can be put in its Hold state until the stock is replenished and then the move can be resumed.

Note that you do not have to resume a move once it has been placed in its Hold state. You can place a move in its Hold state to prematurely end the move with a controlled stop and issue a new move of any type from the stopped position.

The figure below shows a profile of a move that is placed in its Hold state and later resumed.

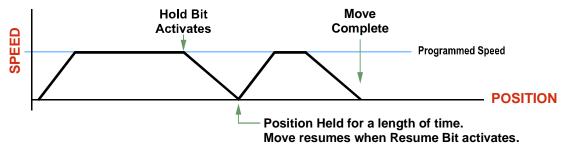


Figure R2.8 Hold/Resume a Move Profile

#### **Jog Moves**

Jog Moves can be brought to a controlled stop by issuing a Hold Move command, but they cannot be restarted.

#### **Registration Moves**

Registration Moves can be brought to a controlled stop by issuing a Hold Move command, but they cannot be restarted.

#### **Absolute and Relative Moves**

Absolute and Relative Moves can be placed in a Hold state and resumed if error conditions, such as programming errors, have not occurred. New Acceleration, Deceleration, and Programmed Speed parameters can be written to the SV160E2 while these moves are in their hold states. If the parameters are accepted without error, the move can be resumed and it will use the new parameter values. Note that a change to the Target Position is ignored.

#### **Disabling the Motor**

It is possible to disable the motor while a move is in progress. If this occurs, the SV160E2 uses the move's programmed deceleration rate to bring motion to a stop before removing power from the motor. The SV160E2 also issues a command error when the motor is disabled during a move.

# **REFERENCE 3**

# **MOVE PROFILE CALCULATIONS**

This reference was added because some of our customers must program very precise profiles. Understanding this section is not necessary before programming the SV160E2 and it can be considered optional.

The equations in this reference use a unit of measure of steps/second/second (steps/second<sup>2</sup>) for acceleration and deceleration. However, when programming the SV160E2, all acceleration and deceleration values must be programmed in the unit of measure of steps/second/millisecond.

- To convert from steps/second<sup>2</sup> to steps/second/millisecond, divide the value by 1000. This must be done when converting from a value used in the equations to a value programmed into the SV160E2.
- To convert from steps/second/millisecond to steps/second<sup>2</sup>, multiply the value by 1000. This must be done when converting from the value programmed into the SV160E2 to the value used in the equations.

## **Constant Acceleration Equations**

When you choose to use constant accelerations, the speed of the move will increase linearly towards the Programmed Speed. This is the fastest form of acceleration, resulting in the fastest move between two points at its programmed speed.

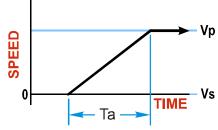


Figure R3.1 Constant Acceleration Curves

#### Variable Definitions

The following variables are used in these equations:

- $\blacktriangleright$  **V**<sub>P</sub> = Programmed Speed of the move
- >  $\mathbf{a} = \text{Acceleration value. Must be in the units of steps/second}^2$
- **d** = Deceleration value. Must be in the units of steps/second<sup>2</sup>
- ➤ T<sub>A</sub> or T<sub>D</sub> = Time needed to complete the acceleration or deceleration phase of the move
- ➤ D<sub>A</sub> or D<sub>D</sub> = Number of Steps needed to complete the acceleration or deceleration phase of the move



# **Constant Acceleration Equations (continued)**

Figure R3.1 gives the equations to calculate Time, Distance, and Acceleration values for a constant acceleration move.

| Acceleration Type | T <sub>A</sub> or T <sub>D</sub> | D <sub>A</sub> or D <sub>D</sub> | a                |
|-------------------|----------------------------------|----------------------------------|------------------|
|                   | (Time to Accelerate              | (Distance to Accelerate          | (Average         |
|                   | or Decelerate)                   | or Decelerate)                   | Acceleration)    |
| Linear            | $T_A = V_P/a$                    | $D_A = T_A * V_P / 2$            | $a = V_P^2/2D_A$ |

Table R3.1 Acceleration Equations

If the sum of the  $D_A$  and  $D_D$  values of the move is *less than* the total number of steps in the move, your move will have a Trapezoidal profile.

If the sum of the  $D_A$  and  $D_D$  values of the move is *equal to* the total number of steps in the move, your move will have a Triangular profile and your move will reach the Programmed Speed before it begins to decelerate.

If the sum of the  $D_A$  and  $D_D$  values of the move is *greater than* the total number of steps in the move, your move will have a Triangular profile and it *will not* reach the Programmed Speed before it begins to decelerate.

As an example, lets assume the values in table R3.2 for a move profile.

| Name                               | Value                        | SV160E2<br>Parameter Values |
|------------------------------------|------------------------------|-----------------------------|
| Acceleration (a)                   | $20,000 \text{ steps/sec}^2$ | 20                          |
| Deceleration (d)                   | $25,000 \text{ steps/sec}^2$ | 25                          |
| Programmed Speed (V <sub>P</sub> ) | 100,000 steps/sec            | 100,000                     |

Table R3.2 Sample Values

From figure R3.1:

Time to accelerate:  $T_A = V_P/a = 100,000/20,000 = 5.000$  seconds Time to decelerate:  $T_D = V_P/d = 100,000/25,000 = 4.000$  seconds Distance to Accelerate:  $D_A = T_A * V_P/2 = 5.000 * 100,000/2 = 250,000$  steps Distance to Decelerate:  $D_D = T_D * V_P/2 = 4.000 * 100,000/2 = 200,000$  steps

Total Distance needed to accelerate and decelerate: 250,000 + 200,000 = 450,000 steps

If a move with the above acceleration, deceleration, and programmed speed has a length greater than 450,000 steps, the SV160E2 will generate a Trapezoidal profile. If the move is equal to 450,000 steps, the SV160E2 will generate a Triangular profile and the unit will travel at the programmed speed for one count. If the move is less than 450,000 steps, the SV160E2 will generate a Triangular profile and the programmed speed will not be reached.

In the case of a Triangular profile where the programmed speed is not reached, it is fairly easy to calculate the maximum speed  $(V_M)$  attained during the move. Because the move is always accelerating or decelerating, the total distance traveled is equal to the sum of  $D_A$  and  $D_D$ .

 $D_A = T_A * V_M/2$  and  $T_A = V_M/a$ . By substitution:  $D_A = V_M/a * V_M/2 = V_M^2/2a$ . By the same method,  $D_D = V_M^2/2d$ .

Therefore, total distance traveled =

$$D_A + D_D = V_M^2 / 2a + V_M^2 / 2d.$$

In the case where the acceleration and deceleration values are equal, this formula reduces to:

 $D_A + D_D = V_M^2/a$ 

## **Constant Acceleration Equations (continued)**

Continuing the example from table R3.2, assume a total travel distance of 300,000 steps.

$$D_A + D_D = \frac{V_M^2}{2a} + \frac{V_M^2}{2d}$$

$$300,000 \text{ steps} = \frac{V_M^2}{2(20,000)} + \frac{V_M^2}{2(25,000)}$$

$$300,000 \text{ steps} = \frac{V_M^2}{40,000} + \frac{V_M^2}{50,000}$$

$$300,000 \text{ steps} = \frac{5}{5} \left(\frac{V_M^2}{40,000}\right) + \frac{4}{4} \left(\frac{V_M^2}{50,000}\right)$$

$$300,000 \text{ steps} = \frac{5V_M^2}{200,000} + \frac{4V_M^2}{200,000}$$

$$300,000 \text{ steps} = \frac{5V_M^2}{200,000} + \frac{4V_M^2}{200,000}$$

$$300,000 (200,000) = 9V_M^2$$

$$\frac{60,000 \times 10^6}{9} = V_M^2$$

$$V_M = 81,650 \text{ steps/sec}$$

Once you have calculated the maximum speed, you can substitute this value into the time and distance formulas in table R3.1 to calculate time spent and distance traveled while accelerating and decelerating.

#### **Total Time Equations**

For Trapezoidal Profiles you must first determine the number of counts that you are running at the Programmed Speed. This value, ( $D_P$  below), is equal to your  $D_A$  and  $D_D$  values subtracted from your total travel. You can then calculate your total profile time, ( $T_T$  below), from the second equation.

$$D_P = (Total Number of Steps) - (D_A + D_D)$$

$$T_{T} = T_{A} + T_{D} + D_{P}/V_{P}$$

For Triangular Profiles, the total time of travel is simply:

 $T_T = T_A + T_D$ 

Notes

# **REFERENCE 4**

# HOMING AN SV160E2

This chapter explains the various ways of homing an SV160E2. Inputs used to home the unit are introduced and diagrams that show how the unit responds to a homing command are given.

## **Definition of Home Position**

The Home Position is any position on your machine that you can sense and stop at. Once at the Home Position, the Profile Position must be set to an appropriate value. If you use the unit's *CW/CCW Find Home* commands, the Profile Position will automatically be set to zero once the home position is reached. *When the Profile Position is preset or homed, the Encoder Position will also be set to the same value.* 



Defining a Home Position is completely optional. Some applications, such as those that use an SV160E2 for speed control, don't require position data at all.

## **Definition of Homing Speed**

Homing speed is the speed of the final segment of the homing move. It is equal to 10% of the Target Speed that is programmed as part of the move.

## **Position Preset**

One of the ways to define the Home Position is to issue the Preset Position command over the network. The Profile Position can be preset anywhere in the range of -1,073,741,824 to +1,073,741,823.

## **CW/CCW Find Home Commands**

The other choice is to use the unit's Find Home commands to order the SV160E2 to find the Home Position based on sensors brought into the unit. The CW Find Home command begins searching by rotating the motor shaft in the clockwise direction and ends when the home sensor triggers while the SV160E2 is rotating in the clockwise direction *at the Homing Speed*. The CCW Find Home command operates in the same way but starts and ends with motion in the counter-clockwise direction.

## **Homing Inputs**

Up to three physical DC inputs can be used when homing the driver.

- **Home Input:** This input is used to define the actual home position of the machine.
- **CW Limit Switch Input:** This input is used to prevent overtravel in the clockwise direction.
- **CCW Limit Switch Input:** This input is used to prevent overtravel in the counter-clockwise direction.

## Homing Configurations

A SV160E2 must have one of its DC inputs configured as the home input before one of the *CW/CCW Find Home* commands can be issued.

NOTE ≽

You do not have to configure and use CW or CCW Limits. If you choose to configure the module this way, then the SV160E2 has no way to automatically prevent over travel during a homing operation. In linear applications, you must prevent over travel by some external means, or ensure that the homing command is issued in the direction that will result in reaching the homing input directly.

## **Homing Profiles**



The CW Find Home command is used in all of these examples. The CCW Find Home command will generate the same profiles in the opposite direction.

#### **Home Input Only Profile**

Figure R4.1 below shows the move profile generated by a CW Find Home command when it finds the Home Input without first encountering an end limit switch.

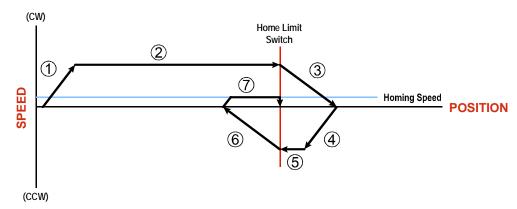


Figure R4.1 Home Input Profile

- 1) Acceleration to the Programmed Speed
- 2) Run at the Programmed Speed until the Home Input activates
- 3) Deceleration and stop, followed by a two second delay.
- 4) Acceleration to the Programmed Speed opposite to the requested direction.
- 5) Run opposite the requested direction until the Home Input transitions from Active to Inactive
- 6) Deceleration and stop, followed by a two second delay.
- 7) Return to the Home Input at the Homing Speed. (10% of the Programmed Speed.) Stop when the Home Input transitions from inactive to active.

**NOTE** If the Home Input is active when the command is issued, the move profile begins at step 5 above.

# Homing Profiles (continued)

#### **Profile with Overtravel Limit**

Figure R4.2 below shows the move profile generated by a CW Find Home command when you use the CW Overtravel Limit.

The profile is generated when you encounter an overtravel limit in the direction of travel. (In this example, hitting the CW limit while traveling in the CW direction.)



The SV160E2 will stop and issue an *Input Error* to your host if you activate the overtravel limit associated with travel in the opposite direction. i.e. Activating the CCW limit during a CW Find Home command. This can occur if the overtravel limits are not wired to the SV160E2 correctly, or if both overtravel limits are activated while the unit is trying to find the home position.

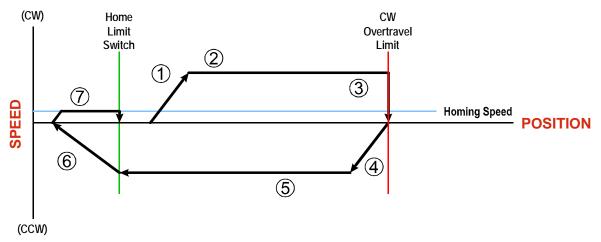


Figure R4.2 Profile with Overtravel Limit

- 1) Acceleration to the Programmed Speed
- 2) Run at the Programmed Speed
- 3) Hit CW Limit and stop, followed by a two second delay. The Immediate Stop Deceleration value is used to decelerate at this point. If this parameter equals zero, the motor stops without deceleration.
- 4) Acceleration to the Programmed Speed opposite to the requested direction.
- 5) Run opposite the requested direction until the Home Input transitions from Active to Inactive
- 6) Deceleration and stop, followed by a two second delay.
- 7) Return to the Home Input at the Homing Speed. (10% of the Programmed Speed.) Stop when the Home Input transitions from Inactive to Active.



If the overtravel limit is active when the Find Home Command is issued, the profile will begin at step 4.

# **Controlling Find Home Commands In Progress**

#### **Controlled Stops**

- ► The move completes without error.
- ➤ You issue a Hold Move command through the Network Output Data. This will abort the command and the axis will decelerate at the programmed rate until it stops. Note that Find Home commands cannot be resumed once held.

#### **Immediate Stops**

- > You issue an Immediate Stop command through the Network Input Data.
- > An inactive-to-active transition on an input configured as an E-Stop Input.
- ➤ The overtravel limit associated with travel in the opposite direction is activated. i.e. Activating the CCW limit during a CW Find Home command. This can occur if the overtravel limits are not wired to the SV160E2 correctly, or if both overtravel limits are activated while the unit is trying to find the home position.

# **CONFIGURATION MODE DATA FORMAT**

This chapter covers the formats of the Network Output Data used to configure the SV160E2 as well as the formats of the Network Input Data that contains the responses from the device.

## Modes of Operation

An SV160E2 has two operating modes, Configuration Mode and Command Mode. You switch between these modes by changing the state of a single bit in the Network Output Data.



Once in Command Mode, the drive must be disabled before the SV160E2 will accept new configuration data. If you send configuration data to the SV160E2 while in Command Mode with the drive enabled, the unit will send a Command Error response.

## **Configuration Mode**

Configuration Mode gives you the ability to select the proper configuration for your application without having to set any switches. The ladder logic needed to configure a unit is included in the sample programs available from AMCI. This method simplifies change over if the unit ever needs to be replaced.

A valid configuration can be saved to the unit's Flash memory and the SV160E2 will use this as a default configuration on every power up. If you use this method, you can still write down a new configuration to the unit at any time. The new configuration is stored in RAM and is lost on power down unless you issue a command to store the new configuration in Flash. If a configuration error exists on power up, the SV160E2 will switch to configuration mode and show the first parameter with an error.

#### **Command Mode**

This mode gives you the ability to program and execute moves, and reset errors when they occur. The command data formats are described in the following chapter.

## **Power Up Behavior**

An SV160E2 will power up in Configuration Mode if a configuration error exists. Valid configuration data can exist in several locations.

- 1) Configuration data is first read from flash memory.
- 2) If using EtherNet/IP with an EDS file, the SV160E2 is sent configuration data when it connects to the network. This data is used to configure the unit. (This data is used in place of any configuration that may be stored in flash memory.)
- 3) If using PROFINET, the SV160E2 is sent configuration data when it connects to the network. This data is used to configure the unit. (This data is used in place of any configuration that may be stored in flash memory.)

If the configuration data is valid, either retrieved from flash memory or written to it as part of the network connection process, the SV160E2 will power up in Command Mode. The SV160E2 will then check for valid network command data and will only enable the motor driver section if the Enable\_Driver bit is set.

## Data Format

An SV160E2 requires twenty bytes of Output Data as well as twenty bytes of Input Data. These bytes are divided between single and double precision integers. The Data Endian parameter in the configuration data controls the format of double precision integers.

## **Command Mode Data Formats**

When issuing commands to the SV160E2, there are several parameters that are larger than sixteen bits. These parameters are:

- ➤ Target Position
- Programmed Speed
- ► Stopping Distance
- Minimum Registration Move Distance
- > Position Preset Value
- > Position Unwind Value (used in Circular Virtual Axis Moves)

Likewise, when reading data back from an SV160E2 while it is in Command Mode, there are values that are larger than sixteen bits. These data values are:

- ► Motion Profile Position
- ➤ Motor Shaft (Encoder) Position
- ► Captured Encoder Position

By default, these thirty-two bit parameters and data values are written to and read from the SV160E2 using the 32-bit double integer format with little endian format. Little endian format is used by the EtherNet/IP protocol. A configuration parameter called Data Endian can be used to select big endian format. Big endian format is typically used by both Modbus TCP and PROFINET controllers, but you should refer to you PLC's documentation to verify the format used by your processor.

Examples of the formats are given below.

|      |         | 32 bit Signed Integer<br>Little Endian Format<br>(EtherNet/IP) |         | 32 bit Sigr<br>Big Endia<br>(PROFINET & | ned Integer<br>an Format<br>Modbus TCP) |
|------|---------|--|---------|---|---|
| N    | /alue   | First Word Second Word   |         | First Word                              | Second Word                             |
|      | 12      | 16#000C  | 16#0000 | 16#0000                                 | 16#000C                                 |
|      | -12     | 16#FFF4  | 16#FFFF | 16#FFFF                                 | 16#FFF4                                 |
| 1,2  | 34,567  | 16#D687  | 16#0012 | 16#0012                                 | 16#D687                                 |
| -7,6 | 554,321 | 16#344F  | 16#FF8B | 16#FF8B                                 | 16#344F                                 |

 Table R5.1
 Position Data Format Examples

## **Output Data Format**

The correct format for the Network Output Data when the SV160E2 is in Configuration Mode is shown below. EtherNet/IP, PROFINET, and Modbus TCP addresses are shown.

| EtherNet/IP<br>or PROFINET<br>Word | Modbus TCP<br>Register | Configuration Data       | Range                          |  |  |  |
|------------------------------------|------------------------|--------------------------|--------------------------------|--|--|--|
| 0                                  | 1024                   | Configuration Word 0     | See below                      |  |  |  |
| 1                                  | 1025                   | Configuration Word 1     | Reserved: Set to 0x0000        |  |  |  |
| 2                                  | 1026                   |                          |                                |  |  |  |
| 3                                  | 1027                   |                          |                                |  |  |  |
| 4                                  | 1028                   |                          |                                |  |  |  |
| 5                                  | 1029                   | Configuration Parameters |                                |  |  |  |
| 6                                  | 1030                   | Meaning and range depen  | ds on block written to SV160E2 |  |  |  |
| 7                                  | 1031                   |                          |                                |  |  |  |
| 8                                  | 1032                   |                          |                                |  |  |  |
| 9                                  | 1033                   |                          |                                |  |  |  |

Table R5.2 Network Output Data Format: Configuration Mode

#### **Configuration Word 0 Format**

## **Configuration Word 0**

15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00

RESERVED: Bit must equal zero.

Figure R5.1 Configuration Mode: Control Word Format

- Bit 15: Mode\_Select "1" for Configuration Mode Programming, "0" for Command Mode Programming.
- Bits 14 12: Reserved Must equal zero.
- **Bits 11 08: Configuration Command Number** These four bits define the Configuration Command that is being written to the SV160E2.
- Bits 07 04: Reserved Must equal zero.
- **Bits 03 00: Data Block Number** Programming configuration parameters require multiple associated blocks. These four bits are used to define the data block that is presently being written down to the SV160E2 as part of the command.


# **Configuration Commands**

| Configuration<br>Command<br>(Bits 11 - 08) | Description                                | Data Blocks<br>(Bits 03-00)  |  |
|--|--|--|--|
| 0000 (0x0)                                 | No Action                                  | Not used. Set to 0x0.  |  |
| 0001 (0x1)                                 | Read Extended Drive Status                 | Not used. Set to 0x0.  |  |
| 0010 (0x2)                                 | Read back Configuration<br>Parameter Block | 0x0: Not Used<br>0x1: Data Configuration Block<br>0x2: I/O Configuration Block<br>0x3: Motor Configuration Block<br>0x4: RESERVED<br>0x5: Velocity Control Loop Block<br>0x6: Position Control Loop Block<br>0x7 - 0xE: Reserved<br>0xF: Restore Factory Defaults to RAM |  |
| 0011 (0x3)                                 | RESERVED                                   | Not used. Set to 0x0.  |  |
| 01xx (0x4 - 0x7)                           | RESERVED                                   | Not used. Set to 0x0.  |  |
| 1000 (0x8)                                 | No Action                                  | Not used. Set to 0x0.  |  |
| 1001 (0x9)                                 | RESERVED                                   | Not used. Set to 0x0.  |  |
| 1010 (0xA)                                 | Write Configuration<br>Parameter Block     | 0x0: Not Used<br>0x1: Data Configuration Block<br>0x2: I/O Configuration Block<br>0x3: Motor Configuration Block<br>0x4: RESERVED<br>0x5: Velocity Control Loop Block<br>0x6: Position Control Loop Block<br>0x7 - 0x0E: Reserved<br>0xF: Save Configuration to Flash    |  |
| 1011 (0xB)                                 | RESERVED                                   | Not used. Set to 0x0.  |  |
| 11xx (0xC - 0xF)                           | RESERVED                                   | Not used. Set to 0x0.  |  |

Table R5.3 Configuration Command Values

## **Read Data Blocks**

#### **Extended Drive Status**

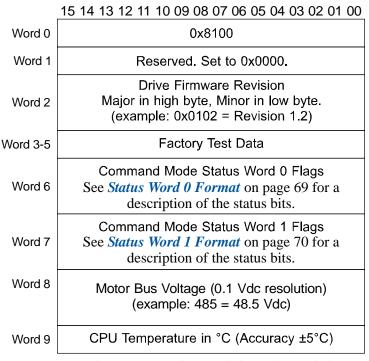

## Read Extended Drive Status Block

Figure R5.2 Configuration Mode: Extended Drive Status Block

## **Remaining Read Data Blocks**

The remaining Read Data Block commands are used to report the present configuration data from the SV160E2 to the host controller. The correct command word has to be in Configuration Word 0 and they are shown in the table below. All other words are ignored and should be set to zero. Once accepted, the SV160E2 will respond by sending the requested data in its response. The format of the requested data is the same as the Write Data Blocks listed in the following sections.


| Configuration<br>Word Value | Description                                 |
|-----------------------------|---|
| 0x8201                      | Data Configuration Values                   |
| 0x8202                      | I/O Configuration Values                    |
| 0x8203                      | Motor Configuration Values                  |
| 0x8205                      | Velocity Control Loop Values                |
| 0x8206                      | Position Control Loop Values                |
| 0x820F                      | Restore Factory Defaults to $RAM^{\dagger}$ |

<sup>†</sup> Factor Defaults are restored to RAM memory. You must issue a Save Configuration to Flash command to store these values for use after a power cycle. (See page 53.)

Table R5.4 Additional Read Data Blocks


## Write Data Blocks

**Block 1: Data Configuration Block** 

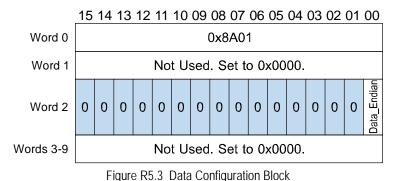

**Bit 0:** Data\_Endian – "0" for little endian format of thirty-two bit words. (EtherNet/IP default) "1" for big endian format of thirty-two bit words. (Modbus TCP and PROFINET default)

## **Block 2: I/O Configuration Block**

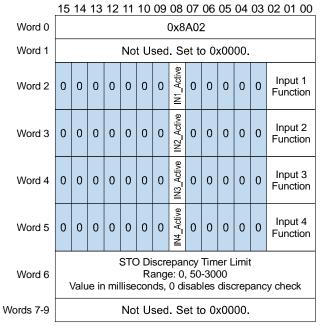

#### I/O Configuration Block



- **Bit 8:** Input Active State Determines the active state of the associated input. Set to "0" if your sensor has Normally Closed (NC) contacts and the input is active when there is no current flow through it. Set to "1" if your sensor has Normally Open (NO) contacts and current flows through the input when it is active. Inputs 3 and 4 on the SV160E2-STO drives must have their active state bits set to "1".
- **Bits 3 0: Input Function -** Sets the functionality of the associated input. See table R5.5 below. Note that, with the exception of a General Purpose Input, each input function can only be assigned to one input. Inputs 3 and 4 on the SV160E2-STO drives must have their functionality set to General Purpose ('000').

# Write Data Blocks (continued)

|   | Bits |   |  |   |  |  |
|---|------|---|--|---|--|--|
| 2 | 1    | 0 | Function Available On  |   |  |  |
| 0 | 0    | 0 | General Purpose Input<br>(Use for IN3 and IN4 on<br>SV160E2-STO)   | The input is not used in any of the functions of the SV160E2, but it's status is reported in the Network Data. This allows the input to be used as a discrete DC input to the host controller. IN3 and IN4 on an SV160E2-STO must be set as General Purpose Inputs. |  |  |
| 0 | 0    | 1 | CW Limit   | Input defines the mechanical end point for CW motion.   |  |  |
| 0 | 1    | 0 | CCW Limit Input defines the mechanical end point for CCW motion  |   |  |  |
| 0 | 1    | 1 | Capture Encoder Value & An inactive-to-active state transition will capture the encoder position value and also trigger an Indexed M if one is pending in the SV160E2. |   |  |  |
| 1 | 0    | 0 | Stop Jog or<br>Registration MoveTriggers a controlled stop on a Jog or Registration Move<br>and captures the encoder value at the trigger event.                       |   |  |  |
| 1 | 0    | 1 | Emergency Stop All motion is immediately stopped when this input mak an inactive-to-active transition.   |   |  |  |
| 1 | 1    | 0 | Home Used to define the home position of the machine.  |   |  |  |
| 1 | 1    | 1 | Invalid Combination This bit combination is reserved.  |   |  |  |

Table R5.5 Input Function Selections

## **Block 3: Motor Configuration Block**

## **Motor Configuration Block**

|        | 15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00   |
|--------|---|
| Word 0 | 0x8A03  |
| Word 1 | Reserved. Must equal zero.  |
| Word 2 | Reserved. Must equal zero.  |
| Word 3 | Reserved. Must equal zero.  |
| Word 4 | Steps per Revolution. Must equal 16,384.  |
| Word 5 | Reserved. Must equal zero.  |
| Word 6 | Immediate Stop Deceleration<br>0, 1,500 to 15,999   |
| Word 7 | Continuous Torque Limit (0.50 Nm max.)<br>Range of 10 to 50 (0.10 to 0.50 Nm)               |
| Word 8 | Peak Torque Limit (1.30 Nm max.)<br>Range of (Word 7 Value) to 130                          |
| Word 9 | Over Voltage Threshold (55 to 100 V)<br>Range of 0, 550 to 1000. (0 disables functionality) |

15 14 13 13 11 10 00 08 07 06 05 04 03 03 01 00

Figure R5.5 Motor Configuration Block

# Write Data Blocks (continued)

#### **Block 5: Velocity Control Loop Configuration Block**

|           | releasily comgaration Brook   |
|-----------|---|
|           | 15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00                     |
| Word 0    | 0x8A05  |
| Word 1    | Reserved. Must equal zero.  |
| Word 2    | Reserved. Must equal zero.  |
| Word 3    | Velocity Loop Proportional Gain (KP_VEL)<br>Range of 0 to 32,767    |
| Word 4    | Velocity Loop Integral Gain (KI_VEL)<br>Range of 0 to 32,767        |
| Word 5    | Reserved. Must equal zero.  |
| Word 6    | Velocity Feedback Low Pass Filter<br>Range of 0 to 5 (milliseconds) |
| Words 7-9 | Reserved. Must equal zero.  |
|           |   |

#### **Velocity Configuration Block**

Figure R5.6 Velocity Control Loop Configuration Block

Note that the motor inertia of an SV160E2 is  $48 \times 10^{-6} \text{ kg} \cdot \text{m}^2$ . AMCI suggests starting with a Velocity Loop Integral Gain, (word 4), of zero. This makes it easier to tune the position control loop later. With the Velocity Loop Integral Gain set to zero, the table below shows reasonable defaults to use for the Velocity Loop Proportional Gain, (word 3), based on the value entered into the Velocity Feedback Low Pass Filter, (word 6). These values should work for most applications.

|                        | Velocity Loop Proportional Gain          |       |       |       |       |       |
|------------------------|--|-------|-------|-------|-------|-------|
| Load Inertia:          | Velocity Feedback Low Pass Filter Values |       |       |       |       |       |
| Motor Inertia<br>Ratio | 0  | 1     | 2     | 3     | 4     | 5     |
| Unloaded               | 5561                                     | 2780  | 1854  | 1390  | 1112  | 927   |
| 1:1                    | 11122                                    | 5561  | 3707  | 2780  | 2224  | 1854  |
| 2:1                    | 16683                                    | 8341  | 5561  | 4171  | 3337  | 2780  |
| 3:1                    | 22244                                    | 1112  | 7415  | 5561  | 4449  | 3707  |
| 4:1                    | 27805                                    | 13902 | 9268  | 6951  | 5561  | 4634  |
| 5:1                    | $\mathrm{DNU}^\dagger$                   | 16683 | 11122 | 8341  | 6673  | 5561  |
| 6:1                    | DNU                                      | 19463 | 12975 | 9732  | 7785  | 6488  |
| 7:1                    | DNU                                      | 22244 | 14829 | 11122 | 8897  | 7415  |
| 8:1                    | DNU                                      | 25024 | 16683 | 12512 | 10010 | 8341  |
| 9:1                    | DNU                                      | 27805 | 18536 | 13902 | 11112 | 9268  |
| 10:1                   | DNU                                      | 30585 | 20390 | 15292 | 12234 | 10195 |
| 12:1                   | DNU                                      | DNU   | 24097 | 18073 | 14458 | 12049 |
| 14:1                   | DNU                                      | DNU   | 27805 | 20853 | 16683 | 13902 |
| 16:1                   | DNU                                      | DNU   | 31512 | 23634 | 18907 | 15756 |
| 18:1                   | DNU                                      | DNU   | DNU   | 26414 | 21131 | 17610 |
| 20:1                   | DNU                                      | DNU   | DNU   | 29195 | 23356 | 19463 |

† DNU: Do Not Use

Table R5.6 Velocity Loop Proportional Gain Values

# Write Data Blocks (continued)

## **Block 6: Position Control Loop Configuration Block**

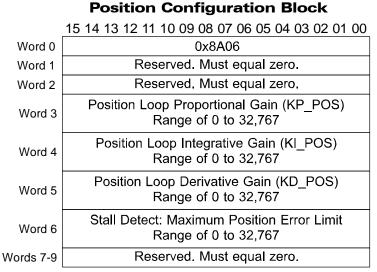


Figure 00.1 Velocity Control Loop Configuration Block

The table below shows reasonable defaults to use for position control loop values. These values are based on how closely the SV160E2 must track the position. This is often referred to as the shaft's "stiffness". As the stiffness is increased, the SV160E2 will react faster to small positional errors. This results in better positional tracking, but may result in more ringing in response to a position change and motor shaft jitter while at rest.

|   | KP_POS | KI_POS | KD_POS |
|---|--------|--------|--------|
|   | 728    | 54     | 0      |
| ss<br>ines:   | 874    | 78     | 0      |
| Shaft Stiffness<br>creasing Stiffness<br><=================================== | 1092   | 121    | 0      |
|   | 1456   | 216    | 0      |
| Shaft St<br>Increasing  | 2185   | 485    | 0      |
| Sh<br>∩cre  | 4369   | 1942   | 0      |
| I   | 6554   | 4369   | 0      |

Table R5.7 Velocity Loop Values

## **Block 15: Save Configuration To Flash Block**

## Save Configuration to Flash Block

15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00

| Word 0    | 0x8A0F                   |
|-----------|--------------------------|
| Words 1-9 | Not Used. Set to 0x0000. |

Figure R5.7 Save Configuration to Flash Block

NOTE ≽

This command block will also save any calculated position offsets from a preset command or homing operation.

## Input Data Format

The format of the Network Input Data when the SV160E2 is in Configuration Mode is dependent on the last configuration command written to the unit. With the exception of the first two words, the data format of the response is the same as that of the *Write Data Blocks* that are listed starting on page 50.

## **Configuration Mode Input Word 0**

#### Configuration Mode Input Word 0

| <u>15 14 13 1</u>                    | 2 11 10 | 09 08                    | 07 06 | 6 O5  | 04  | 03  | 02 | 01 | 00 |
|--------------------------------------|---------|--------------------------|-------|-------|-----|-----|----|----|----|
| Mode_Flag<br>Module_OK<br>Config_Err |         | ata val<br>configu<br>tc |       | , plc | ock | wri |    |    |    |

Figure R5.8 Configuration Mode Input Word 0

- **Bit 15:** Mode\_Flag Set to "1" when the SV160E2 is writing a configuration data response to the host controller. Reset to "0" when writing a command data response to the host controller.
- **Bit 14:** Module\_OK Set to "1" when the SV160E2 is operating without error. Reset to "0" when the SV160E2 is experiencing a hardware issue.
- **Bit 13: Config\_Error** Set to "1" when the last configuration block written to the SV160E2 has an error, or when you attempt to exit configuration mode and a configuration error still exists.
- Bit 12: Reserved Will always equal zero.
- **Bits 11- 00: Command/Data Block Numbers –** Once the SV160E2 responds to the configuration block, the unit will echo the Command and Data Block numbers in these bits. In the case of Write Configuration blocks, if there is an error in the data, bit 13 of this word is set to "1" and additional data is available in Input Word 1. Table R5.8 below shows the available bit patterns.

| Configuration<br>Command<br>(Bits 11 - 08) | Description                                | Data Blocks<br>(Bits 03-00)   |  |  |
|--|--|---|--|--|
| 0000 (0x0)                                 | No Action                                  | Not used. Set to 0x0.   |  |  |
| 0001 (0x1)                                 | Read Extended Drive Status                 | Not used. Set to 0x0.   |  |  |
| 0010 (0x2)                                 | Read back Configuration<br>Parameter Block | 0x0: Not Used<br>0x1: Data Configuration Block<br>0x2: I/O Configuration Block<br>0x3: Motor Configuration Block<br>0x4: RESERVED<br>0x5: Velocity Control Loop Block<br>0x6: Position Control Loop Block<br>0xF: Restore Factory Defaults to RAM |  |  |
| 1000 (0x8)                                 | No Action                                  | Not used. Set to 0x0.   |  |  |
| 1001 (0x9)                                 | Clear Drive Status / Error Flags           | Not used. Set to 0x0.   |  |  |
| 1010 (0xA)                                 | Write Configuration<br>Parameter Block     | 0x0: Not Used<br>0x1: Data Configuration Block<br>0x2: I/O Configuration Block<br>0x3: Motor Configuration Block<br>0x4: RESERVED<br>0x5: Velocity Control Loop Block<br>0x6: Position Control Loop Block<br>0xF: Save Configuration to Flash     |  |  |

Table R5.8 Configuration Command Values

## **Configuration Mode Input Word 1**

#### Configuration Mode Input Word 1 15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00 0 0 0 0 0 ACK CODE DATA BLOCK W/ ERROR DATA WORD W/ ERROR

Figure R5.9 Configuration Mode Input Word 1

Bits 11- 08: Acknowledgement Code – An Acknowledgement Code is written in response to the last configuration block written to the SV160E2.

| Acknowledgement<br>Code | Description  |
|-------------------------|--|
| 0000 (0x0)              | No Configuration blocks have been written to the SV160E2 since a power cycle, or the last Configuration Command was "No Action" (See table R5.3, page 48.) |
| 0001 (0x1)              | The last read or write configuration block completed successfully.   |
| 1000 (0x8)              | The last write configuration block command contained an error in the data. Bits 7 through 0 of this word contains diagnostic data.                         |
| 1001 (0x9)              | The last write configuration block command used an invalid command or data block code. See table R5.3, page 48 for a list of valid commands.               |
| 1010 (0xA)              | Save to flash memory error. Cycle power to the SV160E2 to clear this error.  |

 Table R5.9 Configuration Command Values

- **Bits 07- 04: Data Block with Error** These four bits equal "0000" if the Acknowledgement Code equals zero or one. If there is an error, these four bits contains the Data Block number that has the error.
- **Bits 03- 00: Data Word with Error** These four bits equal "0000" if the Acknowledgement Code equals zero or one. If there is an error, these four bits contains the number of the word that has the error. Refer to the data block formats given in the *Write Data Blocks* section of this chapter starting on page 50.

## Invalid Configurations

The following configurations are invalid:

- 1) Setting any of the reserved bits in the configuration words.
- 2) Setting the motor steps per turn to any value other than 16,384.
- 3) Setting any parameter to a value outside of its valid range.
- 4) You configure two or more inputs to have the same function, such as two CW Limit Switches. (An error does not occur if both are configured as General Purpose Inputs.)
- 5) Setting the Input Configuration bits for any input to "111". See table R5.5 on page 51 for more information.
- 6) On SV160E2-STO units, programming inputs 3 or 4 to any other function than General Purpose Input with an Active High state setting.

Notes

# **COMMAND MODE DATA FORMAT**

This chapter covers the formats of the Network Output Data used to command the SV160E2 and the formats of the Network Input Data that contains the responses from the device. An SV160E2 requires twenty bytes of Output Data as well as twenty bytes for Input Data.

## **Command Bits Must Transition**

Commands are only accepted when a command bit makes a  $0 \rightarrow 1$  transition and only one bit can make this transition at a time. (All other bits must be zero.) The easiest way to do this is to write a value of zero into the Command Word 0 before writing the next command.

This condition also applies when switching from Configuration Mode to Command Mode. If a bit is set in Configuration Word 0 while in Configuration Mode and you switch to Command Mode with the same bit set, the command will not occur because the bit must transition between writes to the unit.

The command bits are split between 2 sixteen bit words, Command Word 0 and Command Word 1. Only one bit in Command Word 0 can make a  $0 \rightarrow 1$  transition at a time. All other bits in Command Word must be zero.

## Data Format

An SV160E2 requires twenty bytes of Output Data as well as twenty bytes of Input Data. These bytes are a mix of sixteen and thirty-two bit integers.

EtherNet/IP uses the little endian format for thirty-two bit integers, while PROFINET and Modbus TCP uses big endian format by default. The endian format used by the SV160E2 is programmable in the configuration data using the Data\_Endian parameter. The default is little endian.

## **Output Data Format**

The following table shows the format of the output network data words when writing command data to the SV160E2. EtherNet/IP, PROFINET, and Modbus TCP address are shown.

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                                   |
|------------------------------------|------------------------|--|
| 0                                  | 1024                   | Command Word 0                             |
| 1                                  | 1025                   | Command Word 1                             |
| 2                                  | 1026                   |  |
| 3                                  | 1027                   |  |
| 4                                  | 1028                   | Command Parameters                         |
| 5                                  | 1029                   | Wand meaning demands                       |
| 6                                  | 1030                   | Word meaning depends<br>on the command set |
| 7                                  | 1031                   | to the SV160E2                             |
| 8                                  | 1032                   |  |
| 9                                  | 1033                   |  |

Figure R6.1 Command Data Format

## **Command Word 0**

#### **Command Word 0**

15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00 CCW Pos Jog\_CCW Е SC Ř CW <u>≥</u> ≧ ≧ MODE I-Stop Resm\_I 0 0 0 0 RSet Home Hold Home\_ Prst Rel Abs \_gol

Figure R6.2 Command Word 0 Format

- Bit 15: Mode\_Select "1" for Configuration Mode Programming "0" for Command Mode Programming.
- Bits 14 11: Reserved Must equal zero.
- **Bit 10:** Reset\_Errors When this bit makes a 0→1 transition, the SV160E2 will clear all command and input errors and reset the *Move\_Complete* bit in the Network Input Data. This bit does not clear a configuration error or the *Position\_Invalid* status bit.
- Bit 9: Preset\_Position When this bit makes a 0→1 transition, the SV160E2 will preset the Profile Position and the Encoder Position to the value specified in the command. The *Move\_Complete* and *Position\_Invalid* bits in the Network Input Data are reset to "0".
- Bit 8: Jog\_CCW When this bit makes a 0→1 transition, the SV160E2 will run a Jog Move in the counter-clockwise direction. The full explanation of a *CW/CCW Jog Move* can be found starting on page 31.
  - Registration\_Move Command Word 1, Bit 7: When this bit equals "0", and a Jog Move command is issued, it will run as a standard Jog Move. When this bit equals "1" and a Jog Move command is issued, the move will run as a Registration Move.
  - ➤ Axis Follower Mode Command Word 1, Bit 12: If this bit equal "1" when the Registration\_Move bit equals "0", the SV160E2 will enter its Virtual Axis Follower Mode when the Jog Move bit makes a 0→1 transition.
- **Bit 7:**  $Jog_CW$  When this bit makes a 0 1 transition, the SV160E2 will run a Jog Move in the clockwise direction. The full explanation of a *CW/CCW Jog Move* can be found starting on page 31.
  - Registration\_Move Command Word 1, Bit 7: When this bit equals "0", and a Jog Move command is issued, it will run as a standard Jog Move. When this bit equals "1" and a Jog Move command is issued, the move will run as a Registration Move.
  - ➤ Axis Follower Mode Command Word 1, Bit 12: If this bit equal "1" when the Registration\_Move bit equals "0", the SV160E2 will enter its Virtual Axis Follower Mode when the Jog Move bit makes a 0→1 transition.
- Bit 6: Find\_Home\_CCW When this bit makes a 0→1 transition, the SV160E2 will attempt to move to the Home Limit Switch in the counter-clockwise direction. A full explanation of homing can be found in the *Homing an SV160E2* reference chapter starting on page 41.
- Bit 5: Find\_Home\_CW When this bit makes a 0→1 transition, the SV160E2 will attempt to move to the Home Limit Switch in the clockwise direction. A full explanation of homing can be found in the *Homing an SV160E2* reference chapter starting on page 41.
- Bit 4: Immediate\_Stop When this bit makes a 0→1 transition, the SV160E2 will stop all motion at the deceleration rate programmed with the Immediate Stop Deceleration value. (The Immediate Stop Deceleration is programmed as part of the configuration data, *Block 3: Motor Configuration Block*, as described on page 51.) If the position error during the stop does not exceed the Maximum Position Error Limit value, the motor will stop at the Profile Position value. If the position error during the stop exceeds the Maximum Position Error Limit value, the SV160E2 will disable the motor and issue a Position\_Invalid fault. The Maximum Position Error Limit value is programmed as part of the *Block 6: Position Control Loop Configuration Block* found on page 53.

## Command Word 0 (continued)

- Bit 3: Resume\_Move When this bit makes a 0→1 transition, the SV160E2 will resume a move that you previously placed in a hold state. Use of the Resume\_Move and Hold\_Move bits can be found in the *Controlling Moves In Progress* section of this manual starting on page 36. Note that a move in its hold state need not be resumed. The move is automatically cancelled if another move is started in its place.
- Bit 2: Hold\_Move When this bit makes a 0→1 transition, the SV160E2 will place a move in its hold state. The move will decelerate and stop. The move can be completed by using the Resume\_Move bit. Use of the Hold\_Move and Resume\_Move bits can be found in the *Controlling Moves In Progress* section of this manual starting on page 36.
- **Bit 1:** Relative\_Move When this bit makes a 0→1 transition, the SV160E2 will perform a Relative Move using the data in the rest of the Command Data. The full explanation of a *Relative Move* can be found starting on page 29.
- **Bit 0:** Absolute\_Move When this bit makes a 0→1 transition, the SV160E2 will perform an Absolute Move using the data in the rest of the Command Data. The full explanation of an *Absolute Move* can be found starting on page 30.

## **Command Word 1**

| 15        | 14           | 13 | 12            | 11 | 10 | 09 | 08        | 07       | 06 | 05            | 04 | 03 | 02 | 01           | 00 |
|-----------|--------------|----|---------------|----|----|----|-----------|----------|----|---------------|----|----|----|--------------|----|
| En_Driver | Preset_on_En | 0  | V_Axis_Follow | 0  | 0  | 0  | Index_Cmd | Reg_Move | 0  | Save_to_Flash | 0  | 0  | 0  | Motor_Torque | 0  |

**Command Word 1** 

Figure R6.3 Command Word 1 Format

- Bit 15: Enable\_Driver "0" to disable the motor current, A 0→1 transition attempts to enable motor current. A valid configuration must be written to the SV160E2 before the driver can be enabled. Additionally, the Encoder Position must be within the range of Profile Position ± 4,096 counts or the Preset\_on\_Enable bit, bit 14 of this word, must be set to "1".
- Bit 14: Preset\_on\_Enable Only used when the Enable\_Driver bit makes a 0→1 transition. If this bit is set during a transition on the Enable\_Driver bit, the Profile Position is set equal to the current Encoder Position when the motor is enabled. If this bit is not set during a transition on the Enable\_Driver bit, the Encoder Position must be within the range of Profile Position ± 4,096 counts to enable the driver. Once enabled, the *Move\_Complete* bit in the Network Input Data is reset to "0".
- Bit 13: Reserved Must equal "0".
- **Bit 12:** Virtual\_Axis\_Follower Set to "1" when using the SV160E2 as an axis follower. The Jog\_CCW and Jog\_CW bits are used to control when the move actually occurs.
- Bits 11-9: Reserved Must equal "0".
- **Bit 8:** Indexed\_Command If this bit is set when a move command is issued, the SV160E2 will not run the move immediately, but will instead wait for an inactive-to-active transition on an input configured as a *Start Indexed Move* input. The move command data, including this bit, must remain in the Network Output Registers while performing an Indexed Move.

## Command Word 1 (continued)

- **Bit 7:** Registration\_Move When this bit equals "0", and a Jog Move command is issued, it will run as a standard Jog Move. When this bit equals "1" and a Jog Move command is issued, the move will run as a Registration Move.
- **Bit 6:** Reserved Must equal "0".
- Bit 5: Save\_to\_Flash This bit can be used to store the position offset to flash. (The position offset is generated by the Preset Position command or a homing operation.)
  - ➤ When using this bit to save the calculated offset value to flash memory, this bit must be set when the Preset Position command is issued. (Bit 14 of *Command Word 0* is set to "1", see page 58.) If the offset is stored without error, the unit will respond by setting the Acknowledge bit. (Bit 13 of *Status Word 1 Format*, see page 70.)
  - > This bit will also save the present configuration data to flash memory.
- Bits 4-2: Reserved Must equal "0".
- **Bit 1:** Set Maximum Move Torque Reset to "0" to use the Peak and Continuous Torque values specified in the Configuration Data for the move. Set to "1" to program the maximum Move Torque value in word 8 of the command block. This value is used in place of the Peak and Continuous Torque values for this move.



Except for jog and virtual axis moves, the torque is set when the move is started. The torque can only be programmed as part of the move command.

**Bit 0:** Reserved – Must equal "0".

## **Command Blocks**

The following section lists the output data format for the sixteen different commands.

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                 | Units        | Range   |
|------------------------------------|------------------------|--------------------------|--------------|---|
| 0                                  | 1024                   | Command Word 0           |              | 16#0001   |
| 1                                  | 1025                   | Command Word 1           |              | See pg. 59  |
| 2                                  | 1026                   | 32 bit Absolute          | Steps        | Range of -1,073,741,824   |
| 3                                  | 1027                   | Target Position          | Steps        | to +1,073,741,823   |
| 4                                  | 1028                   | 32 bit Programmed Speed  | Steps/Second | Range of 1 to 1,048,575   |
| 5                                  | 1029                   | 32 bit i togrammed Speed | Steps/Second | Kange 01 1 to 1,048,575   |
| 6                                  | 1030                   | Acceleration             | Steps/sec/ms | 1 to 15,999   |
| 7                                  | 1031                   | Deceleration             | Steps/sec/ms | 1 to 15,999   |
| 8                                  | 1032                   | Maximum Move Torque      | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |
| 9                                  | 1033                   | Reserved                 |              | Must be 0   |

## Absolute Move

Table R6.1 Absolute Move Command Block

#### **Relative Move**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                        | Units        | Range   |
|------------------------------------|------------------------|---------------------------------|--------------|---|
| 0                                  | 1024                   | Command Word 0                  |              | 16#0002   |
| 1                                  | 1025                   | Command Word 1                  |              | See pg. 59  |
| 2                                  | 1026                   | 32 bit Relative Target Position | Steps        | Range of -1,073,741,824   |
| 3                                  | 1027                   | 52 bit Relative Target Position | Steps        | to +1,073,741,823   |
| 4                                  | 1028                   | 32 bit Programmed Speed         | Steps/Second | Range of 1 to 1,048,575   |
| 5                                  | 1029                   | 32 bit Flogrammed Speed         | steps/second | Kange of 1 to 1,048,575   |
| 6                                  | 1030                   | Acceleration                    | Steps/sec/ms | 1 to 15,999   |
| 7                                  | 1031                   | Deceleration                    | Steps/sec/ms | 1 to 15,999   |
| 8                                  | 1032                   | Maximum Move Torque             | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |
| 9                                  | 1033                   | Reserved                        |              | Must be 0   |

Table R6.2 Relative Move Command Block

#### Hold Move

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function       | Units | Range          |
|------------------------------------|------------------------|----------------|-------|----------------|
| 0                                  | 1024                   | Command Word 0 |       | 16#0004        |
| 1                                  | 1025                   | Command Word 1 |       | See pg. 59     |
| 2                                  | 1026                   | Unused         |       | See Note Below |
| 3                                  | 1027                   | Unused         |       | See Note Below |
| 4                                  | 1028                   | Unused         |       | See Note Below |
| 5                                  | 1029                   | Unused         |       | See Note Below |
| 6                                  | 1030                   | Unused         |       | See Note Below |
| 7                                  | 1031                   | Unused         |       | See Note Below |
| 8                                  | 1032                   | Unused         |       | See Note Below |
| 9                                  | 1033                   | Unused         |       | See Note Below |

 Table R6.3 Hold Move Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

#### **Resume Move**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                | Units        | Range   |
|------------------------------------|------------------------|-------------------------|--------------|---|
| 0                                  | 1024                   | Command Word 0          |              | 16#0008   |
| 1                                  | 1025                   | Command Word 1          |              | See pg. 59  |
| 2                                  | 1026                   | Unused                  |              | See Note Below  |
| 3                                  | 1027                   | Unused                  |              | See Note Below  |
| 4                                  | 1028                   | 32 bit Programmed Speed | Steps/Second | Range of 1 to 1,048,575   |
| 5                                  | 1029                   | 52 bit Flogrammed Speed | Steps/Second | Kange of 1 to 1,048,575   |
| 6                                  | 1030                   | Acceleration            | Steps/sec/ms | 1 to 15,999   |
| 7                                  | 1031                   | Deceleration            | Steps/sec/ms | 1 to 15,999   |
| 8                                  | 1032                   | Maximum Move Torque     | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |
| 9                                  | 1033                   | Reserved                |              | Must be 0   |

 Table R6.4
 Resume Move Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command. This is typically the case when resuming a move, the words are listed as "Unused" to highlight that the target position of a held move cannot be changed when the move is resumed.

#### **Immediate Stop**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function       | Units | Range          |
|------------------------------------|------------------------|----------------|-------|----------------|
| 0                                  | 1024                   | Command Word 0 |       | 16#0010        |
| 1                                  | 1025                   | Command Word 1 |       | See pg. 59     |
| 2                                  | 1026                   | Unused         |       | See Note Below |
| 3                                  | 1027                   | Unused         |       | See Note Below |
| 4                                  | 1028                   | Unused         |       | See Note Below |
| 5                                  | 1029                   | Unused         |       | See Note Below |
| 6                                  | 1030                   | Unused         |       | See Note Below |
| 7                                  | 1031                   | Unused         |       | See Note Below |
| 8                                  | 1032                   | Unused         |       | See Note Below |
| 9                                  | 1033                   | Unused         |       | See Note Below |

 Table R6.5
 Immediate Stop Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

## **Find Home CW**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                | Units        | Range   |
|------------------------------------|------------------------|-------------------------|--------------|---|
| 0                                  | 1024                   | Command Word 0          |              | 16#0020   |
| 1                                  | 1025                   | Command Word 1          |              | See pg. 59  |
| 2                                  | 1026                   | Unused                  |              | See Note Below  |
| 3                                  | 1027                   | Unused                  |              | See Note Below  |
| 4                                  | 1028                   | 32 bit Programmed Speed | Steps/Second | Range of 1 to 1,048,575   |
| 5                                  | 1029                   | 52 bit Flogrammed Speed | Steps/Second | Kange of 1 to 1,048,575   |
| 6                                  | 1030                   | Acceleration            | Steps/sec/ms | 1 to 15,999   |
| 7                                  | 1031                   | Deceleration            | Steps/sec/ms | 1 to 15,999   |
| 8                                  | 1032                   | Maximum Move Torque     | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |
| 9                                  | 1033                   | Reserved                |              | Must be 0   |

Table R6.6 Find Home CW Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

## Find Home CCW

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                | Units        | Range   |  |  |  |
|------------------------------------|------------------------|-------------------------|--------------|---|--|--|--|
| 0                                  | 1024                   | Command Word 0          |              | 16#0040   |  |  |  |
| 1                                  | 1025                   | Command Word 1          |              | See pg. 59  |  |  |  |
| 2                                  | 1026                   | Unused                  |              | See Note Below  |  |  |  |
| 3                                  | 1027                   | Unused                  |              | See Note Below  |  |  |  |
| 4                                  | 1028                   | 32 bit Programmed Speed | Stops/Second | Paper of 1 to $1.048575$  |  |  |  |
| 5                                  | 1029                   | 52 bit Flogrammed Speed | Steps/Second | Range of 1 to 1,048,575   |  |  |  |
| 6                                  | 1030                   | Acceleration            | Steps/sec/ms | 1 to 15,999   |  |  |  |
| 7                                  | 1031                   | Deceleration            | Steps/sec/ms | 1 to 15,999   |  |  |  |
| 8                                  | 1032                   | Maximum Move Torque     | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |  |  |  |
| 9                                  | 1033                   | Reserved                |              | Must be 0   |  |  |  |

 Table R6.7
 Find Home CCW Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

## Jog CW

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                | Units        | Range   |
|------------------------------------|------------------------|-------------------------|--------------|---|
| 0                                  | 1024                   | Command Word 0          |              | 16#0080   |
| 1                                  | 1025                   | Command Word 1          |              | See pg. 59<br>Bit 7 must equal "0"                                |
| 2                                  | 1026                   | Unused                  |              | See Note Below  |
| 3                                  | 1027                   | Unused                  |              | See Note Below  |
| 4                                  | 1028                   | 22 hit Programmed Speed | Stans/Sacond | Paper of 1 to $1.048575$  |
| 5                                  | 1029                   | 32 bit Programmed Speed | Steps/Second | Range of 1 to 1,048,575   |
| 6                                  | 1030                   | Acceleration            | Steps/sec/ms | 1 to 15,999   |
| 7                                  | 1031                   | Deceleration            | Steps/sec/ms | 1 to 15,999   |
| 8                                  | 1032                   | Maximum Move Torque     | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |
| 9                                  | 1033                   | Reserved                |              | Must be 0   |

 Table R6.8 Jog Move CW Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

## **Registration Move CW**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                    | Units        | Range                              |  |  |  |
|------------------------------------|------------------------|-----------------------------|--------------|------------------------------------|--|--|--|
| 0                                  | 1024                   | Command Word 0              |              | 16#0080                            |  |  |  |
| 1                                  | 1025                   | Command Word 1              |              | See pg. 59<br>Bit 7 must equal "1" |  |  |  |
| 2                                  | 1026                   | 32 bit Stopping Distance    | Store        | Range of 1 to 1,073,741,823        |  |  |  |
| 3                                  | 1027                   | 52 bit Stopping Distance    | Steps        | Kange of 1 to 1,075,741,825        |  |  |  |
| 4                                  | 1028                   | 32 bit Programmed Speed     | Stans/Second | <b>D</b> oppose of 1 to $1.049575$ |  |  |  |
| 5                                  | 1029                   | 32 bit Flogrammed Speed     | Steps/Second | Range of 1 to 1,048,575            |  |  |  |
| 6                                  | 1030                   | Acceleration                | Steps/sec/ms | 1 to 15,999                        |  |  |  |
| 7                                  | 1031                   | Deceleration                | Steps/sec/ms | 1 to 15,999                        |  |  |  |
| 8                                  | 1032                   | 32 bit Minimum Registration | Stops        | Range of 0 to                      |  |  |  |
| 9                                  | 1033                   | Move Distance               | Steps        | +1,073,741,823                     |  |  |  |

Table R6.9 Registration Move CW Command Block

#### **Axis Follower Moves**

The Axis Follower Moves requires a controller with the capacity for motion axis programming. The following is table is offered as a trouble shooting aid if you need to decode the data being sent to the SV160E2.

| EtherNet/IP<br>or PROFINET<br>Word | Modbus TCP<br>Register | Function                  | Units         | Range  |  |  |
|------------------------------------|------------------------|---------------------------|---------------|--|--|--|
| 0                                  | 1024                   | Command Word 0            |               | 16#0080 or 16#0100                           |  |  |
| 1                                  | 1025                   | Command Word 1            |               | 16#1000                                      |  |  |
| 2                                  | 1026                   | 32 bit Position Value     | Stops         | Range of -1,073,741,824<br>to +1,073,741,823 |  |  |
| 3                                  | 1027                   | 52 bit Position value     | Steps         | to +1,073,741,823                            |  |  |
| 4                                  | 1028                   | 32 bit Programmed Speed   | Steps/Second  | Range of ±1,048,575                          |  |  |
| 5                                  | 1029                   | 32 bit Programmed Speed   | Steps/Second  | Range of $\pm 1,040,575$                     |  |  |
| 6                                  | 1030                   | Acceleration              | Steps/ms/sec  | Range of ±15,999                             |  |  |
| 7                                  | 1031                   | Deceleration              | Steps/ms/sec  | 1 to 15,999                                  |  |  |
| 8                                  | 1032                   | 32 bit Unwind Value       | Steps         | 0, 1,024 to 1,073,741,824                    |  |  |
| 9                                  | 1033                   | or<br>Maximum Move Torque | or<br>0.01 Nm | or<br>0, 10 to 130                           |  |  |

Table R6.10 Axis Follower Move Command Block

When the command is accepted, the value in words 8 and 9 determine the type of move. If the value equals zero, the move is treated as a linear axis follower. If the value is between 1,024 and 1,073,741,824, the move is treated as a circular axis follower. Once the move has begun, the type of follower move cannot be changed.

Once the command is accepted, the *Stopped* bit (Word 0, bit 3 in the Input Data), is reset to "0" and remains zero as long as the axis follower command remains active. It will not be reset to zero if the position from the master axis stops changing. Use the *Moving\_CW* and *Moving\_CCW* bits (Word 0, bits 0 and 1 in the Input Data), to determine when motion from the SV160E2 is occurring.

When the command is accepted, the acceleration programmed in word 6 is used to accelerate to the present speed of the move. Once this speed is achieved, the SV160E2 will use the value in word 6 to determine how quickly it reacts to the changes in position from the master axis. (Once the SV160E2 initially accelerates to the preset speed of the virtual axis, the unit accepts changes in the acceleration value in word 6 as part of the virtual axis commands.)

Once the SV160E2 is following the axis, (the *Stopped* bit is reset to "0"), Word 8 can be used to program the Maximum Move Torque. The *Motor\_Torque* bit (Command Word 1, bit 1) must be set to "1" to program the torque. The Maximum Move Torque must be in word 8 and word 9 must equal 0.

A sample program that demonstrates virtual axis programming on ControlLogix is available on the AMCI website at *https://www.amci.com/industrial-automation-support/sample-programs/*. The Linear and Circular Add On Instructions available in the sample program, have all of the above parameters and automatically place the values in the correct registers based on the state of the Stopped status bit.

If you are using a different host controller that supports motion axis programming, feel free to contact AMCI technical support for assistance in programming your controller.

## Jog CCW

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                | Units        | Range   |
|------------------------------------|------------------------|-------------------------|--------------|---|
| 0                                  | 1024                   | Command Word 0          |              | 16#0100   |
| 1                                  | 1025                   | Command Word 1          |              | See pg. 59<br>Bit 7 must equal "0"                                |
| 2                                  | 1026                   | Unused                  |              | See Note Below  |
| 3                                  | 1027                   | Unused                  |              | See Note Below  |
| 4                                  | 1028                   | 32 bit Programmed Speed | Stops/Second | Range of 1 to 1,048,575   |
| 5                                  | 1029                   | 52 bit Flogrammed Speed | Steps/Second | Kange of 1 to 1,048,575   |
| 6                                  | 1030                   | Acceleration            | Steps/sec/ms | 1 to 15,999   |
| 7                                  | 1031                   | Deceleration            | Steps/sec/ms | 1 to 15,999   |
| 8                                  | 1032                   | Maximum Move Torque     | 0.01 Nm      | 0, 10 to 130. "0" only allowed if bit 1 of Command Word 1 is "0". |
| 9                                  | 1033                   | Reserved                |              | Must be 0   |

Table R6.11 Jog CCW Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

## **Registration Move CCW**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                    | Units        | Range                              |  |  |  |
|------------------------------------|------------------------|-----------------------------|--------------|------------------------------------|--|--|--|
| 0                                  | 1024                   | Command Word 0              |              | 16#0100                            |  |  |  |
| 1                                  | 1025                   | Command Word 1              |              | See pg. 59<br>Bit 7 must equal "1" |  |  |  |
| 2                                  | 1026                   | 32 bit Stopping Distance    | Stops        | Range of 1 to 1,073,741,823        |  |  |  |
| 3                                  | 1027                   | 52 bit Stopping Distance    | Steps        | Range 01 1 to 1,075,741,025        |  |  |  |
| 4                                  | 1028                   | 22 hit Programmed Speed     | Stong/Second | Range of 1 to 1,048,575            |  |  |  |
| 5                                  | 1029                   | 32 bit Programmed Speed     | Steps/Second | Kange of 1 to 1,048,575            |  |  |  |
| 6                                  | 1030                   | Acceleration                | Steps/sec/ms | 1 to 15,999                        |  |  |  |
| 7                                  | 1031                   | Deceleration                | Steps/sec/ms | 1 to 15,999                        |  |  |  |
| 8                                  | 1032                   | 32 bit Minimum Registration | Stops        | Range of 0 to                      |  |  |  |
| 9                                  | 1033                   | Move Distance               | Steps        | +1,073,741,823                     |  |  |  |

 Table R6.12
 Registration Move CCW Command Block

#### **Preset Position**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function                     | Units | Range  |
|------------------------------------|------------------------|------------------------------|-------|--|
| 0                                  | 1024                   | Command Word 0               |       | 16#0200  |
| 1                                  | 1025                   | Command Word 1               |       | 16#0000: Save to RAM<br>16#0020: Save to Flash |
| 2                                  | 1026                   | 32 bit Position Preset Value | Steps | Range of -1,073,741,824<br>to +1,073,741,823   |
| 3                                  | 1027                   | 32 bit Position Preset value | Steps | to +1,073,741,823                              |
| 4                                  | 1028                   | Unused                       |       | See Note Below                                 |
| 5                                  | 1029                   | Unused                       |       | See Note Below                                 |
| 6                                  | 1030                   | Unused                       |       | See Note Below                                 |
| 7                                  | 1031                   | Unused                       |       | See Note Below                                 |
| 8                                  | 1032                   | Unused                       |       | See Note Below                                 |
| 9                                  | 1033                   | Unused                       |       | See Note Below                                 |

Table R6.13 Preset Position Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

Presetting the position resets the *Position\_Invalid* and *Move\_Complete* status bits in the Network Input Data. When accepted, the Profile Position and Encoder Position are both set to the preset value.

#### **Reset Errors**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function Units |  | Range          |  |  |
|------------------------------------|------------------------|----------------|--|----------------|--|--|
| 0                                  | 1024                   | Command Word 0 |  | 16#0400        |  |  |
| 1                                  | 1025                   | Command Word 1 |  | See pg. 59     |  |  |
| 2                                  | 1026                   | Unused         |  | See Note Below |  |  |
| 3                                  | 1027                   | Unused         |  | See Note Below |  |  |
| 4                                  | 1028                   | Unused         |  | See Note Below |  |  |
| 5                                  | 1029                   | Unused         |  | See Note Below |  |  |
| 6                                  | 1030                   | Unused         |  | See Note Below |  |  |
| 7                                  | 1031                   | Unused         |  | See Note Below |  |  |
| 8                                  | 1032                   | Unused         |  | See Note Below |  |  |
| 9                                  | 1033                   | Unused         |  | See Note Below |  |  |

Table R6.14 Reset Errors Command Block

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

Resetting errors will also reset the *Move\_Complete, Stall\_Detected, Invalid\_Jog\_Change*, and *Connection\_Was\_Lost* status bit in the Network Input Data. Resetting errors will not reset the *Position\_Invalid* or *Configuration\_Error* bits.

## **Enable Driver or Preset On Enable**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function Units |                       | Range              |
|------------------------------------|------------------------|----------------|-----------------------|--------------------|
| 0                                  | 1024                   | Command Word 0 |                       | 16#0000            |
| 1                                  | 1025                   | Command Word 1 |                       | 16#8000 or 16#C000 |
| 2                                  | 1026                   | Unused         | Unused See Note Below |                    |
| 3                                  | 1027                   | Unused         |                       | See Note Below     |
| 4                                  | 1028                   | Unused         |                       | See Note Below     |
| 5                                  | 1029                   | Unused         |                       | See Note Below     |
| 6                                  | 1030                   | Unused         |                       | See Note Below     |
| 7                                  | 1031                   | Unused         |                       | See Note Below     |
| 8                                  | 1032                   | Unused         | See Note Below        |                    |
| 9                                  | 1033                   | Unused         |                       | See Note Below     |

 Table R6.15
 Enable Driver Command Block

When Command Word 1 equals 16#8000 the Profile Position must be within the range of the Encoder Position  $\pm$  4,096 counts or the driver will not enable.

When Command Word 1 equals 16#C000 the Profile Position will be preset to the encoder position before the driver is enabled.

Unused words are ignored by the SV160E2 and can be any value, including parameter values from the previous command.

#### **Disable Driver**

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Function Units |  | Range          |  |  |
|------------------------------------|------------------------|----------------|--|----------------|--|--|
| 0                                  | 1024                   | Command Word 0 |  | 16#0000        |  |  |
| 1                                  | 1025                   | Command Word 1 |  | Bit 15 = '0'   |  |  |
| 2                                  | 1026                   | Unused         |  | See Note Below |  |  |
| 3                                  | 1027                   | Unused         |  | See Note Below |  |  |
| 4                                  | 1028                   | Unused         |  | See Note Below |  |  |
| 5                                  | 1029                   | Unused         |  | See Note Below |  |  |
| 6                                  | 1030                   | Unused         |  | See Note Below |  |  |
| 7                                  | 1031                   | Unused         |  | See Note Below |  |  |
| 8                                  | 1032                   | Unused         |  | See Note Below |  |  |
| 9                                  | 1033                   | Unused         |  | See Note Below |  |  |

 Table R6.16 Disable Driver Command Block

Disabling the driver during a move will result in a controlled stop and the SV160E2 will issue a command error response.

## Input Data Format

The correct format for the Network Input Data when the SV160E2 is in Command Mode is shown below.

| EtherNet/IP<br>or PROFINET<br>Word | Modbus/TCP<br>Register | Command Mode Input Data                       |  |  |  |  |  |  |
|------------------------------------|------------------------|---|--|--|--|--|--|--|
| 0                                  | 0                      | Status Word 0                                 |  |  |  |  |  |  |
| 1                                  | 1                      | Status Word 1                                 |  |  |  |  |  |  |
| 2                                  | 2                      | 32 bit Profile Position                       |  |  |  |  |  |  |
| 3                                  | 3                      | 32 bit Profile Position                       |  |  |  |  |  |  |
| 4                                  | 4                      | 32 bit Encoder Position                       |  |  |  |  |  |  |
| 5                                  | 5                      | 32 of Electrer rostion                        |  |  |  |  |  |  |
| 6                                  | 6                      | Trapped Encoder Position                      |  |  |  |  |  |  |
| 7                                  | 7                      | Trapped Encoder Position                      |  |  |  |  |  |  |
| 8                                  | 8                      | Actual Peak Motor Current <sup>†</sup> (X100) |  |  |  |  |  |  |
| 9                                  | 9                      | Actual Motor Velocity <sup>†</sup>            |  |  |  |  |  |  |

† Motor current and velocity will be negative values when the position value is decreasing. Table R6.17 Network Input Data Format: Command Mode

#### **Status Word 0 Format**

#### Status Word 0

15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00

| Mode_Flag | Module_OK<br>Config_Err | Command_Err<br>Input_Err | Pos_Invalid | 0 0 | Move_Cmp | Decelerating | Accelerating | At_Home | Stopped | In_Hold_State | Moving_CCW | Moving CW |  |
|-----------|-------------------------|--------------------------|-------------|-----|----------|--------------|--------------|---------|---------|---------------|------------|-----------|--|
|-----------|-------------------------|--------------------------|-------------|-----|----------|--------------|--------------|---------|---------|---------------|------------|-----------|--|

Figure R6.4 Command Mode: Status Word 0 Format

- Bit 15: Mode\_Flag Set to "1" if in Configuration Mode, and set to "0" if in Command Mode.
- **Bit 14:** Module\_OK "1" when the SV160E2 is operating without a fault, "0" when an internal fault condition exists.
- **Bit 13: Configuration\_Error** "1" if a valid configuration does not exist in the memory of the SV160E2. "0" when the SV160E2 has a valid configuration in memory.
- Bit 12: Command\_Error Set under the following conditions:
  - > An invalid command has been written to the SV160E2
  - > Attempting to start a move while the motor is disabled
  - > Disabling the motor while motion is occurring
  - > Switching to Configuration Mode while the motor is enabled
  - Enabling the motor if the Profile and Encoder positions differ by greater than 4,096 counts when the Preset\_On\_Enable bit is not set.

This bit is reset by a *Reset Errors* command. The format of the command is given on page 67.

- **Bit 11:** Input\_Error "1" when:
  - Emergency Stop input has been activated
  - > Either of the End Limit Switches activates during any move operation except for homing
  - > Starting a Jog Move in the same direction as an active End Limit Switch
  - ► If the opposite End Limit Switch is reached during a homing operation.

This bit is reset by a *Reset Errors* command. The format of the command is given on page 67.

#### Status Word 0 Format (continued)

**Bit 10: Position\_Invalid –** "1" when:

- > An error is detected in the absolute encoder on power up
- ➤ If the difference between the Profile Position and Encoder Position is greater than 4,096 counts when attempting to enable the motor.
- ➤ If the difference between the Profile Position and Encoder Position exceeds the value of the Maximum Position Error Limit after a stall is detected and the SV160E2 has come to a stop.
- Bits 9 & 8: Reserved Will always equal "0".
- **Bit 7:** Move\_Complete Set to "1" when the present Absolute, Relative, or Registration Move completes without error. This bit is reset to "0" when the next move command is written to the SV160E2, when the position is preset, or a Reset Errors command is issued to the unit. This bit is not set at the end of a jog move or a homing operation.
- Bit 6: Decelerating Set to "1" when the present move is decelerating. Set to "0" at all other times.
- Bit 5: Accelerating Set to "1" when the present move is accelerating. Set to "0" at all other times.
- Bit 4: At\_Home Set to "1" when a homing command has completed successfully, "0" at all other times.
- **Bit 3:** Stopped For normal moves, set to "1" when the motor is not in motion. Note that this is stopped for any reason, not just a completed move. For example, an Immediate Stop command during a move will set this bit to "1", but the Move\_Complete Bit, (bit 7 above) will not be set.

For Axis Follower Moves, the Stopped bit resets to "0" once the command is accepted and remains reset until the Axis Follower Move ends. The Moving\_CW and Moving\_CCW bit can be used to determine if motion is occurring during an Axis Follower Move.

- Bit 2: In\_Hold\_State Set to "1" when a move command has been successfully brought into a Hold State. Hold States are explained is the *Controlling Moves In Progress* section starting on page 36.
- Bit 1: Moving\_CCW Set to "1" when the motor is rotating in a counter-clockwise direction.
- Bit 0: Moving\_CW Set to "1" when the motor is rotating in a clockwise direction.

#### **Status Word 1 Format**

#### Status Word 1

15 14 13 12 11 10 09 08 07 06 05 04 03 02 01 00

|               | •••            |         |             | •••           |              | 00          | 00          | <b>.</b>     | 00           | 00         | •••       | 00         | ~          | •••        | 00         |  |
|---------------|----------------|---------|-------------|---------------|--------------|-------------|-------------|--------------|--------------|------------|-----------|------------|------------|------------|------------|--|
| Drive_Enabled | Stall_Detected | Cmd_Ack | Abs_Enc_Err | Heartbeat_Bit | Torque_Limit | Inv_Jog_Cng | STO_Failure | Driver_Fault | Connect_Lost | STO_Active | Temp_90°C | IN4_Active | IN3_Active | IN2_Active | IN1_Active |  |

Figure R6.5 Command Mode: Status Word 1 Format

- **Bit 15:** Drive\_ls\_Enabled Set to "1" when the motor driver section of the SV160E2 is enabled and current is available to the motor. Set to "0" when the motor driver section is disabled. If this bit is set to "1", the motor current remains present when an E-Stop input is active.
- **Bit 14:** Stall\_Detected Set to "1" when the difference between the commanded motor position and the encoder position exceeds the value of the Maximum Position Error Limit parameter. This parameter is set in the *Block 6: Position Control Loop Configuration Block* found on page 53.

#### Status Word 1 Format (continued)

- **Bit 13: Command\_Acknowledge –** Normally "0". This bit is set to "1" when one of the following commands completes successfully:
  - Preset Position
  - ► Reset Errors

This bit resets to "0" when the command bit is reset to "0" by the host controller.

- Bit 12: Absolute Encoder Error This bit is set to "1" under the following conditions:
  - The shaft was subject to acceleration in excess of 160,000°/sec<sup>2</sup> (444.4 rev/sec<sup>2</sup>) while power was removed from the unit
  - > The internal battery is fully discharged or damaged
  - > The encoder itself is damaged

If this bit is set, cycle power to the unit. If the bit remains set, contact AMCI technical support for assistance.

- **Bit 11:** Heartbeat\_Bit This bit will change state approximately every 500 milliseconds. Monitor this bit to verify that the unit and network connection are operating correctly. Note that this bit is only available while the SV160E2 is in Command Mode.
- **Bit 10:** Torque\_Limit This bit is set to '1' when a torque limit is active during the move. In typical cases, this is the Peak Torque Limit during the acceleration and deceleration phases of the move and the Continuous Torque Limit during the constant speed phase of the move. If the Maximum Move Torque is set as part of the move command, this value is used through all of the phases of the move.
- **Bit 9:** Invalid\_Jog\_Change Set to '1' during a Jog Move if parameters are changed to invalid values. The Jog Move continues with the old parameter values. This bit is reset to '0' when the parameters are changed to valid values. Parameters that can be changed during a Jog Move are Programmed Speed, Acceleration, Deceleration, and Maximum Move Torque.
- **Bit 8: STO\_Failure** This bit is only available on SV160E2-STO units. Reset to '0' during normal operation, this bit is set to '1' if the programmable STO Discrepancy Time Limit is exceeded. This indicates a failure in the normal operation of the STO circuit. This fault is non-clearable. Power must be cycled to the SV160E2 to clear this fault.
- **Bit 7:** Driver\_Fault This bit is set to "1" to indicate faults in the driver section of SV160E2, such as Overtemperature or Overcurrent Faults. If you are using an SV160E2-STO, this bit is set if either or both of the STO inputs are inactive. Driver Faults are self clearing. This bit will reset once the fault condition is removed.
- **Bit 6: Connection\_Was\_Lost** If the *physical* network connection is lost at any time, this bit will be set when the connection is re-established. Note that this bit is not set if the communication loss is on the protocol level, not the physical level.
- Bit 5: STO\_Active This bit is only available on SV160E2-STO units. Reset to '0' during normal operation, this bit is set to '1' if either or both of the STO Inputs become inactive. This bit indicates that the STO feature is active and power has been removed from the motor driver section. This bit automatically resets to '0' when power is reapplied to both of the STO inputs. An Enable Driver command must be issued before power is restored to the motor. Note that issuing an Enable Driver command while this bit is active will result in a Command Error response. The data format of the *Enable Driver or Preset On Enable* command can be found on page 68.
- **Bit 4: Temperature\_Above\_90°C –** This bit is set to "1" when the processor internal temperature exceeds 90°C. If this bit trips often and you want to lower the operating temperature of the unit, consider changing how the device is mounted, or installing a fan to force additional airflow over the device.

#### Status Word 1 Format (continued)

- Bit 3: IN4\_Active "1" when Input 4 is in its active state. The active state of the input is programmed as explained in the *Block 2: I/O Configuration Block* section starting on page 50. If the unit is an SV160E2-STO, this bit shows the state of the /STOB input.
- Bit 2: IN3\_Active "1" when Input 3 is in its active state. The active state of the input is programmed as explained in the *Block 2: I/O Configuration Block* section starting on page 50. If the unit is an SV160E2-STO, this bit shows the state of the /STOA input.
- **Bit 1:** IN2\_Active "1" when Input 2 is in its active state. The active state of the input is programmed as explained in the *Block 2: I/O Configuration Block* section starting on page 50.
- Bit 0: IN1\_Active "1" when Input 1 is in its active state. The active state of the input is programmed as explained in the *Block 2: I/O Configuration Block* section starting on page 50.

## Notes on Clearing a Driver Fault

A Driver Fault occurs when there is an over temperature condition, or an over current condition. On SV160E2-STO units a fault also occurs when one or both of the STO inputs are inactive. When a Driver Fault occurs, the SV160E2 sets bit 7 of Status Word 1 in the Network Input Data. Bit 15 of Status Word 1, Drive\_Is\_Enabled, will also be reset to "0", the driver will be disabled, and it will not supply current to the motor until the motor's temperature decreases to a safe value. At this point the fault will clear itself and the drive can be re-enabled by a  $0 \rightarrow 1$  transition on the Enable\_Driver bit.

# **BRAKING RESISTOR CALCULATIONS**

This reference introduces the calculations necessary to size an external braking resistor for your specific application.

## **Overvoltage Threshold Parameter**

The Over Voltage Threshold parameter controls when the braking resistor is used. This parameter sets the tripping point on the power bus voltage. During a deceleration period, if the input power voltage exceeds this setpoint, the transistor on Ext. Brake Resistor pin turns on. (See page 24, *Power Connector*) The attached braking resistor becomes another load on the power bus during this time. The braking resistor absorbs the power that is generated during a deceleration period and prevents the power bus voltage from rising to the point where it can damage attached equipment. The Over Voltage Threshold parameter has the following ranges:

- ➤ If set to 0, the braking resistor is not used. The power bus voltage is not monitored and the Ext. Brake Resistor pin will never turn on.
- ➤ If set within the range of 550 to 1000, the braking resistor is used when the power bus voltage exceeds the set value. The value is programmed in steps of 0.1 V. The range of 550 to 1000 corresponds to a voltage range of 55.0 to 100.0 V

# **Required Information**

Motor rated (continuous) power

➤ 157 W

Initial speed at the start of deceleration in radians/sec.

Application specific. Maximum speed for the motor is 3000 RPM. (314.2 radians/sec) Speed in RPM \* 0.10472 = Speed in radians/sec.

Final speed at the end of deceleration in radians/sec.

Application specific. Typical final speed is 0.
 Speed in RPM X 0.10472 = Speed in radians/sec.

Required deceleration time in seconds

> Application specific.

Motor Inertia in kg·m<sup>2</sup>

►  $48 \times 10^{-6} \text{ kg} \cdot \text{m}^2$ 

Load Inertia in  $k \cdot gm^2$ 

> Application specific. Inertia in  $lb \cdot ft^2 \ge 4.214 \ge 10^{-2} = lnertia in kg \cdot m^2$ 

Gear Ratio (GR) between motor and load

► GR = Load Speed / Motor Speed.

Programmed value for Overvoltage Threshold parameter

This parameter sets the voltage at which the braking resistor circuit is turned on. Range of values is 55.0 to 100.0 volts with a 0.1 volt resolution.

### Step 1: Determine System Inertia

 $J_T = J_M + (GR^2 \times J_L)$   $J_T = \text{Total System Inertia}$   $J_M = \text{Motor Inertia} = 48 \times 10^{-6} \text{ kg} \cdot \text{m}^2$  GR = Gear Ratio $J_L = \text{Load Inertia in kg} \cdot \text{m}^2$ 

It is suggested that the total reflected load inertia ( $GR^2 \times J_L$ ) does not exceed 20 times the motor inertia.

#### Step 2: Determine the Deceleration Rate

$$\alpha_d = \frac{(\omega_i - \omega_o)}{T_d}$$

$$\alpha_d = \text{Deceleration in radians/sec}^2$$

$$\omega_i = \text{Initial Speed in radians/sec}$$

$$\omega_o = \text{Final Speed in radians/sec}$$

$$T_d = \text{Time to decelerate}$$

**NOTE**  $\searrow$  The maximum deceleration rate is 6135.5 rad/sec<sup>2</sup>. This is the programmable limit of the SV160E2. If the calculated value exceeds this limit, the time to decelerate must be increased.

## Step 3: Determine Peak Braking Power

$$P_b = \frac{J_T[\omega_i(\omega_i - \omega_o)]}{T_d}$$
$$P_b = \text{Peak Braking Power in watts}$$

 $J_T$  = Total System Inertia calculated in Step 1.

 $\omega_i$  = Initial Speed in radians/sec

 $\omega_o$  = Final Speed in radians/sec

 $T_d$  = Time to decelerate

#### 

Peak Braking Power ( $P_b$ ) cannot exceed 549 watts. This limit is based on the absolute peak current and absolute peak torque ratings of the SV160E2. They are 13.2 amps and 1.75 Nm respectively. Exceeding 549 watts may force the drive into current limit and cause a loss of motion control. If the calculated peak braking power exceeds 549 watts, increase the deceleration time, or change the gear ratio to decrease the reflected load inertia.

## Step 4: Determine Minimum Braking Resistor Value

 $R_{Bmin} = \frac{V_d}{10 \text{ amps}}$ 

 $R_{Bmin}$  = Braking Resistor minimum value in ohms

 $V_d$  = Programmed Overvoltage Threshold (55.0 to 100.0 Vdc)

10 amps = Maximum allowable current through Braking Resistor circuit.



This is the minimum resistor value allowed in the circuit. Using a lower resistance value may damage the Braking Resistor circuit. The chosen resistor value must be between the minimum value determined in this step and the maximum value determined in step 5.

## Step 5: Determine Maximum Braking Resistor Value

$$R_{Bmax} = \frac{\left(V_d\right)^2}{P_b}$$

 $R_{Bmax}$  = Braking Resistor maximum value in ohms

 $V_d$  = Programmed Overvoltage Threshold (55.0 to 100.0 Vdc)

 $P_{h}$  = Peak Breaking Power calculated in Step 3.

**NOTE** This is the maximum resistor value allowed in the circuit. Using a higher resistance value may cause an overvoltage error and loss of motion control during deceleration. The chosen resistor value must be between the minimum value determined in step 4 and the maximum value determined in this step.

## Step 6: Determine Average Power Rating

To determine the average power dissipated by the braking resistor, you have to determine the peak power dissipated during each deceleration phase of your machine cycle, and the minimum cycle time of your machine.

$$P_{av} = \sum_{1}^{n} \left[ \frac{T_{dn}}{T_c} \right] \frac{P_{bn}}{2} \left[ \frac{(\omega_{in} + \omega_{on})}{\omega_{sn}} \right]$$

 $T_{dn} = 'n'$ th deceleration time in seconds

 $T_c$  = Minimum machine cycle time in seconds

 $P_{hn}$  = Peak power rating during 'n'th deceleration period.

 $\omega_{in}$  = Initial Speed in radians/sec during 'n'th deceleration period.

 $\omega_{on}$  = Final Speed in radians/sec during 'n'th deceleration period.

# Determining the Braking Resistor

- 1) The resistance value must be between the minimum resistance calculated in step 4 and the maximum resistance calculated in step 5.
- 2) The power rating of the resistor must be equal to or greater than the average power rating calculated in step 6.
- 3) The Braking Resistor must also be able to handle the peak power generated during deceleration. One option is to choose a resistor whose power rating is equal to the peak power calculated in step 3 instead of the average power calculated in step 6. The other option is to find the peak power rating for the resistor. Braking resistor manufacturers have two methods of defining the peak power a resistor can tolerate.
  - > One method is to define peak power as a percentage of average power.
  - ➤ The other method is to define the energy the resistor can absorb, typically in joules. This calculation is  $J = (P_b/2 X T_d)$ , where J is the energy in joules,  $P_b$  is the peak power during deceleration, and  $T_d$  is the time to decelerate.

# **CONFIGURING NETWORK INTERFACES**

This section lists suggestions for configuring the network interfaces on your computer or laptop before attaching to the SV160E2.

## Firewall Settings

Firewalls are hardware devices or software that prevent unwanted network connections from occurring. Firewall software has been present on Windows based computers since XP, and it may prevent your computer from communicating with the SV160E2. The internal webserver uses port 80, which is the default http port, and should work without changing any firewall settings. Configuring your firewall to allow communication with the SV160E2 is beyond the scope of this manual.

## **Disable All Unused Network Interfaces**

Routing and default gateway setting on your computer might prevent connection to the SV160E2. When using the Net Configurator utility, broadcast packets that are used to find the SV160E2 often go out the wrong port. The easiest way to avoid this problem is to temporarily disable all network interfaces that are not attached to the SV160E2.

This includes all wireless interfaces as well as all Bluetooth interfaces.

## **Configure Your Network Interface**

Before you can communicate with the SV160E2, your network interface must be on the same subnet as the device.



The rest of this procedure assumes you are using the 192.168.0.xxx subnet. If you are not, you will have to adjust the given network addresses accordingly.

The easiest way to check the current settings for your NIC is with the 'ipconfig' command.

- ➤ For Windows 7, click on the [Start] button, and type "cmd" in the "Search programs and files" text box. Press [Enter] on the keyboard.
- ➤ For Windows 8 and 10, press the [Win+X] keys and select "Command Prompt" from the resulting popup. There is no need to run the command prompt as the administrator, so do not select "Command Prompt (Admin)".

## **Configure Your Network Interface (continued)**

A DOS like terminal will open. Type in 'ipconfig', press [Enter] on the keyboard and the computer will return the present Address, Subnet Mask, and Default Gateway for all of your network interfaces. If your present address is 192.168.0.xxx, where 'xxx' does not equal 50, and your subnet mask is 255.255.255.0, then you are ready to configure your SV160E2 unit. Figure R8.1 shows the output of an ipconfig command that shows the "Local Area Connection 2" interface on the 192.168.0.xxx subnet.

| 📾 Command Prompt                                | - 🗆 × |
|---|-------|
| C:∖>ipconfig                                    | -     |
| Windows IP Configuration                        |       |
| Ethernet adapter Local Area Connection:         |       |
| Connection-specific DNS Suffix :<br>IP Address  |       |
| Ethernet adapter Local Area Connection 2:       |       |
| Connection-specific DNS Suffix .:<br>IP Address |       |
| €:\>  | -     |

Figure R8.1 ipconfig Command

If your present address is not in the 192.168.0.xxx range, type in 'ncpa.cpl' at the command prompt and hit [Enter] on the keyboard.

For Windows 7+, this will open the *Network Connections* window. Right click on the appropriate interface and select "Properties". In the window that opens, select "Internet Protocol Version 4 (TCP/IP v4)" from the list and then click on the [Properties] button.

Set the address and subnet mask to appropriate values. (192.168.0.1 and 255.255.255.0 will work for an SV160E2 that has factory default settings.) The default gateway and DNS server settings can be ignored.

### **Test Your Network Interface**

Going back to the terminal you opened in the last step, type in 'ping aaa.bbb.ccc.ddd' where 'aaa.bbb.ccc.ddd' is the IP address of the SV160E2. The computer will ping the unit and the message "Reply from aaa.bbb.ccc.ddd: bytes=32 time<10ms TTL=128" should appear four times.

If the message "Request timed out." or "Destination host unreachable" appears, then one of four things has occurred:

- > You set a new IP address, but have not yet cycled power to the SV160E2
- > You did not enter the correct address in the ping command.
- ➤ The IP address of the SV160E2 is not set correctly.
- > The SV160E2 and the computer are not on the same subnet.

# **TASK 1**

# **INSTALLING THE SV160E2**

# 1.1 Location

SV160E2 units that are IP64 rated are suitable for use in an industrial environment that meet the following criteria:

- Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation is to be expected
- Transient voltages are controlled and do not exceed the impulse voltage capability of the product's insulation.

These criteria are equivalent to the *Pollution Degree 3* and *Over Voltage Category II* designations of the International Electrotechnical Commission (IEC).

# 1.2 Safe Handling Guidelines

### 1.2.1 Prevent Electrostatic Damage

Electrostatic discharge can damage the SV160E2. Follow these guidelines when handling the unit.

- 1) Touch a grounded object to discharge static potential before handling the unit.
- 2) Work in a static-safe environment whenever possible.
- 3) Wear an approved wrist-strap grounding device.
- 4) Do not touch the pins of the network connectors or I/O connector.
- 5) Do not disassemble the unit
- 6) Store the unit in its shipping box when it is not in use.

## 1.2.2 Prevent Debris From Entering the Unit

**!** WARNING

WARNING

While mounting devices, be sure that all debris (metal chips, wire strands, tapping liquids, etc.) is prevented from falling into the unit, specifically into the M12 connectors. Debris may cause damage to the unit or unintended machine operation with possible personal injury.

1.2.3 Remove Power Before Servicing

Remove power before removing or installing any SV160E2 unit.

# 1.3 Operating Temperature Guidelines

Due to the onboard electronics, the maximum operating temperature of the SV160E2 is limited to 203°F/95°C. The motor by itself has a maximum operating temperature of 266°F/130°C. Depending on the operating current setting, move profiles, and idle time, it is possible to exceed these temperatures in a thermally isolated environment. As explained in the mounting section, mounting the SV160E2 to a large metal heatsink is the best way to limit the operating temperature of the device. Operating temperature should be monitored during system startup to verify that the maximum motor temperature remains below its 203°F/95°C specification. SV160E2 devices have an onboard thermistor that monitors the temperature of the electronics and will remove motor current if their operating temperature reaches this limit. These ovetemperature faults are also reported in the Network Input Data.

# 1.4 Mounting

All AMCI motors have flanges on the front of the motor for mounting. This flange also acts as a heatsink, so motors should be mounted on a large, unpainted metal surface. Mounting a motor in this fashion will allow a significant amount of heat to be dissipated away from the motor, which will increase the unit's life by reducing its operating temperature.

## 1.4 Mounting (continued)

Motors should be mounted using hardened 5mm or #10 hardware. AMCI motors can produce high torques and accelerations that may weaken and shear inadequate mounting hardware.

1) The motor case must be grounded for proper operation. This is usually accomplished through its mounting hardware. If you suspect a problem with your installation, such as mounting the motor to a painted surface, then run a bonding wire from the motor to a solid earth ground point near it. Use a minimum #8 gauge stranded wire or 1/2" wire braid as the grounding wire

2) Do not disassemble *any* motor. A significant reduction in motor performance will result.

#### 1.4.1 SV160E2 Outline Drawing

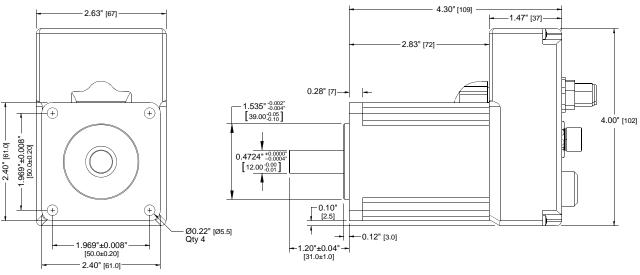


Figure T1.1 SV160E2 Outline Drawing

#### 1.4.2 SV160E2 Mounting

The SV160E2 is not water tight. Its IP64 rating makes it acceptable for use in dusty environments, environments with condensation, and environments where the unit may be exposed to splashing water.

#### 1.4.3 Connecting the Load

Care must be exercised when connecting your load to the SV160E2. Even small shaft misalignments can cause large loading effects on the bearings of the motor and load. The use of a flexible coupler is *strongly* recommended whenever possible.


- > Maximum radial load is 45 lbs. (200N) at the end of the shaft.
- ➤ Maximum axial load is 13.5 lbs. (60N)

NOTE ≽

Internal encoders are mounted on the end of the motor shaft that is internal to the unit. Excessive axial load may cause encoder mis-alignment and damage to the unit. This type of damage is not covered under warranty.

## 1.5 Power Connector

Figure T1.2 shows the power connector pinout when viewed from the back of the SV160E2. The connector is a male, four pin, S-coded, M12 connector that is IP67 rated when its mate is properly installed.

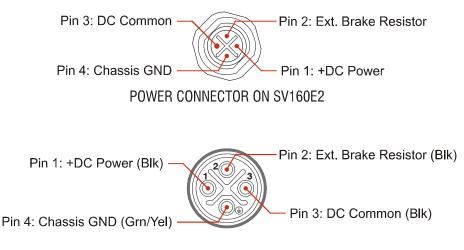

**CNGL-5 CABLE CONNECTOR** 

Figure T1.2 M12 Power Connector Pinout

+DC Power and DC Common are used to power the SV160E2. The Ext. Brake Resistor pin is for an external regeneration resistor to limit power dissipation during deceleration. The Chassis GND pin should be used to ground the chassis of the motor if it is not ground through its mounting.

**NOTE** The SV160E2 can be run at voltages as high as 80 Vdc, and uses an S-coded connector because of this high voltage. Most S-coded cordsets have three black wires and a single green/ yellow wire. When using such a cable with an SV160E2, it is strongly recommended to label the wires by pin number before installing the cordset.

### 1.5.1 Compatible Connectors and Cordsets

Many different connectors and cordsets are available on the market, all of which will work with the SV160E2 provided that the manufacturer follows the connector and Ethernet standards. AMCI offers the following mating connector and cordset that mate with the power connector.

| AMCI #  | Description  |
|---------|--|
| MS-41   | Mating connector for Power Connector. Female, 4 pin, S-coded.<br>Screw terminal connections. 16AWG conductor, 8 to 10 mm dia. cable.<br>Right-angle, IP67 rated when properly installed. |
| CNGL-5M | 4-position, 1.5 mm <sup>2</sup> (16 AWG) wire.<br>Connector: Straight M12, S-coded, Female to flying leads, 0.28" stripped.<br>Cable length: 5 m   |

Table T1.1 Compatible Power Connectors and Cordsets


## 1.6 Power Wiring

The SV160E2 accepts 48 to 80 Vdc as its input power. AMCI strongly suggests using 16 AWG wire for the power connections. The MS-41 connector will accept up to 16 gauge wire and the CNGL-5M cordset is built with 16 gauge wire.



Do not apply 120 Vac to any pins of the SV160E2. If this occurs, the unit will be damaged and you will void the unit's warranty.


Figure T1.3 below shows how to wire power to the SV160E2 units. The figure below shows how to wire a CNGL-5M cable to a power supply. Note that the chassis ground connection is optional, but must be used if the SV160E2 is not properly ground through its mounting.

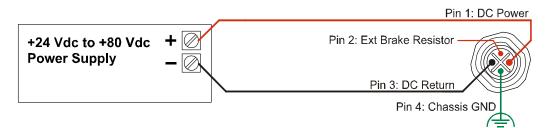



## 1.7 Input Connector

All input connections are made at the Input Connector. This connector is a standard eight pin A-coded M12 connector that is rated to IP67 when the mate is properly installed. Figure T1.4 shows the pinout for the Input Connector when viewed from the back of the unit.

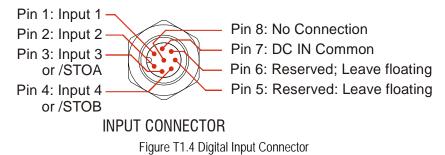

All four digital inputs are single ended, sinking inputs that share a common DC reference, (Pin 7, DC IN Common).

All of the inputs accept a nominal 12 Vdc to 24 Vdc signal without the need of a current limiting resistor. Additional information on how the digital inputs can be used can be found in the *Available Discrete Inputs* section, starting on page 16.

# 1.7 Input Connector (continued)

#### 1.7.1 Compatible Connectors and Cordsets

Many different connectors and cordsets are available on the market, all of which will work with the SV160E2 provided that the manufacturer follows the A-coded M12 standards. The following connector and cordset is available from AMCI.

| AMCI #  | Description  |
|---------|--|
| MS-37   | Mating connector for Input Connector.<br>Female, 8 pin A-coded. Screw terminal connections. 6 to 8 mm dia. cable.<br>Straight, IP67 rated when properly installed. |
| CNFL-5M | 8-position, 24 AWG.<br>Connector: Straight M12, A-coded, Female to 2 inch flying leads, 0.28" stripped.<br>Cable length: 5 m                                       |


Table T1.2 Compatible Digital Input Connectors and Cordsets

#### 1.7.2 CNFL-5M Color Code and Shield Wire

The following diagram shows the color code of the CNFL-5M as well as connection between the cable shield and the connector.



The shield wire on the CNFL-5M is connected to the metal body of the connector. Therefore, the shield wire of the CNFL-5M is connected to chassis ground through the SV160E2. You must exercise caution when connecting shielded cable to the CNFL-5M to avoid ground loops.

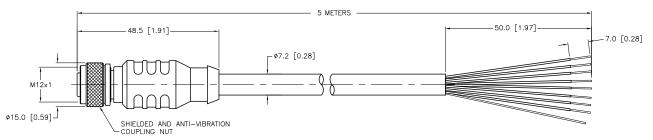

| Pin | Description | Color  | Pin | Description                                   | Color |
|-----|-------------|--------|-----|---|-------|
| 1   | Input 1     | White  | 5   | Reserved - Do not connect.<br>Leave floating. | Gray  |
| 2   | Input 2     | Brown  | 6   | Reserved - Do not connect.<br>Leave floating. | Pink  |
| 3   | Input 3     | Green  | 7   | IN DC Common                                  | Blue  |
| 4   | Input 4     | Yellow | 8   | No Connection                                 | Red   |

Figure T1.5 CNFL-5M Cable

### 1.7.3 Cable Shields

Because they are low power signals, cabling from the sensor to the SV160E2 should be done using a twisted pair cable with an overall shield. The shield should be grounded at the end when the signal is generated, which is the sensor end. If this is not practical, the shield should be grounded to the same ground bus as the SV160E2.


# 

The shield wire on the CNFL-5M is connected to the metal body of the connector. Therefore, the shield wire of the CNFL-5M is connected to chassis ground through the SV160E2. You must exercise caution when connecting shielded cable to the CNFL-5M to avoid ground loops.

# 1.8 DC Input Wiring

Refer to section 1.9, *STO Input Wiring*, for information on wiring the STO inputs of an SV160E2-STO.

Inputs 1 through 4 on the SV160E2 and inputs 1 and 2 on the SV160E2-STO are single ended inputs that share the DC Common return pin. They accept a nominal 12 to 24 Vdc signal without the need for an external current limiting resistor. If using 48 Vdc sensors, a 5 kilohm resistor that is wired in series with the input pin is required. Figure T1.7 below shows how to wire discrete DC sourcing and sinking sensors to the DC inputs of the SV160E2 and SV160E2-STO. Colors in parentheses are the appropriate wire color of the CNFL-5M cable.

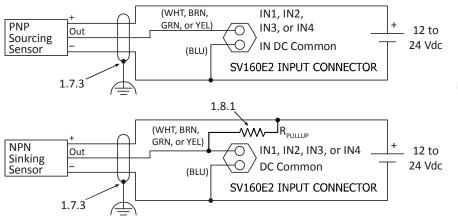

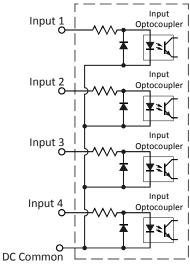


Figure T1.6 Schematic - Inputs 1 - 4

Figure T1.7 Wiring - Digital Inputs 1 through 4

### 1.8.1 Sinking Sensors Require a Pull Up Resistor

Sensors with sinking outputs require an external pull up resistor because the digital inputs of the SV160E2 units also sink current. Table T1.1 below shows the values of pull up resistors that will allow the unit's input to activate along with the current that the sensor must be able to sink when it is active.


| Input<br>Voltage | Pull Up<br>Resistor | Sensor Current<br>When Active |  |
|------------------|---------------------|-------------------------------|--|
| 12 Vdc           | 1.4 kilohm          | 8.6 mA                        |  |
| 24 Vdc           | 3.8 kilohm          | 6.3 mA                        |  |

Table T1.3 Pull Up Resistor Values for DC Inputs

The logical states of the sensor and SV160E2 input will be reversed. The SV160E2 input is off when the sensor is active. You can set the logic state of the input when you configure the unit.

## 1.9 STO Input Wiring

The SV160E2-STO uses Inputs 3 and 4 as the redundant STO inputs. These inputs must have 12 to 24 Vdc applied to them before the motor's power stage is enabled. If you have an SV160E2-STO and are not using the STO functionality, then you must apply 12 to 24Vdc to both inputs to bypass the STO functionality. Colors in parentheses are the appropriate wire color for the CNFL-5M cable.

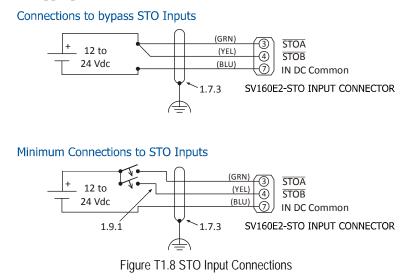

### 1.9.1 Extending the STO Cabling

The STO inputs are fast acting, and therefore susceptible to electrical noise. Keep the cabling from the safety relay to the SV160E2-STO as short as possible. If you have to extend the cabling beyond a CNFL-5M, use shielded twisted pair cabling. The second wire of the pair should be connected to the power supply return.

## 1.10 Network Connectors

Figure T1.9 shows the Ethernet connector pinout when viewed from the back of the SV160E2. The Ethernet ports on the units are "auto-sense" ports that will automatically switch between 10baseT and 100baseT depending on the network equipment they are attached to. The ports also have "auto switch" capability. This means that a standard cable can be used when connecting the SV160E2 to any device, including a personal computer.

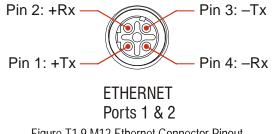


Figure T1.9 M12 Ethernet Connector Pinout

The connector is a standard female four pin D-coded M12 connector that is rated to IP67 when the mate is properly attached.

The SV160E2 units have two ethernet ports. In non-redundant network applications, either port can be used to attach the SV160E2 unit to the network.

#### 1.10.1 Compatible Connectors and Cordsets

Many different connectors and cordsets are available on the market, all of which will work with the SV160E2 provided that the manufacturer follows the connector and Ethernet standards. AMCI offers the following mating connector and cordsets that mate with the Ethernet port connectors.

| AMCI #  | Description  |
|---------|--|
| MS-28   | Mating connector for Ethernet port connector.<br>Screw terminal connections. 6 to 8 mm dia. cable.<br>Straight, IP67 rated when properly installed.                        |
| CNER-5M | Molded cordset for Ethernet connector. 5 meters in length.<br>Straight M12 4 pin D-coded to RJ-45 connector. Wired to TIA/EIA-568B.<br>IP67 rated when properly installed. |

Table T1.4 Compatible Ethernet Connectors and Cordsets

#### 1.10.2 TIA/EIA-568 Color Codes

There are two color codes in common use when wiring Ethernet connections with twisted pairs. Either one of these standards is acceptable. The CNER-5M cable available from AMCI follows the 568B standard. Note that accidently reversing the Tx/Rx pairs will not affect the operation of the SV160E2. The SV160E2 has an "auto-switch" port that will automatically adjust for swapped pairs.

| Signal          | 568A Color          | 568B Color          |
|-----------------|---------------------|---------------------|
| +Transmit (+Tx) | White/Green Tracer  | White/Orange tracer |
| –Transmit (–Tx) | Solid Green         | Solid Orange        |
| +Receive (+Rx)  | White/Orange Tracer | White/Green Tracer  |
| -Receive (-Rx)  | Solid Orange        | Solid Green         |

Table T1.5 TIA/EIA Color Codes

# 1.11 EtherNet/IP Connections

#### 1.11.1 Non-DLR Applications

The SV160E2 unit has two Ethernet ports with a built-in Ethernet switch connecting the two. In non-DLR applications, either port can be used to attach the unit to the network. The remaining port can be used to extend the network to another device if this would reduce wiring costs.

#### 1.11.2 DLR Applications

In Device Level Ring applications, the SV160E2 unit functions as Beacon-Based Ring Nodes. In these applications, both ports are used when wiring the ring, daisy chaining from one unit in the ring to the next.

## 1.12 PROFINET Connections

#### 1.12.1 Non-MRP Applications

The SV160E2 unit has two Ethernet ports with a built-in Ethernet switch connecting the two. In non-MRP applications, either port can be used to attach the unit to the network. The remaining port can be used to extend the network to another device if this would reduce wiring costs.

#### 1.12.2 MRP Applications

In Media Redundancy Protocol applications, the SV160E2 unit functions as a Media Redundancy Client (MRC). In these applications, both ports are used when wiring the ring, daisy chaining from one unit in the ring to the next.

## 1.13 Modbus TCP Connections

The SV160E2 unit has two Ethernet ports with a built-in Ethernet switch connecting the two. Either port can be used to attach the unit to the network. The remaining port can be used to extend the network to another device if this reduces wiring costs.

Notes

# TASK 2

# SET THE IP ADDRESS AND PROTOCOL

This section is intended for the engineer or technician responsible for setting the IP address of an AMCI SV160E2.

## 2.1 Determine the Best Method for Setting the IP Address

There are three methods for setting the IP address on an SV160E2. Table T2.1 below outlines the available methods and when you can use them.

| Method  | Restrictions  | Section |
|---|---|---------|
| Use Factory Default<br>Settings   | <ol> <li>The machine must use 192.168.0.xxx subnet.</li> <li>The 192.168.0.50 address must be available.</li> </ol>   | 2.2a    |
| Use the Embedded<br>Web Server  | No restrictions on use. This is the preferred method.<br>The internal webserver can be used to set the<br>SV160E2 to any IPv4 address. The IP address and<br>protocol will be stored in nonvolatile memory and<br>used on subsequent power-ups. | 2.2b    |
| Use the AMCI NET<br>Configurator Utility No restrictions on use. The software can be used to<br>set the SV160E2 to any IPv4 address and protocol.<br>The IP address and protocol choice will be stored in<br>nonvolatile memory and used on subsequent power-<br>ups. |   | 2.2c    |

Table T2.1 Methods for Setting the IP Address



There is a MAC address label on each SV160E2 which has a writable surface. There is room on the label for writing the programmed IP address of the unit. It is a best practice to use this label to document the IP address of the unit in case it is ever repurposed.



When using EtherNet/IP, the SV160E2 units also supports the DHCP protocol. You will need an EtherNet/IP DHCP server, such as the one available from Rockwell Automation, in order to use this protocol. The AMCI Net Configurator utility offers the same functionality and should be used unless your company policy prevents you from installing third party utilities.

## 2.2a Use Factory Default Settings

The factory default address for the SV160E2 unit is 192.168.0.50 with a subnet mask of 255.255.255.0. The easiest way to verify this address is with the ping command as described in the *Test Your Network Interface* section found on page 78.

If the driver does not respond to this address then it may take some effort to determine the correct address. There is a label on the driver that lists the MAC address of the device. There is space on the label for noting the IP address of the device if it is changed. If the address was not documented, a program called Wireshark (*https://www.wireshark.org/*) can be used to determine the address of the driver.

## 2.2b Use the Embedded Web Server

**PREREQUISITE:** You must know the present IP address of the SV160E2. The factory default address is 192.168.0.50.

**PREREQUISITE:** Task 1.6: *Power Wiring* found on page 82. You must be able to power the SV160E2.

**PREREQUISITE:** Tasks: 1.10 and 1.11, 1.12, or 1.13, starting on page 86. You must attach your SV160E2 to your computer.

**PREREQUISITE:** Reference 8: **Configuring Network Interfaces** which starts on page 77. The network interfaces on your computer must be on the same subnet before you can communicate with an SV160E2.

2.2b.1 Disconnect the SV160E2 from the host controller and cycle power to the unit

This ensures that the unit does not have any open connections to the host controller.

#### 2.2b.2 Start your web browser and connect to the SV160E2

The internal HTML pages should work with any browser. Once your web browser is running, enter the present IP address of the SV160E2 into the address bar. The default address is 192.168.0.50. The unit will respond with the following page.

| Localhost's IP Address 192.168.0.250        |                    |  |  |  |  |  |
|---|--------------------|--|--|--|--|--|
| Information Network Setup U                 | poate Firmware     |  |  |  |  |  |
| Information                                 | 1                  |  |  |  |  |  |
|   | Device Information |  |  |  |  |  |
| Network settings                            |                    |  |  |  |  |  |
| IP Address: 192.168.0.50                    |                    |  |  |  |  |  |
| Subnet Mask: 255.255.255.0                  |                    |  |  |  |  |  |
| Gateway: 192.168.0.1                        |                    |  |  |  |  |  |
| MAC Address: 00-90-C2-C0-03-ED              |                    |  |  |  |  |  |
| Protocol                                    |                    |  |  |  |  |  |
| Current: Ethernet-IP                        |                    |  |  |  |  |  |
| Cimmon .                                    |                    |  |  |  |  |  |
| Firmware<br>Version: 1.0.17                 |                    |  |  |  |  |  |
|   |                    |  |  |  |  |  |
|   |                    |  |  |  |  |  |
| Status: Computer control                    |                    |  |  |  |  |  |
| Device's Current Firmware Version<br>1.0.17 |                    |  |  |  |  |  |

Figure T2.1 SV160E2 Information Webpage

# 2.2b Use the Embedded Web Server (continued)

#### 2.2b.3 Network Setup Page

1) Click on the [Network Setup] button to switch to the Network Setup page shown below. This page shows the current IP address settings, as well as the configured protocol.

| Localhost's IP Address 192.168.0.250  | re |  |  |
|---|----|--|--|
| Device Configuration<br>Network settings<br>IP Address: 192.168.0.50<br>Subnet Mask: 255.255.0<br>Gateway: 192.168.0.1                        |    |  |  |
| Protocol <ul> <li>Ethernet/IP</li> <li>Modbus-TCP</li> <li>PROFINET (Protocol default address of 0.0.0 is set)</li> </ul> Write Configuration |    |  |  |
| 1.0.17  |    |  |  |

Current Firmware Version Figure T2.2 SV160E2 Network Setup Web Page

- 2) Enter your desired values into the IP Address, Subnet Mask, and Default Gateway fields.
- **NOTE** The Default Gateway setting is not optional! It must be set to a valid address on the chosen subnet. Because the Default Gateway is often not used in device level networks, if you do not have a required value for it, AMCI suggests setting the Default Gateway to the IP address of your host controller.
- 3) If need be, click on the proper radio button to select the required protocol.
- 4) Click on the [Write Configuration] button to write the new configuration to the unit. If there are any errors with the data, the unit will display a warning message instead of accepting the new values.

## 2.2b Use the Embedded Web Server (continued)

#### 2.2b.3 Network Setup Page (continued)

5) If the values are accepted, the following pages will be displayed while the data is being written to the unit.

**NOTE** Wait for the pop up window to appear before cycling power to the SV160E2. Cycling power before this window appears may corrupt the non-volatile memory of the unit. The SV160E2 unit will also flash its Network Status LED red to indicate that power must be cycled.

| Localhost's IP Address 192.168.0.250  |  | 192.168.0.50 says<br>Please cycle power to the AMCI unit.<br>ок<br>Advanced Micro Controls, Inc.  |
|---|--|---|
| Writing configuration.<br>Please wait   | CHANGES TO<br>ONCE THE WRITE<br>IS COMPLETED | Writing configuration.<br>Please wait   |
| <u>A new device configuration has been established:</u><br>IP Address: 192.168.1.50<br>Mask: 255.255.255.0<br>Gateway: 192.168.1.1<br>Protocol: Ethernet/IP |  | <u>A new device configuration has been established:</u><br>IP Address: 192.168.1.50<br>Mask: 255.255.255.0<br>Gateway: 192.168.1.1<br>Protocol: Ethernet/IP |

Figure T2.3 Write Configuration to Flash Memory Pages

6) Once instructed to, cycle power to the unit. You can now enter the new IP address into the address bar of your web browser to reconnect with the SV160E2.

# 2.2c Use the AMCI NET Configurator Utility

**PREREQUISITE:** You must know the present IP address. The factory default address is 192.168.0.50.

**PREREQUISITE:** Task 1.6: *Power Wiring* found on page 82. You must be able to power the SV160E2.

*PREREQUISITE:* Tasks: 1.10 and 1.11, 1.12, or 1.13, starting on page 86. You must attach your SV160E2 to your computer.

**PREREQUISITE:** Reference 8: **Configuring Network Interfaces** which starts on page 77. The network interfaces on your computer must be on the same subnet before you can communicate with the unit.

## 2.2c.1 Download the AMCI Net Configurator Utility

The AMCI Net Configurator utility is available on our website, *www.amci.com*. The latest version available should be used. It can be found in our *Support* section under *Software*. The program exists as a ZIP file, and at the time of this writing, the link was "AMCI Configuration software for all networked products...".

### 2.2c.2 Install the AMCI Net Configurator Utility

Once downloaded, simply extract the program from the ZIP file and run the program to install the AMCI Net Configurator utility on your computer. The software installs as most products do, giving you the option to change the file locations before installing the utility. Once the install is complete, a link to the utility is available on the Start Menu.

The install process only copies the utility to the designated location and creates links to the Start Menu. No changes are made to your registry settings.

### 2.2c.3 Verify that Your Host Controller is Disconnected from the SV160E2

EtherNet/IP is not a multi-master protocol. There can be only one bus master on the network at a time. In order to program the SV160E2, the AMCI Net Configurator utility must act as a bus master. Therefore, physically disconnect your host controller from the SV160E2 before starting the Net Configurator utility.

## 2.2c.4 Apply or Cycle Power to the SV160E2

Cycling power to the SV160E2 will reset any connections it may have with the host controller.

# 2.2c Use the AMCI Net Configurator Utility (continued)

#### 2.2c.5 Start the AMCI Net Configurator Utility

Double click on the utility's icon. A welcome screen similar to the one in figure T2.4 below will appear.

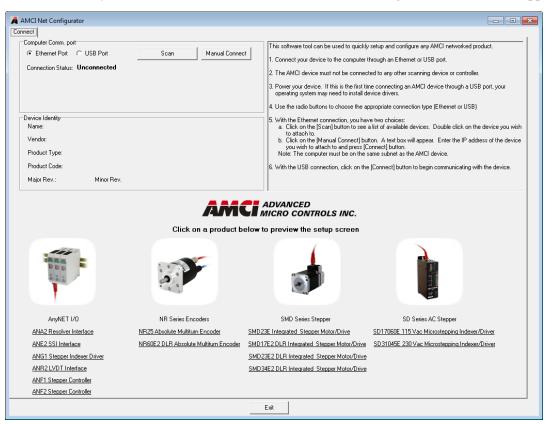


Figure T2.4 Net Configurator Welcome Screen

# 2.2c Use the AMCI Net Configurator Utility (continued)

#### 2.2c.6 Press the [SCAN] button and Connect to the SV160E2

Pressing the [Scan] button will open the window shown in figure T2.5. Note that scanning for the SV160E2 will only work when the unit and your network interface are on the same subnet. Optionally, you can press the [Manual Connect] button and enter the IP address of the unit.

| AMCI Net Configurator Scan |                          |                 |               |  |
|----------------------------|--------------------------|-----------------|---------------|--|
| IP Address                 | Product Name             | Revision        | Serial Number |  |
| 192.168.0.50               | SV160E2-v1E              | 1.7             | 470CB000      |  |
|                            |                          |                 |               |  |
|                            |                          |                 |               |  |
|                            |                          |                 |               |  |
|                            |                          |                 |               |  |
|                            |                          |                 |               |  |
|                            |                          |                 |               |  |
| I                          |                          |                 |               |  |
| Select a device            | and click connect or dou | ble click on it |               |  |
| Co                         | nnect Scan               |                 | xit           |  |
|                            | nnect Scan               |                 | XIL           |  |
|                            |                          |                 |               |  |

Figure T2.5 Scan for SV160E2

If scanning for the SV160E2, click on the IP Address of the unit and click on the [Connect] button. The Net Configurator utility will connect to the unit.

#### 2.2c.7 Click on the "Allow IP ... " Checkbox to Access the IP Settings

Figure T2.6 below shows the screen that results when you are connected to the SV160E2. In order to change the IP Address of the unit, you must first click on the checkbox next to the text "Allow IP configuration changes. You will need to restart the device." Once the checkbox is selected, the [Set IP Address] and protocol select buttons will be enabled.

| ect SV160E2                              |            |                     |                                 |                           |
|--|------------|---------------------|---------------------------------|---------------------------|
| omputer Comm. port                       |            |                     |                                 |                           |
| Ethernet Port                            | Disconnect |                     | guration changes. You will need | I to restart the device   |
| Connection Status: Connected             |            | Change IP Configura |                                 |                           |
|  |            | New IP Address      | 0.0.0.0                         | Set IP Address            |
| Enter IP Address: 192.168. 0.50          |            | Subnet Mask         | 0.0.0.0                         |                           |
| MAC Address: C8:8E:D1:B0:0C:47           |            |                     |                                 |                           |
|  |            | Default Gateway     | 0.0.0.0                         |                           |
| evice Identity<br>Name: SV160E2-v1E      |            | Device Setup        | •                               |                           |
| Vendor: Advanced Micro Controls Inc [10] |            |                     | EtherNet/IP>>                   | Set As EtherNet/IP Device |
|  |            |                     |                                 |                           |
| Product Type: Communication Adapter      |            |                     | Modbus                          | Set As ModBus-TCP Device  |
| Product Code: 28                         |            |                     | <u> </u>                        |                           |
| Major Rev.: 1 Minor Rev.7                |            |                     | TNETT                           | Set As PROFINET Device    |
|  |            |                     |                                 |                           |
|  |            | АМС                 | ADVANCED<br>MICRO CONTRO        | DLS INC.                  |

Figure T2.6 Enable IP Address Changes

## 2.2c Use the AMCI Net Configurator Utility (continued)

#### 2.2c.8 Set the IP Address, Subnet Mask, and Default Gateway

Enter your desired values into the IP Address, Subnet Mask, and Default Gateway fields.



The Default Gateway setting is not optional! In order to comply with the ODVA specification, it must be set to a valid address on the chosen subnet. Because the Default Gateway is often not used in device level networks, if you do not have a required value for it, AMCI suggests setting the Default Gateway to the IP address of your host controller.

#### 2.2c.9 Set the Communications Protocol

The factory default protocol for the SV160E2 is EtherNet/IP. In order to use the Modbus TCP or PROFINET protocols, simply click on the appropriate button.

#### 2.2c.10 Write the New IP Address to the SV160E2

Click on the [Set IP Address] button. If there is an error in the settings, the utility will tell you what is wrong. Once they are all correct, the utility will write the new IP address settings to the unit. These settings are automatically saved to nonvolatile memory.

#### 2.2c.11 Remove Power from the SV160E2

The new IP address will not be used until power to the unit has been cycled.

## **Task Complete**

# **TASK 3 (EtherNet/IP Option)**

# **IMPLICIT COMMUNICATIONS WITH AN EDS**

Many EtherNet/IP platforms support the use of EDS files to simplify the addition and configuration of devices. This chapter covers the installation and use of the EDS file for systems that are programmed with Rockwell Automation Studio 5000 version 20 and above. Other systems will follow a similar pattern. Consult your controller's documentation if you need additional information.

Note: Use of an EDS file is completely optional. The SV160E2 can always be added to a system as a generic module. If you are using RSLogix 5000 version 19 and below, or RSLogix 500, adding the unit as a generic module is the only option available.

### 3.1 Obtain the EDS file

All AMCI EDS files are located on our website at the following address:


#### > http://www.amci.com/industrial-automation-support/configuration-files/

Simply download the ZIP file and extract it to its own directory. The ZIP file contains the EDS text file and a custom icon file for the device.

## 3.2 Install the EDS file

#### 3.2.1 Start the EDS Hardware Installation Tool

1) Once Studio 5000 is running, in the menu bar select Tools → EDS Hardware Installation Tool. This will open the EDS Wizard.

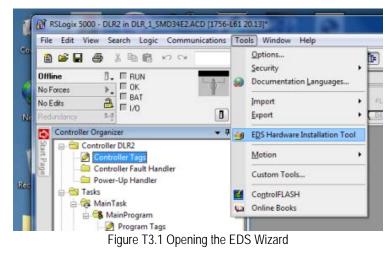

2) Click on [Next >] to advance to the Options screen.

## 3.2 Install the EDS file (continued)

#### 3.2.2 Install the EDS File

1) On the Options screen, select the Register an EDS file(s) radio button and press [Next >].



Figure T3.2 EDS Options Screen

2) The registration screen will open. Select the Register a single file radio button.

| Rockwell Automation's EDS Wizard   |
|--|
| Registration           Electronic Data Sheet file(s) will be added to your system for use in Rockwell           Automation applications.   |
| Register a single file   |
| C Register a directory of EDS files  |
| Named:<br>Z:VAMCI-PRODUCTS\EDS and GSD files\EDS Files\Servo EDS\SV1   |
| Z:\AMCI-PRODUCTS\EDS and GSD files\EDS Files\Servo_EDS\SV1   |
| • If there is an icon file (ico) with the same name as the file(s) you are registering then this image will be associated with the device. |
| To perform an installation test on the file(s), click Next   |
| < <u>B</u> ack <u>N</u> ext > Cancel   |

Figure T3.3 EDS Registration Screen

3) Click on the [Browse...] button and browse to the folder that contains the extracted EDS file you downloaded from the AMCI website. Select the EDS file and click on the [Open] button to return to the registration screen. Click on the [Next >] button to advance to the EDS file test screen.

# 3.2 Install the EDS file (continued)

3.2.2 Install the EDS File (continued)

4) Once at the EDS File Installation Test Results screen, expand the tree as needed to view the results of the installation test for the EDS file. You should see a green check mark next to the file name indicating that the EDS file is correct.

| Rockwell Automation's EDS Wizard   |
|--|
| EDS File Installation Test Results<br>This test evaluates each EDS file for errors in the EDS file. This test does not<br>guarantee EDS file validity. |
| □  |
| z:\amci-products\eds and gsd files\eds files\stepper_eds\sv160e2_v1_6.eds  |
|  |
|  |
|  |
|  |
|  |
| <u>Vi</u> ew file  |
| < <u>B</u> ack <u>N</u> ext > Cancel   |

Figure T3.4 EDS Test Screen

5) Press on the [Next >] button to advance to the Change Graphic Image screen. This screen gives you the ability to change the icon associated with the device.

| Rockwell Automation's EDS Wizard   |  |  |  |  |  |
|--|--|--|--|--|--|
| Change Graphic Image<br>You can change the graphic image that is associated with a device. |  |  |  |  |  |
| Product Types  Change icon  Product Types  Communications Adapter  SV160E2                 |  |  |  |  |  |
| < Back Next> Cancel  |  |  |  |  |  |

Figure T3.5 Change ECS Icon Screen

- 6) Click on the [Change icon...] button. In the window that opens, click on [Browse...] and browse to the folder that contains the extracted EDS and icon files you downloaded from the AMCI website.
- 7) Select the icon file (\*.ico) associated with the device. Click on the [Open] button and then on [OK] to return to the Change Graphic Image screen.
- 8) Click on the [Next...] button to advance to the completion screen. The Completion screen tells you that you have successfully completed the wizard.
- 9) Click on the [Finish] button to exit the EDS wizard.

## 3.3 Host System Configuration

Studio 5000 is used to configure both the ControlLogix and CompactLogix platforms. When using these platforms, you have the option of using a separate Ethernet Bridge module or an Ethernet port built into the processor.

If the Ethernet port is built into processor, the only step you have to take before adding an AMCI SV160E2 is to create a new project with the correct processor or modify an existing project. Once this is done, the Ethernet port will automatically appear in the Project Tree. If you are using an Ethernet bridge module, you will have to add it to the I/O Configuration tree before adding the unit to your project.

Refer to your Rockwell Automation documentation if you need instructions for configuring the ethernet port.

## 3.4 Add the SV160E2 to Your Project

You can add an AMCI SV160E2 to the project once the Ethernet port (built-in or bridge module) is configured. As shown in figure T3.6 below, the Ethernet port will be listed under the I/O Configuration tree.

1) Right click on the Ethernet port and then click on "New Module..." in the pop-up menu.

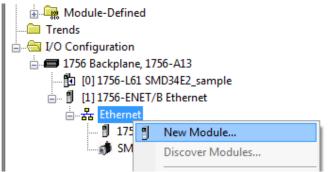


Figure T3.6 Adding an AMCI Ethernet Driver

- 2) In the resulting Select Module Type screen, select "Advanced Micro Controls In. (AMCI)" in the Vendor Filters. This will limit the results to catalog numbers from AMCI.
- 3) Select "SV160E2" in the resulting list.
- 4) Click on the [Create] button to create the module.
- 5) Click on [Close] if necessary to close the Select Module Type screen.

| Select N | Module Type                          |                      |               |          |                                  |  |                                |
|----------|--------------------------------------|----------------------|---------------|----------|----------------------------------|--|--------------------------------|
| Cata     | alog Module Discovery Favo           | rites                |               |          |                                  |  |                                |
|          |                                      |                      |               |          |                                  |  |                                |
| [        | Enter Search Text for Module         | Туре                 | Clear Filters |          |                                  |  | H <u>i</u> de Filters <b>☆</b> |
|          | Module Ty                            | rpe Category Filters |               | <u> </u> | Modul                            | e Type Vendor Filters                            | ·                              |
|          | Analog                               |                      |               |          | Allen-Bradley                    |  | =                              |
|          | CIP Motion Converter                 |                      |               |          | 4                                | ntrols Inc. (AMCI)                               |                                |
|          | Communication                        |                      |               |          | Cognex Corporation               |  |                                |
|          | Communications Adapter<br>Controller |                      |               | - E      | Endress+Hauser<br>FANUC CORPORA  | FION   |                                |
| l l      | Controller                           |                      |               | •        |                                  | non  | •                              |
|          |                                      | Description          |               |          | Vendor                           | Category   |                                |
|          | AMCI-NR25-ENIP                       | AMCI-NR25-ENIP       |               |          | Advanced Micro                   | Encoder  |                                |
|          | AnyNET-E 20_Word                     | AnyNET-E 20_Word     |               |          | Advanced Micro                   | Communications Adapter                           |                                |
|          | SD17060E2                            | SD17060E2            |               |          |                                  | Communications Adapter                           |                                |
|          | SD31045E2                            | SD31045E2            |               |          |                                  | Communications Adapter                           |                                |
|          | SMD23E2<br>SMD34E2                   | SMD23E2<br>SMD34E2   |               |          | Advanced Micro<br>Advanced Micro | Communications Adapter<br>Communications Adapter |                                |
|          | SV160E2                              | SV160E2              |               |          |                                  | Communications Adapter                           |                                |
| 1        | 5710022                              | 5710022              |               |          |                                  | Communications / Mapter                          |                                |
|          | 7 of 426 Module Types Found          |                      |               |          |                                  |  | Add to Favorites               |
|          | Close on Create                      |                      |               |          |                                  | Create   | Close Help                     |

Figure T3.7 Selecting the SV160E2

## 3.5 SV160E2 Properties Setup

If you are continuing from step 3.4, the resulting New Module screen is used to configure the network connection between the SV160E2 and your controller. If you need to open the screen to perform this task at a later time, right click on the SV160E2 in the project tree and then select "Properties" from the drop-down menu.

**NOTE** Tabs that are not listed in the steps below are filled with reasonable defaults by the EDS file.

#### 3.5.1 General Tab

The Name, Description, and IP address of the device must be specified here. The [Change...] button allows you to change the Module Definition if needed.

#### 3.5.2 Connection Tab

The default RPI time is eight milliseconds. This value can be changed in this tab.

#### 3.5.3 Configuration Tab

The Configuration tab is used to define the configuration data that is written down to the SV160E2 when the device connects to the network. You can also click on the [Apply] button to write down the configuration data to the unit at any time.

| ID 4  | ID △ Name Value Units Style Description 4   |     |                           |                          |                 |                                 |    |
|-------|---|-----|---------------------------|--------------------------|-----------------|---------------------------------|----|
| 1     | Data Endian   | -   | XXXXXXXX XXXXXX0          | 0=Little 1=Big Endian    |                 | Data Endian                     |    |
| 2     | Input 1 Function  |     | 0 = General Purpose 🔽     |                          |                 | Input 1 Function                |    |
| 3     | Input 1 Active State  |     | 1 = Active High (NO)      |                          |                 | Input 1 Active State            |    |
| 4     | Input 2 Function  |     | 0 = General Purpose 🔻     |                          |                 | Input 2 Function                |    |
| 5     | Input 2 Active State  |     | 1 = Active High (NO) 🔽    |                          |                 | Input 2 Active State            | Ξ  |
| 6     | Input 3 Function  | 0 = | = General Purpose / STO 🔻 |                          |                 | Input 3 Function                |    |
| 7     | Input 3 Active State  |     | 1 = Active High (NO) 💌    |                          |                 | Input 3 Active State            |    |
| 8     | Input 4 Function  | 0 = | = General Purpose / STO 🔻 |                          |                 | Input 4 Function                |    |
| 9     | Input 4 Active State  |     | 1 = Active High (NO) 🔽    |                          |                 | Input 4 Active State            |    |
| 10    | Reserved  | -   | 0                         |                          | Decimal 🔻       | Unsigned 16-bit INT             |    |
| 11    | Counts per Revolution   | -   | 16384                     | Counts                   | Decimal 🔻       | Counts per Revolution 16384     |    |
| 12    | Immediate Stop Deceleration   | -   | 0                         | Counts/sec/ms            | Decimal 💌       | Immediate Stop Deceleration     |    |
| 13    | Continuous Torque Limit Nm  | -   | 50                        | Nm x100                  | Decimal 🔻       | Continuous Torque Limit Nm      |    |
| 14    | Peak Torque Limit Nm  | -   | 130                       | Nm x100                  | Decimal 💌       | Peak Torque Limit Nm            |    |
| 15    | Overvoltage Threshold   | -   | 0                         | Volts x10                | Decimal 💌       | Overvoltage Threshold           |    |
| 16    | Velocity Loop Proportional Gain   | -   | 1854                      |                          | Decimal 🔻       | Velocity Loop Proportional G    |    |
| 17    | Velocity Loop Integral Gain   | -   | 0                         |                          | Decimal 💌       | Velocity Loop Integral Gain     |    |
| 18    | Velocity Feedback Low-Pass F  | -   | 2                         |                          | Decimal 💌       | Velocity Feedback Low-Pas:      |    |
| 19    | Position Loop Proportional Gain   | -   | 2185                      |                          | Decimal 💌       | Position Loop Proportional G    |    |
| 20    | Position Loop Integral Gain   | •   | 485                       |                          | Decimal 💌       | Position Loop Integral Gain     |    |
| 21    | Position Loop Derivative Gain   | -   | 0                         |                          | Decimal 💌       | Position Loop Derivative Gair   |    |
| 22    | Maximum Position Error Limit  | -   | 4096                      | Counts                   | Decimal 💌       | Maximum Position Error Lim      |    |
| 23    | STO Discrepancy Time  | -   | -                         | Milliseconds             |                 | STO Discrepancy Time            | ÷  |
| 124   | Deserved 20   |     | <u>^</u>                  |                          | Desimal 🗆       | Полония на кот                  |    |
| ) The | Factory Defaults<br>values displayed here are from the<br>n changes are applied or a connec |     |                           | are stored in the contro | oller and are a | automatically sent to the modul | le |

Figure T3.8 SV160E2 Configuration with EDS File

The EDS file defines tags that are used to configure the SV160E2. These tags follow the format of the Configuration Data given in reference chapter 6, *Configuration Mode Data Format*, starting on page 45.

# 3.6 Buffering the I/O Data

Input and output data is transferred asynchronously to the program scan. The input data tags should be buffered with Synchronous Copy File instructions to guarantee stable input data during the program scan.

| The data from the SV160E2 is updated is asynchronously to the program scan.<br>driver does not change in the middle of the ladder logic program by copying it to the<br>through buffered_SV160E2_data[9]. |  |
|---|--|
| It is these buffered registers that your ladder logic program should use when refe  | CPS  |
|   | Synchronous Copy File<br>Source AMCI_SV160E2:I.Data[0]<br>Dest buffered_SV160E2_data[0]<br>Length 10 |
|   |  |

#### Figure T3.9 Buffer I/O Data

When copying input data, the data can be converted from byte to integer format by specifying an integer array as the destination for the instruction. The array must contain at least ten integer elements. The length of the copy should be ten.

The format of the output and input data is covered in the *Configuration Mode Data Format* and *Command Mode Data Format* reference chapters, starting on pages 45 and 57 respectively.

All controllers that support EtherNet/IP support explicit messaging. When using explicit messaging, Message Instructions must be added to your program to communicate with the SV160E2. Explicit messaging can also be use on platforms that also support implicit messaging.

Rockwell Automation controllers which are programmed with the RSLogix 500 software only support explicit messaging. A MicroLogix 1100 will be used as an example in this chapter.

## 4.1 Required Message Instructions

Two instructions are required to transfer data between the PLC and the SV160E2. One instruction reads data from the unit and the other writes data to it. The following table gives the required attributes for the instructions.

|              | Read Instruction | Write Instruction |
|--------------|------------------|-------------------|
| Service Type | Read Assembly    | Write Assembly    |
| Service Code | E (hex)          | 10 (hex)          |
| Class        | 4 (hex)          | 4 (hex)           |
| Instance     | 100 (decimal)    | 150 (decimal)     |
| Attribute    | 3 (hex)          | 3 (hex)           |
| Length       | 20 bytes         | 20 bytes          |

Table T4.1 Message Instruction Attributes

NOTE Only RSLogix 500 version 8.0 or above can be used to configure Message Instructions to communicate with an EtherNet/IP device. Message Instructions in version 10 of RSLogix 500 do not work correctly.

## 4.2 Create Four New Data Files.

- ➤ An Integer file to contain the data from the SV160E2. This file must be at least 10 words in length.
- ➤ An Integer file to contain the data sent to the SV160E2. This file must be at least 10 words in length.
- ➤ A Message (MG) data file. This file must have at least two elements, one to control the Read Operation and one to control the Write Operation.
- ➤ An Extended Routing Information (RIX) data file. This file is used to store information used by the Message Instructions. This file must have at least two elements, one for the Read Operation and one for the Write Operation.

# 4.3 Add the Message Instructions to your Ladder Logic

The following rungs show how you can alternately read data from and write data to your SV160E2.

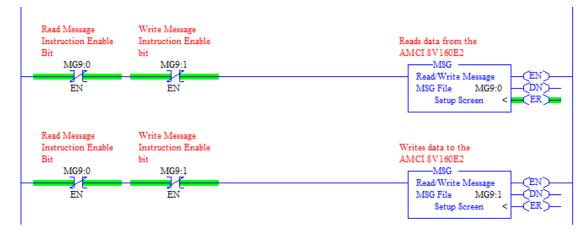


Figure T4.1 Message Instruction Example

1) Double click on *Setup Screen* text inside the Message Instruction. The following window will open. Note that this is the default window and its appearance will change considerably as you progress through these steps.

| 🖉 MSG - Rung #2:5   |   |
|---|---|
| General         This Controller         Channel:       0 (Integral)         Communication Command:       500CPU Read         Data Table Address:       ?         Size in Elements:       1         Target Device          Message Timeout :       5         Data Table Address:       ?         Local Node Addr (dec):       0         Local / Remote :       Local | Control Bits<br>Ignore if timed out (TO): 0<br>Awaiting Execution (EW): 0<br>Error (ER): 0<br>Message done (DN): 0<br>Message Transmitting (ST): 0<br>Message Enabled (EN): 0 |
|   | Error<br>Error Code(Hex): 0   |
| Error Description     No errors   |   |

Figure T4.2 Message Instruction Setup Screen

- 2) Double click in the *Channel* field, click on the  $\mathbf{\nabla}$ , select "1 (Integral)", and press Enter.
- 3) Double click in the *Communication Command* field, click on the ▼, select "CIP Generic" and press Enter.
- 4) If the Message Instruction is being used to read data from the SV160E2, enter the integer file where the data will be placed in the *Data Table Address (Received)* field and press enter.
- 5) If the Message Instruction is being used to write data to the SV160E2, enter the integer file where the source data will be located in the *Data Table Address (Send)* field and press Enter.
- 6) Enter "20" as the number of bytes needed in either the *Size In Bytes (Receive)* or *Size In Bytes (Send)* fields. The SV160E2 requires 20 bytes for both Receive and Send.
- 7) Enter a RIX address in the *Extended Routing* Info field. Please note that each Message Instruction must have its own RIX address.

## 4.3 Add the Message Instructions to your Ladder Logic (continued)

- 8) Double click in the *Service* field and select "Read Assembly" for a Message Instruction that is being used to read data from the SV160E2, or "Write Assemble" for a Message Instruction that is being used to send data to the SV160E2, and press Enter.
- 9) For *Read* operations, the *Service Code* field will change to "E" (hex). For *Write* operations, the *Service Code* field will change to "10" (hex). For both read and write operations, the *Class* field will change to "4" (hex), and the *Attribute* field will change to "3" (hex).
- 10)For Read operations, enter a value of 100 decimal (64 hex) in the *Instance* field. For Write operations, enter a value of 150 decimal (96 hex) in the *Instance* field.

The figure below show a typical configuration for Message Instructions being used to read data from the SV160E2. Please note that the Data Table Address (Receive) field may be different in your application.

| 🖉 MSG - Rung #2:5   |  |
|---|--|
| General MultiHop Send Data Receive Data   |  |
| This Controller         Channel:       1 (Integral)         Communication Command:       CIP Generic         Data Table Address (Receive):       N9:0       (Send):         Size in Bytes (Receive):       20       (Send):       N/A         Target Device       Target Device       Target Device       Communication | Control Bits<br>Ignore if timed out (TO): 0<br>Break Connection (BK): 0<br>Awaiting Execution (EW): 0<br>Error (ER): 0<br>Message done (DN): 0 |
| Message Timeout : 5   | Message Transmitting (ST): 0<br>Message Enabled (EN): 0  |
| Local / Remote : Local MultiHop: Yes<br>Extended Routing Info File(RIX): RIX10:0<br>Service: Read Assembly Service Code (hex): E<br>Class (hex): 4 (dec): 4<br>Instance (hex): 64 (dec): 100<br>Attribute (hex): 3 (dec): 3   | Error Code(Hex): 0   |
| Error Description<br>No errors  |  |

Figure T4.3 Read Message Instruction Setup Screen

# 4.3 Add the Message Instructions to your Ladder Logic (continued)

The figure below show a typical configuration for Message Instructions being used to write data to the SV160E2. Please note that the Data Table Address (Send) field may be different in your application.

| 🔀 MSG - Rung #2:5  |   |
|--|---|
| General   MultiHop   Send Data   Receive Data  |   |
| This Controller         Channel:       1 (Integral)         Communication Command:       CIP Generic         Data Table Address (Receive):       N/A       (Send):       N12:0         Size in Bytes (Receive):       N/A       (Send):       20         Target Device       Message Timeout :       5 | Control Bits<br>Ignore if timed out (TO): 0<br>Break Connection (BK): 0<br>Awaiting Execution (EW): 0<br>Error (ER): 0<br>Message done (DN): 0<br>Message Transmitting (ST): 0<br>Message Enabled (EN): 0 |
| Local / Remote : Local MultiHop: Yes<br>Extended Routing Info File(RIX): RIX10:1<br>Service: Write Assembly Service Code (hex): 10<br>Class (hex): 4 (dec): 4<br>Instance (hex): 96 (dec): 150<br>Attribute (hex): 3 (dec): 3  | Error<br>Error Code(Hex): 0   |
| Error Description<br>No errors   |   |

Figure T4.4 Write Message Instruction Setup Screen

Click on the MultiHop tab on the top of the window. As shown in figure T4.5, enter the IP address of the SV160E2 and press Enter.

| 对 MSG - Rung #2:5          |              |                           | - • •        |
|----------------------------|--------------|---------------------------|--------------|
| General MultiHop Send Data | Receive Data |                           |              |
|                            |              |                           |              |
| Ins = Add Hop              |              | Del = Remove Hop          |              |
| From Device                | From Port    | To Address Type           | To Address   |
| This MicroLogix            | Channel 1    | EtherNet/IP Device (str.) | 192.168.0.50 |
|                            |              |                           |              |
|                            |              |                           |              |
| 1                          |              |                           |              |
|                            |              |                           |              |
|                            |              |                           |              |
| ]                          |              |                           |              |

Figure T4.5 Message Instruction MultiHop Settings

After you are finished adding both the read and write message instructions to your program, save and down-load the program to the PLC.

## 4.4 Troubleshooting

If you are unable to communicate with the SV160E2, the problem may be that the Ethernet port of your MicroLogix 1100 has not been configured. To check this:

1) Double click on Channel Configuration in the Project Tree and then select the Channel 1 tab. The following window will open.

| Channel Configuration   | ×    |
|---|------|
| General Channel 0 Channel 1   |      |
| Driver Ethemet  |      |
|   |      |
| Hardware Address: 00:0F:73:00:CB:3E Network Link ID 0                 |      |
| IP Address: 192 . 168 . 0 . 1   |      |
| Subnet Mask: 255 . 255 . 255 . 0                                      |      |
| Gateway Address: 0 . 0 . 0 . 0  |      |
| Default Domain Name:  |      |
| Primary Name Server: 0 . 0 . 0 . 0                                    |      |
| Secondary Name Server: 0 . 0 . 0 . 0                                  |      |
| Protocol Control  |      |
| BOOTP Enable DHCP Enable Msg Connection Timeout (x 1mS): 15000        |      |
| SNMP Server Enable SMTP Client Enable Msg Reply Timeout (x 1mS): 3000 |      |
| Inactivity Timeout (x Min): 30  | _    |
|   |      |
| Auto Negotiate  |      |
| Port Setting 10/100 Mbps Full Duplex/Half Duplex                      |      |
|   |      |
| Contact:  | -    |
| Location:   | -    |
| 1   |      |
|   |      |
|   |      |
|   |      |
|   | Help |
|   | neib |

Figure T4.6 MicroLogix Ethernet Configuration Screen

2) Enter the IP address and Subnet Mask of your MicroLogix 1100, (not the address of the SV160E2) and click on [Apply]. The Ethernet Port should now be working.



AMCI is aware of an issue with the RIX data type in version 10 of RSLogix 500. If you are experiencing communications errors and are running version 10, please contact Rockwell Automation for support.

Notes

An AMCI SV160E2 that has been configured for the Modbus TCP protocol requires a host controller to issue configuration data and motion commands to the unit. This chapter tellS you how the I/O words used by an AMCI SV160E2 are mapped to the Modbus I/O registers.

## 5.1 Enable Modbus TCP Protocol

The AMCI Net Configurator utility can be used to change the communications protocol used by the SV160E2. This is typically done while setting the IP address. Specifically, follow the steps in section 2.2c, *Use the AMCI NET Configurator Utility* which starts on page 93.

#### 5.2 Modbus Addressing

The register addresses used in this manual are the *Modbus logical reference numbers*<sup> $\dagger$ </sup>, which are unsigned integers starting at zero. This is often called *zero based* addressing. In this scheme, the first register is given an address of zero. This is the actual addressing scheme used in the Modbus packets.

Another common addressing scheme is *one based* or *data model* addressing. In this scheme, the register's number is used as its address, so the first register, Register 1 in the data model, has an address of 1.

#### 5.2.1 Modbus Table Mapping

The Discrete Input and Input Register tables in the Modbus data model map to the same physical memory locations in the SV160E2 units.

- These registers hold data that is reported from the driver to the host controller. This data is typically command responses and status data.
- > Addresses for these registers and inputs start at 0 in zero based addressing.

As examples:

- > Discrete Input 0 is the same memory location as bit 0 of the first Input Register.
- > Register address 3, the fourth register, contains Discrete Inputs 48 through 63.

The Coil and Holding Register tables in the Modbus data model map to the same physical memory locations in the SV160E2 units.

- > These registers hold data that is from the host controller to the unit. This data is typically commands.
- ➤ Addresses for these registers start at 1024 in zero based addressing. Coil addresses start at 16,384 in zero based addressing (1024\*16).

As examples:

- > Coil 16384 is the same memory location as bit 0 of the first Holding Register.
- Register address 1025, the address of the second Holding Register, contains Discrete oUTPUTS 16,400 through 16,415 in zero based addressing.

#### 5.2.2 Host Addressing

Your host controller may not use these basic addressing schemes for communicating over a Modbus connection. For example, Modicon controllers use addresses starting at 30000 for Input Registers and addresses starting at 40000 for Holding Registers. GE hosts internally use their %R memory for Holding Registers and %AI memory for Input Registers.

If this is the case, you will define a mapping between your host controller's addressing scheme and the zero based Modbus TCP addresses when you add the SV160E2 to your host controller. Refer to your host controller's documentation for information on how to accomplish this.

<sup>†</sup> MODBUS Application Protocol Specification V1.1b3, section 4.3: MODBUS Data model. *www.modbus.org* 

## 5.3 AMCI Modbus TCP Memory Layout

The SV160E2 has a starting Input Register address of 0 and a starting Output Register address of 1024. Input Registers hold the data from the driver while Output Registers hold the data to be written to the unit. Figure T5.1 shows how an SV160E2 is mapped to the Modbus data reference. The complete specification for the Modbus protocol can be downloaded at http://www.modbus.org/specs.php.

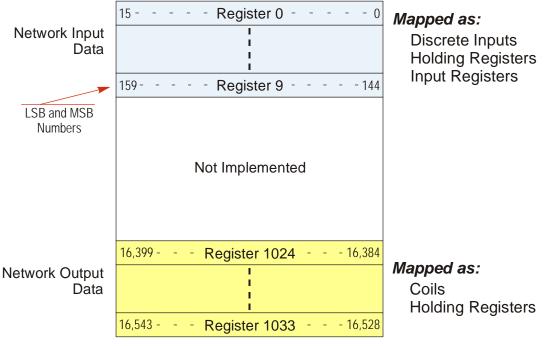


Figure T5.1 Modbus Data Reference Map

## 5.4 Supported Number of Connections

All SV160E2 units support five concurrent connections. When connections exist, the Network Status (NS) LED on the back of the unit will flash green. The number of blinks indicate the number of active connections. There is a two second break between groups of flashes.

## 5.5 Supported Modbus Functions

| Function<br>Code | Function Name            | SV160E2<br>Register | Addressing method  |
|------------------|--------------------------|---------------------|--|
| 1                | Read Coils               | OUTPUT              | Bit: Addresses starting at 16,384                          |
| 2                | Read Discrete Inputs     | INPUT               | Bit: Addresses starting at 0                               |
| 3                | Read Holding Registers   | OUTPUT & INPUT      | Word: Out Regs. Starting at 1024<br>In Regs. Starting at 0 |
| 4                | Read Input Registers     | INPUT               | Word: Addresses starting at 0.                             |
| 5                | Write Single Coil        | OUTPUT              | Bit: Addresses starting at 16,384                          |
| 6                | Write Single Register    | OUTPUT              | Word: Addresses starting at 1024                           |
| 15               | Write Multiple Coils     | OUTPUT              | Bit: Addresses starting at 16,384                          |
| 16               | Write Multiple Registers | OUTPUT              | Word: Addresses starting at 1024                           |
| 22               | Mask Write Register      | OUTPUT              | Word: Addresses starting at 1024                           |
| 23               | Read/Write Registers     | INPUT/OUTPUT        | Word: Out Regs. Starting at 1024<br>In Regs. Starting at 0 |

Table T5.1 Supported Modbus Functions

Table T5.1 above lists all of the Modbus functions supported by an SV160E2. AMCI supports all of these functions so that you can control the unit as you see fit. However, if you are looking for the easiest way to interface with your unit, then you only need to use the *Read/Write Registers* function, which is function code 23.

# NOTE ≽

Each SV160E2 buffers the data that is sent to it over the network. If you use the *Read/Write Registers* function to write configuration data to the unit, then the data read with that command will not contain the response to the new configuration data. The response to the new data will be sent with the next data read.

## 5.6 Supported Modbus Exceptions

| Code | Name                 | Description   |
|------|----------------------|---|
| 01   | Illegal function     | The SV160E2 does not support the function code in the query                   |
| 02   | Illegal data address | The data address received in the query is outside the initialized memory area |
| 03   | Illegal data value   | The data in the request is illegal  |

Table T5.2 Supported Modbus Exceptions

Notes

## **TASK 6 (PROFINET Option)**

## **PROFINET NETWORK CONFIGURATION**

This chapter outlines the steps commonly needed to get an SV160E2 communicating with the PROFINET master. A Siemens SIMATIC S7-1212C controller is used as an example.

#### **Basic Steps**

Configuring a PROFINET host requires a few basic steps.

- 1) Download the ZIP archive that contains the GSDML files for the SV160E2 from the www.amci.com website.
- 2) Install the GSDML file into the configuration software for your host controller.
- 3) Add the SV160E2 to the PROFINET Network.
- 4) Set the I/O word addresses used to communicate with the unit.

#### 6.1 Download the GSDML files

The GSDML files are available on the AMCI website on the *http://www.amci.com/industrial-automation-support/configuration-files/* web page. The file is a ZIP archive that has to be extracted to a folder on your computer. Extracting the ZIP file will leave you with multiple files. One is the GSDML file and the others are icon files for the various devices.

### 6.2 GSDML File Installation

- 1) Open or create a new project that will include the SV160E2 and open the Project View of the project.
- 2) In the menu, select *Options* -> *Manage general station description files(GSD).*
- 3) In the window that opens, click on the [...] button and navigate to the folder that contains the extracted GSDML file you downloaded from the AMCI website. Once at the folder, click on the [OK] button.
- 4) Click on the check box next to the name of the GSD file and click on the [Install] button. The system will install the GSD file.
- 5) Click the [Close] button and wait for the software to finish installing the file and updating the Hardware Catalog.

|    | age general<br>stalled GSD |       | ion descriptior<br>GSDs in the p |             |              |                   | ×            |
|----|----------------------------|-------|----------------------------------|-------------|--------------|-------------------|--------------|
| So | urce path:                 | C:\U  | sers\TechDocs\Do                 | wnloads\GSD |              |                   |              |
| Co | ntent of imp               | porte | d path                           |             |              |                   |              |
|    | File                       |       |                                  | Version     | Language     | Status            | Info         |
|    | GSDML-V2.33                | 3-AMC | I-SD-SMD-2017                    | V2.33       | English, Ger | Not yet installed | ProfiNet - I |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
|    |                            |       |                                  |             |              |                   |              |
| <  |                            |       |                                  |             | •            |                   | >            |
|    |                            |       |                                  |             |              | Delete Install    | Cancel       |

Figure T6.1 GSD File Installation

#### 6.3 Configure the PROFINET Network

A CPU must be added to the project and the PROFINET network must be configured before the SV160E2 can be added to the system.

Refer to Siemens documentation for information on configuring the PROFINET network to suit your application.

### 6.4 Add the SV160E2 to the PROFINET Network

- 1) With the project open in Project View, double click on "Device & Networks" in the project tree.
- 2) If need be, click on the "Hardware Catalog" vertical tab to open the Hardware Catalog.
- 3) You can search for "SV160", or browse to the SV160x2 icon by clicking through *Other field devices* +> *PROFINET IO* +> *IO* +> *Advanced Micro Controls Inc.* +> *AMCI\_Products* +> *AMCI\_Drives.* Drag and drop the appropriate icon onto the PROFINET network.
- 4) Drag the green square on the SV160x2 icon onto the PROFINET network line to connect the device to the network.

| SV160x2_Test_Program_CP_V15.1 → Devices & networks  |                 |                                     | _ <b>-</b> = ×  | Hardware catalog 📰 🔳  |                  |
|---|-----------------|-------------------------------------|-----------------|---|------------------|
|   | opology viev    | V 🚠 Network view                    | Device view     | Options   |                  |
| 💦 Network 🔡 Connections 🛛 HMI connection 💌 🔡 🖽 🛄 🍳 🛨  | <b>3</b>        | Network overview                    | ]               |   | Hardware catalog |
|   | ^               | Device                              | Туре            | ✓ Catalog   | dwa              |
|   |                 | <ul> <li>S7-1200 station</li> </ul> |                 | Mi fin  | a 8              |
|   | =               | CPU                                 | CPU 1212        |   | <u>" </u> ]      |
| PLC_1 sv160x2<br>CPU 1212C SV160x2  |                 | <ul> <li>GSD device 1</li> </ul>    | GSD device      | Filter Profile: <all></all>   | 5 B              |
|   |                 | ▶ smd34x2                           | SMD34x2         | Controllers   | 9                |
| PLC_1   |                 |                                     |                 | ▶ 🛅 HMI   | _                |
|   |                 |                                     |                 | C systems   | Online tools     |
| PN/IE_1   |                 |                                     |                 | Drives & starters   | P                |
|   |                 |                                     |                 | Image: Interview of the second s | 5                |
|   |                 |                                     |                 | Detecting & Monitoring  | et               |
|   |                 |                                     |                 | Distributed I/O   | 0                |
|   |                 |                                     |                 | Power supply & distribution   |                  |
|   |                 |                                     |                 | Field devices   |                  |
|   | -               |                                     |                 | ✓ Im Other field devices  | Tasks            |
|   |                 |                                     |                 | Additional Ethernet devices   | Se               |
|   |                 |                                     |                 | ▼ Image PROFINETIO  | Ś                |
|   |                 |                                     |                 | Drives  |                  |
|   |                 |                                     |                 | Encoders  |                  |
|   |                 |                                     |                 | 🕨 🧊 Gateway   | Libraries        |
|   |                 |                                     |                 | 🕨 🧊 General   | rar              |
|   |                 |                                     |                 | √ 1/0   | les              |
|   |                 |                                     |                 | <ul> <li>Advanced Micro Controls, Inc.</li> </ul>   |                  |
|   |                 |                                     |                 | AMCI_Products   |                  |
|   | ~               |                                     |                 | 🕶 🛅 AMCI Drives   |                  |
| < III > 100%  |                 | <                                   |                 | 5D17060x2   |                  |
|   |                 |                                     | >               | <b>SD31045x2</b>  |                  |
|   | Properties      | 🔁 Info 🔒 🗓 Diagi                    | nostics 🛛 🗆 🚽 🦳 | SMD17x2   |                  |
| General   |                 |                                     |                 | SMD23x2   |                  |
|   |                 |                                     |                 | SMD34x2   |                  |
|   |                 |                                     |                 | 5V160x2   |                  |
| No 'properties' available.  |                 |                                     |                 | Ensors  |                  |
|   |                 |                                     |                 | Im PROFIBUS DP  |                  |
| No 'properties' can be shown at the moment. There is either no object selected<br>properties. | or the selected | object does not have any d          | lis pia ya ble  |   |                  |

Figure T6.2 Networked Driver Added to PROFINET Network

## 6.4 Add the SV160E2 to the PROFINET Network (continued)

- 5) Right click on the SV160x2 icon and select "Properties" from the pop up menu. The Inspector window will open at the bottom of the screen. Under the "General" tab, select the "►General" heading. You can rename the SV160E2 by changing the Name: field.
- 6) Under the "▶ PROFINET interface [x1]" heading, select "Ethernet addresses". Under the IP protocol section, set the desired IP address and subnet mask for the SV160E2.

| SV160x2_Test_Program_CP_V   | /15.1 → Devices & networks                 |                                |   |   | _₽≡×        |
|---|--|--------------------------------|---|---|-------------|
|   |  |                                | 📱 Topology view   | 📩 Network view                          | Device view |
| Network Connections   | MI connection 🔽 🕎 🗮                        |                                | Network overview  | Connections                             | ••          |
| PLC_1<br>CPU 1212C  | sv160x2<br>SV160x2<br>PLC_1                |                                | Pevice           \$7-1200 station           CPU           GSD device_1           \$v160x2 | -                                       |             |
| <   | PN/IE_1                                    |                                | 6   | 11                                      | >           |
| sv160x2 [SV160x2]   | 100.0                                      | Y U                            |   | 🗓 Info 🛛 🗓 Diagr                        |             |
| General IO tags Sy  | stem constants Texts                       |                                |   | , i i i i i i i i i i i i i i i i i i i |             |
| ✓ General<br>General<br>Catalog information   | Ethernet addresses                         |                                |   |   | *           |
| PROFINET interface [X1]     General     Ethernet addresses     Advanced options     Interface options | Interface networked with<br>ep 6 Subnet:   | PN/IE_1<br>Add new subnet      | ]   |   | <b>.</b>    |
| Media redundancy<br>Real time settings<br>Port 1 [X1 P1 R]<br>Port 2 [X1 P2 R]                        | IP protocol<br>IP address:<br>Subnet mask: | 192.168.0.155<br>255.255.255.0 |   |   |             |
| Identification & Maintenance  | Router address :                           | Synchronize router setting:    | s with IO controller  |   |             |
|   | PROFINET                                   | Generate PROFINET device       | name automatically  |   |             |
|   | PROFINET device name:                      | sv160x2                        |   |   |             |
|   | Converted name:                            | sv160x2                        |   |   |             |
|   | Device number:                             | 1                              |   |   | · ·         |
|   |  |                                |   |   | ¥           |

Figure T6.3 Networked Driver IP Addressing

## 6.5 Configure the SV160E2

1) Continuing with the Inspector Window, click on the "Module parameters" heading. The display will change to show all of the parameters of the SV160E2. These configuration parameters are written down to the SV160E2 whenever it connects to the network.

| sv160x2 [SV160x2]  | 🖳 Properties 🔛 Info 🖳 Diagnostics 💷 🖃 🥆 |
|--|---|
| General IO tags System constants Texts   |   |
| General     Module parameters  | ×                                       |
| Catalog information  | I                                       |
| PROFINET interface [X1]     Configuration Parameters                               |   |
| General  |   |
| Ethernet addresses Data Endian: Big Endian   | [1]                                     |
| ✓ Advanced options Input 1 Function: General Pure                                  | rpose Input [000]                       |
| Interface options Input 1 Active Level: Input Active                               | High [1]                                |
| Media redundancy   | rpose Input [000]                       |
|  |   |
| IO cycle Input 2 Active Level: Input Active  | • High [1]                              |
| General Input 3 Function: General Pur  | rpose Input [000]                       |
| Port interconnection Input 3 Active Level: Input Active                            | e High [1]                              |
|  | rpose Input [000]                       |
| ✓ Port 2 [X1 P2 R]     ✓ Input 4 Active Level: Input Active                        |   |
| General Input vice cover. Input vice cover.  |   |
| Port interconnection   |   |
| Port options Continuous Motor Current Limit: 50                                    |   |
| Identification & Maintenance<br>Module parameters<br>Peak Motor Current Limit: 130 |   |
| Overvoltage Treshold: 0  |   |
| Velocity Loop Proportional Gain: 4672  |   |
| Velocity Loop Integral Gain: 5179  |   |
| Velocity Feedback Low-Pass<br>Filter: 1  |   |
| Position Loop Proportional<br>Gain: 6144   |   |
| Position Loop Integral Gain: 192   |   |
| Position Loop Derivative Gain: 0   |   |

Figure T6.4 Configuration Parameters

2) Configuration is done with a combination of drop down menus and value fields. Drop down menus limit you to a set of valid selections. When entering numbers into value fields, a pop up will appear that shows you the valid range of values.

**NOTE** Even though your selections are limited, it is still possible to mis-configure the SV160E2 by using this screen. For example, it is possible to configure two or more inputs as CW Limit Switches. If an error occurs, the SV160E2 will show that a configuration error exists after it connects to the network.



This data is only written to the unit when it connects to the network, which is typically on power up. The unit can still be reconfigured at any time by writing the appropriate data to the SV160E2's output registers.

NOTE ≽

These configuration parameters cannot be changed while on line. To make any changes, you must go off line, make the changes, save the project, download it, and then go back on line.

## 6.6 Set the I/O Configuration

The SV160E2 units require 10 Input Words (20 Input Bytes) and 10 Output Words (20 Output Bytes). All required Input and Output Bytes are defined by the GSDML file and divided into suitable modules. These settings are shown in the Table T6.1.

| Input / Output Bytes of an<br>SV160E2 | Input / Output Modules of an<br>SV160E2 |
|---------------------------------------|---|
| 20 Input Bytes                        | Input Module - Slot 1: 20 bytes         |
| 20 Output Bytes                       | Output Module - Slot 2: 20 bytes        |

Table T6.1 PROFINET I/O Configuration

- 1) With the SV160x2 icon selected on the PROFINET bus, click on the "Device view" tab. The view in the Hardware Catalog will change. Expand the Module tree to show both the Input and Output modules.
- 2) To map the I/O bytes to the CPU, double click on the "20 bytes IN" and "20 bytes OUT" icons in the Hardware Catalog. The system will automatically assign the next I and Q addresses to the data table.

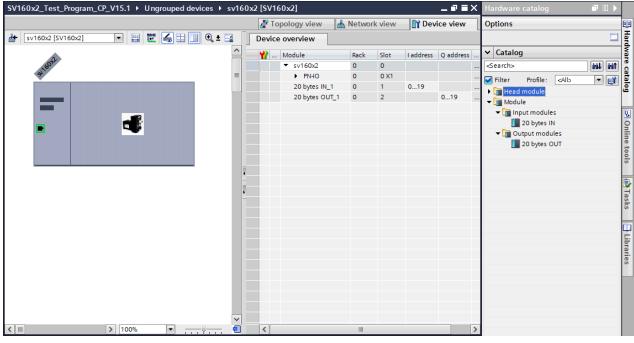


Figure T6.5 I/O Byte Mapping

#### 6.7 Set the SV160E2 Device Name

- 1) Right click on the SV160E2 icon and select "Assign device name" from the resulting popup menu.
- 2) In the "Assign PROFINET device name." windows that appears, click on the [Update list] button.
- 3) Once the SV160E2 appears in the table, select the SV160E2 in the table.
- 4) Confirm that the "PROFINET device name:" at the top of the screen is correct.
- 5) Click on the [Assign name] button to write the device name to the SV160E2. The "Online status information:" table at the bottom of the screen will show that the name was successfully assigned to the MAC address of the SV160E2.

| Assign PROFINET device   | name.            |                     |            |                       |                       | ×           |
|--|------------------|---------------------|------------|-----------------------|-----------------------|-------------|
|  |                  | Configured PRO      | FINET de   | vice                  |                       |             |
|  |                  |                     | e name:    | sv160x2               |                       | •           |
|  |                  | Dev                 | vice type: | SV160x2               |                       |             |
|  |                  | Online access       |            |                       |                       |             |
|  |                  | Type of the PG/PC i | nterface:  | PN/IE                 |                       | •           |
|  |                  | PG/PC i             | nterface:  | Intel(R) Gigabit C    | T Desktop Adapter     | -           |
|  |                  |                     |            |                       |                       |             |
|  |                  | Device filter       |            |                       |                       |             |
|  |                  | 🛃 Only show         | devices of | the same type         |                       |             |
|  |                  | Only show           | devices wi | th bad parameter sett | ings                  |             |
|  |                  | Only show           | devices wi | thout names           |                       |             |
|  | Assessible devic | es in the network:  |            |                       |                       |             |
|  | IP address       | MAC address         | Device     | PROFINET device na    | ime Status            |             |
|  | 192.168.0.50     | C8-8E-D1-B1-15-69   | AMCI       | sv160x2               | 🗸 ок                  |             |
|  | 3                |                     |            |                       |                       |             |
|  |                  |                     |            |                       |                       |             |
|  |                  |                     |            |                       |                       |             |
| Flash LED  |                  |                     |            |                       |                       |             |
|  | <                |                     |            |                       |                       | >           |
|  |                  |                     |            | 2 🗆                   | Update list           | Assign name |
|  |                  |                     |            |                       |                       | <b>V</b>    |
|  |                  |                     |            |                       |                       |             |
| Online status information:   |                  |                     |            |                       |                       |             |
| <ul> <li>Search completed.</li> <li>The PROFINET device</li> </ul> |                  |                     | igned to M | AC address "C8-8E-D1- | B1-15-69". <b>(5)</b> |             |
|  |                  |                     |            |                       |                       |             |
| <  |                  |                     |            |                       |                       | >           |
|  |                  |                     |            |                       |                       |             |
|  |                  |                     |            |                       |                       |             |
|  |                  |                     |            |                       |                       | Close       |
|  |                  |                     | _          |                       |                       |             |

Figure T6.6 Setting SV160E2 Device Name

## 6.8 Verify and Download the New Configuration

- 1) Continue by adding any remaining devices to your PROFINET network.
- 2) Compile and download the project to the CPU.

#### **MRP** Installations

At this point, the SV160E2 is configured and ready to use. If you are using the unit in a redundant, ring based, network that uses the Media Redundancy Protocol (MRP), continue with the following instructions.

Media Redundancy Protocol (MRP) installations require that the SV160E2 be installed in a ring topology. In these applications, both Ethernet ports are used when wiring the ring, daisy chaining from one unit in the ring to the next. The section below covers typical software configuration that must also be completed.

#### 6.9 Configure the SV160E2 as an MRC

The SV160E2 functions as a Media Redundancy Client (MRC) in an MRP network.

- 1) Switch to Topology view and drag the additional connections between the appropriate ports.
- 2) Click on the SV160x2 icon to select it. In the Inspector window, select *Advanced options* +> *Media redundancy*. Use the "MRP domain:" drop down menu to select the appropriate domain. Use the "Media redundancy role:" drop down menu to select "Client".
- 3) Continuing in the Inspector window, select *Advanced options* +> *Port 1* +> *Port interconnection*. Under "Partner port:", the partner port you assigned to the port when you drew the topology is shown. If you do not know which port will be the partner port in the actual installation, you can use the drop down menu to select "Any partner".

| SV160x2_Test_Program | _CP_V15.1 → Devices             | s & networks  |  |            |        |            |   |          | -              |        |
|----------------------|---------------------------------|---|--|------------|--------|------------|---|----------|----------------|--------|
|                      |                                 |   |  |            | 📲 Торо | logy viev  | V 🔥 Networ  | k view   | Device         | e view |
| 🕎 🕂 🗄 🛄 🔍 t          |                                 |   |  |            |        | Topol      | ogy overview  | Topol    | ogy compa      | arison |
| CPU<br>CPU 1215FC    | SV160x2_Axis1<br>SV160x2<br>CPU |   | <b>sv160x2_Axis2</b><br>SV160x2<br><u>CFU</u>  |            |        | •          | evice / port<br>S7-1200 station<br>GSD device_1<br>Sv160x2_Axit<br>GSD device_2<br>Sv160x2_Axit<br>SCALANCE XB-20 | s1<br>s2 | Slot<br>0<br>0 | Partne |
| Switch 1             |                                 |   |  |            |        |            |   |          |                |        |
| SCALANCE XB208       |                                 |   |  |            |        |            |   |          |                |        |
| SCALANCE XB208       |                                 | >   | 100%   | <b>•</b>   | ×      | <          |   |          |                |        |
| SCALANCE XB208       |                                 | >   | 100%   | <b>•</b>   |        | < pperties | Info  | 🖫 Diagno | ostics         |        |
| SCALANCE XB208       | System constants                | Texts   | 100%   | <b>•</b>   |        |            |   | Diagno   | ostics         |        |
| SCALANCE XB208       | System constants                | Texts   | 100%   | <b>•</b>   |        |            |   | Diagno   | ostics         |        |
| SCALANCE XB208       |                                 | Texts   | ] 100%   | <b>V</b>   |        |            |   | U Diagno | ostics         |        |
| SCALANCE XB208       |                                 | Texts   |  | <b>▼</b>   |        |            |   | 🗓 Diagno | ostics         |        |
| SCALANCE XB208       | > Media red                     | Texts   | mrpdomain-1  |            |        |            |   | U Diagno | ostics         |        |
| SCALANCE XB208       | > Media red                     | Texts<br>lundancy<br>MRP domain<br>dia redundancy role:                 | mrpdomain-1<br>Client  |            |        |            |   | U Diagno | ostics         |        |
| SCALANCE XB208       | > Media red                     | Texts<br>lundancy<br>MRP domain<br>dia redundancy role:<br>Ring port 1: | mrpdomain-1<br>Client<br>PN-IO [X1]/Port 1 [X1 P1 F  | ۱ <u>۰</u> |        |            |   | V Diagno | ostics         |        |
| SCALANCE XB208       | > Media red                     | Texts<br>lundancy<br>MRP domain<br>dia redundancy role:<br>Ring port 1: | mrpdomain-1           Client           PN40 [X1]/Port 1 [X1 P1 F           PN40 [X1]/Port 2 [X1 P2 F | 2 <u>1</u> |        |            |   | V Diagno | postics        |        |
| SCALANCE XB208       | > Media red                     | Texts<br>lundancy<br>MRP domain<br>dia redundancy role:<br>Ring port 1: | mrpdomain-1<br>Client<br>PN-IO [X1]/Port 1 [X1 P1 F  | 2 <u>1</u> |        |            |   | Lagne    | postics        |        |
| SCALANCE XB208       | > Media red                     | Texts<br>lundancy<br>MRP domain<br>dia redundancy role:<br>Ring port 1: | mrpdomain-1           Client           PN40 [X1]/Port 1 [X1 P1 F           PN40 [X1]/Port 2 [X1 P2 F | 2 <u>1</u> |        |            |   | 9 Diagno | ostics         |        |

4) If need be, repeat step 3 for Port 2 of the SV160E2.

- Figure T6.7 MRP Topology and Client Settings
- 5) Continue configuring the rest of the devices on the network before compiling the project and downloading it to the CPU.



LEADERS IN ADVANCED CONTROL PRODUCTS